




TivaWare™ Sensor Library

USER'S GUIDE

Literature Number: SPMU371E
May 2015 - Revised April 2020

Copyright

Copyright © 2013-2020 Texas Instruments Incorporated. All rights reserved. Tiva, TivaWare, Code Composer Studio are trademarks of Texas Instruments. Arm, Cortex, Thumb are registered trademarks of Arm Limited. All other trademarks are the property of their respective owners.

 Please be aware that an important notice concerning availability, standard warranty, and use in critical applications of Texas Instruments semiconductor products and disclaimers thereto appears at the end of this document.

Texas Instruments
108 Wild Basin, Suite 350
Austin, TX 78746
www.ti.com/tiva-c



Revision Information

This is version 2.2.0.295 of this document, last updated on April 02, 2020.

Table of Contents

Copyright	2
Revision Information	2
1 Introduction	5
1.1 Units	5
1.2 Structure	6
1.3 Resources	7
2 AK8963 Magnetometer Driver	9
2.1 Introduction	9
2.2 API Functions	9
2.3 Programming Example	14
3 AK8975 Magnetometer Driver	17
3.1 Introduction	17
3.2 API Functions	17
3.3 Programming Example	22
4 BMP180 Barometer Driver	25
4.1 Introduction	25
4.2 API Functions	25
4.3 Programming Example	30
5 BQ27510 Fuel Gauge Driver	33
5.1 Introduction	33
5.2 API Functions	33
5.3 Programming Example	50
6 CM3218 Ambient Light Sensor Driver	53
6.1 Introduction	53
6.2 API Functions	53
6.3 Programming Example	57
7 Complementary Filter DCM Module	59
7.1 Introduction	59
7.2 API Functions	59
7.3 Programming Example	64
8 I2C Master Driver	67
8.1 Introduction	67
8.2 API Functions	68
8.3 Programming Example	79
9 ISL29023 Ambient Light Sensor Driver	83
9.1 Introduction	83
9.2 API Functions	83
9.3 Programming Example	88
10 Magnetometer Module	91
10.1 Introduction	91
10.2 API Functions	91
10.3 Programming Example	93
11 L3GD20H Gyroscope Driver	95
11.1 Introduction	95
11.2 API Functions	95

11.3	Programming Example	99
12	LSM303D Accelerometer and Magnetometer Driver	103
12.1	Introduction	103
12.2	API Functions	103
12.3	Programming Example	103
13	LSM303DLHCAccel Accelerometer Driver	105
13.1	Introduction	105
13.2	API Functions	105
13.3	Programming Example	105
14	LSM303DLHCMag Magnetometer Driver	107
14.1	Introduction	107
14.2	API Functions	107
14.3	Programming Example	107
15	MPU6050 Accelerometer and Gyroscope Driver	109
15.1	Introduction	109
15.2	API Functions	109
15.3	Programming Example	114
16	MPU9150 Accelerometer, Gyroscope, and Magnetometer Driver	117
16.1	Introduction	117
16.2	API Functions	117
16.3	Programming Example	124
17	Quaternion Math Module	127
17.1	Introduction	127
17.2	API Functions	127
17.3	Programming Example	129
18	SHT21 Humidity and Temperature Sensor Driver	131
18.1	Introduction	131
18.2	API Functions	131
18.3	Programming Example	136
19	TMP006 Temperature Sensor Driver	139
19.1	Introduction	139
19.2	API Functions	139
19.3	Programming Example	143
20	TMP100 Temperature Sensor Driver	147
20.1	Introduction	147
20.2	API Functions	147
20.3	Programming Example	151
21	Vector Math Module	153
21.1	Introduction	153
21.2	API Functions	153
21.3	Programming Example	155
	IMPORTANT NOTICE	156

1 Introduction

Units	5
Structure	6
Resources	7

The Texas Instruments® Sensor Library is a collection of functions and drivers for interacting with environmental sensors, such as accelerometers, gyroscopes, magnetometers, and so on. These sensors provide information about the environment in which the board is situated, allowing the application to make decisions based on its surroundings.

The Sensor Library consists of the following components:

- An interrupt-driven I2C master driver that handles the sequence of operations required to perform an I2C transfer, as well as provides a request queue to ease sharing of the I2C bus between multiple drivers.
- A set of drivers for I2C connected sensors.
- A set of routines for performing common, sensor-independent operations on sensor data.

The sensor drivers perform the minimal operations required to put the sensor into a sampling mode in its default configuration. Applications can write the data registers of the sensor to configure it into a different mode, such as changing the sampling rate, adjusting data filters, and so on, in order to tailor the sensor's output to match the application's requirements.

Consult the table of contents for a list of sensors supported by the Sensor Library.

1.1 Units

The Sensor Library uses the International System of Units (SI) to represent quantities that are measured by sensors or derived from data obtained by sensors. This system is based on the meter-kilogram-second system, meaning that the fundamental measures are the meter for lengths, the kilogram for weights, and the second for time.

The following table lists the various measurement quantities used by the Sensor Library:

Quantity	Symbol	Description
Length	m	Lengths and distances are measured in meters. Example applications are proximity sensors that measure the distance to an object or the output of a navigation system that tracks a position over time.
Speed	m/s	Speed is measured in meters per second. Example applications are the speed output of a GPS unit or the output of a navigation system that tracks speed over time.
Acceleration	m/s ²	Acceleration is measured in meters per second squared. Example applications are the output of an accelerometer or the output of a navigation system that tracks acceleration over time.

Quantity	Symbol	Description
Rotation Rate	rad/s	The rate of rotation is measured in radians per second. An example application is the output of a gyroscope.
Magnetic field	T	The strength of a magnetic field is measured in teslas. An example application is the output of a magnetometer.
Temperature	C	Temperature is measured in degrees Celsius. An example application is the output of a temperature sensor.
Pressure	Pa	Pressure is measured in pascals. An example application is the output of a barometric pressure sensor.
Illuminance	lx	Illuminance is measured in lux. An example application is the output of an ambient light sensor.
Relative humidity	-	Relative humidity is a unit-less quantity between 0 and 1. An example application is the output of a humidity sensor.

The driver for any sensor that measures one of these quantities converts its sensor output to the associated unit. This protocol allows an application to easily switch from one sensor to another, such as from an accelerometer from one manufacturer to one from another manufacturer, without having to adjust for a different set of units chosen by the device manufacturer. It also allows measurements from multiple sensors, such as temperature, to be easily used because they are always reported in the same units.

1.2 Structure

The components of the Sensor Library are arranged into three layers; the transport layer, the sensor layer, and the processing layer. Each layer uses a different level of abstraction of the sensor data.

At the lowest level is the transport layer, which deals with moving data into and out of the sensors. These transactions consist of a sequence of bytes with no structure or meaning; the transport layer simply moves the bytes into or out of the sensor without any comprehension of what the bytes mean. The I2C master driver is an example of a transport layer driver.

The next level up is the sensor layer, which deals with interpreting data from a sensor. A transport layer driver is used to communicate with the sensor, and the sensor layer driver provides interpretation of the data and conversion into the appropriate standard unit. The TMP006 temperature sensor driver is an example of a sensor layer driver.

The highest level is the processing layer, which deals with sensor data after it has been converted into a standard unit and is therefore sensor agnostic. This layer consists of things like magnetometer compensation algorithms (that correct distortion in magnetometer readings) and attitude estimation algorithms (that combine readings from multiple sensors to determine the orientation of the sensor platform).

Applications can directly use any of the three layers, and can also choose to not use one or more of the layers. For example, an application can use the sensor and transport layers to gather sensor readings and process those readings without the use of the modules in the processing layer. As another example, an application could gather sensor readings via other means and use the processing layer to process the data. The only layer dependency is that the drivers in the sensor layer use a driver from the transport layer to communicate with the sensor.

1.3 Resources

The following is a list of references to articles and papers on the web that can provide a better understand of the sensors and algorithms used within the Sensor Library.

■ International System of Units

en.wikipedia.org/wiki/International_System_of_Units

This page describes the origin and derivation of the SI units that are used by the Sensor Library. It also includes links to other articles that discuss specific units.

■ Euclidean Vectors

http://en.wikipedia.org/wiki/Euclidean_vector

This page describes Euclidean vectors and their use in mathematics.

■ Rotations

<http://en.wikipedia.org/wiki/Rotation>

http://en.wikipedia.org/wiki/Rotation_formalisms_in_three_dimensions

These pages describe the mathematics of rotations and their application in three-dimensional space.

■ Accelerometer

en.wikipedia.org/wiki/Accelerometer

This page describes accelerometers, what they measure, how they work, and so on.

■ Gyroscope

en.wikipedia.org/wiki/Gyroscope

This page describes gyroscopes, what they measure, how they work, and so on.

■ Magnetometer

en.wikipedia.org/wiki/Magnetometer

This page describes magnetometers, what they measure, how they work, and so on.

■ Hygrometer

en.wikipedia.org/wiki/Hygrometer

This page describes hygrometers, what they measure, how they work, and so on.

■ Barometer

en.wikipedia.org/wiki/Barometer

This page describes barometers, what they measure, how they work, and so on.

■ Thermometer

en.wikipedia.org/wiki/Thermometer

This page describes thermometers, what they measure, how they work, and so on.

■ DCM Tutorial - An Introduction to Orientation Kinematics

Starlino Electronics

www.starlino.com/wp-content/uploads/data/dcm_tutorial/

[Starlino_DCM_Tutorial_01.pdf](#)

This paper describes the fundamentals of the Direction Cosine Matrix (DCM), how it is used to determine orientation, and how to update the DCM based on sensor readings. The complementary filter DCM algorithm in the Sensor Library is based upon this paper.

■ **Computing Euler Angles from Direction Cosines**

William Premerlani

gentlenav.googlecode.com/files/EulerAngles.pdf

This paper describes how to compute Euler angles from a DCM.

■ **Introduction into quaternions for spacecraft attitude representation**

Dipl. -Ing. Karsten Großekathöfer, Dr. -Ing. Zizung Yoon, Technical University of Berlin

www.tu-berlin.de/fileadmin/fg169/miscellaneous/Quaternions.pdf

This paper describes quaternions, their relationship to Euler angles and the DCM, and how to compute a quaternion from a DCM.

■ **Compensating for Tilt, Hard Iron and Soft Iron Effects**

Christopher Konvalin, Memsense

memsense.com/docs/MTD-0802_1.2_Magnetometer_Calibration.pdf

This paper describes the effect of iron in the environment on magnetometer readings and how to compensate for those effects.

■ **Applications of Magnetoresistive Sensors in Navigation Systems**

Michael J. Caruso, Honeywell Inc.

www51.honeywell.com/aero/common/documents/

[myaerospacecatalog-documents/Defense_Brochures-documents/](http://www51.honeywell.com/aero/common/documents/myaerospacecatalog-documents/Defense_Brochures-documents/)

[Magnetic__Literature_Technical_Article-documents/](http://www51.honeywell.com/aero/common/documents/Magnetic__Literature_Technical_Article-documents/)

[Applications_of_Magnetoresistive_Sensors_in_Navigation_Systems.pdf](http://www51.honeywell.com/aero/common/documents/Applications_of_Magnetoresistive_Sensors_in_Navigation_Systems.pdf)

This paper describes how to combine tilt (roll/pitch) information from an accelerometer with magnetometer readings in order to compute a magnetic bearing.

2 AK8963 Magnetometer Driver

Introduction	9
API Functions	9
Programming Example	14

2.1 Introduction

The AK8963 is a three-axis magnetometer produced by Asahi Kasei Microdevices Corporation. This driver allows the AK8963 to be accessed via the I2C bus.

This driver is contained in `sensorlib/ak8963.c`, with `sensorlib/ak8963.h` containing the API declarations for use by applications.

2.2 API Functions

Functions

- void [AK8963DataGetStatus](#) (tAK8963 *psInst, uint_fast8_t *pui8Status1, uint_fast8_t *pui8Status2)
- void [AK8963DataMagnetoeGetFloat](#) (tAK8963 *psInst, float *pfMagnetoeX, float *pfMagnetoeY, float *pfMagnetoeZ)
- void [AK8963DataMagnetoeGetRaw](#) (tAK8963 *psInst, uint_fast16_t *pui16MagnetoeX, uint_fast16_t *pui16MagnetoeY, uint_fast16_t *pui16MagnetoeZ)
- uint_fast8_t [AK8963DataRead](#) (tAK8963 *psInst, tSensorCallback *pfCallback, void *pvCallbackData)
- uint_fast8_t [AK8963Init](#) (tAK8963 *psInst, tI2CInstance *psI2CInst, uint_fast8_t ui8I2CAddr, tSensorCallback *pfCallback, void *pvCallbackData)
- uint_fast8_t [AK8963Read](#) (tAK8963 *psInst, uint_fast8_t ui8Reg, uint8_t *pui8Data, uint_fast16_t ui16Count, tSensorCallback *pfCallback, void *pvCallbackData)
- uint_fast8_t [AK8963ReadModifyWrite](#) (tAK8963 *psInst, uint_fast8_t ui8Reg, uint_fast8_t ui8Mask, uint_fast8_t ui8Value, tSensorCallback *pfCallback, void *pvCallbackData)
- uint_fast8_t [AK8963Write](#) (tAK8963 *psInst, uint_fast8_t ui8Reg, const uint8_t *pui8Data, uint_fast16_t ui16Count, tSensorCallback *pfCallback, void *pvCallbackData)

2.2.1 Function Documentation

2.2.1.1 AK8963DataGetStatus

Gets the status registers from the most recent data read.

Prototype:

```
void
AK8963DataGetStatus (tAK8963 *psInst,
```

```
uint_fast8_t *pui8Status1,  
uint_fast8_t *pui8Status2)
```

Parameters:

psInst is a pointer to the AK8963 instance data.

pui8Status1 is a pointer to the value into which the ST1 data is stored.

pui8Status2 is a pointer to the value into which the ST2 data is stored.

Description:

This function returns the magnetometer status registers from the most recent data read. If any of the output data pointers are **NULL**, the corresponding data is not be provided.

Note that the AKM comp routines require ST1 and ST2, so we read them for that reason.

Returns:

None.

2.2.1.2 AK8963DataMagnetGetFloat

Gets the magnetometer data from the most recent data read.

Prototype:

```
void  
AK8963DataMagnetGetFloat (tAK8963 *psInst,  
                           float *pfMagnetX,  
                           float *pfMagnetY,  
                           float *pfMagnetZ)
```

Parameters:

psInst is a pointer to the AK8963 instance data.

pfMagnetX is a pointer to the value into which the X-axis magnetometer data is stored.

pfMagnetY is a pointer to the value into which the Y-axis magnetometer data is stored.

pfMagnetZ is a pointer to the value into which the Z-axis magnetometer data is stored.

Description:

This function returns the magnetometer data from the most recent data read, converted into tesla. If any of the output data pointers are **NULL**, the corresponding data is not provided.

Returns:

None.

2.2.1.3 AK8963DataMagnetGetRaw

Gets the raw magnetometer data from the most recent data read.

Prototype:

```
void  
AK8963DataMagnetGetRaw (tAK8963 *psInst,  
                         uint_fast16_t *pui16MagnetX,  
                         uint_fast16_t *pui16MagnetY,  
                         uint_fast16_t *pui16MagnetZ)
```

Parameters:

psInst is a pointer to the AK8963 instance data.

pui16MagnetoX is a pointer to the value into which the raw X-axis magnetometer data is stored.

pui16MagnetoY is a pointer to the value into which the raw Y-axis magnetometer data is stored.

pui16MagnetoZ is a pointer to the value into which the raw Z-axis magnetometer data is stored.

Description:

This function returns the raw magnetometer data from the most recent data read. The data is not manipulated in any way by the driver. If any of the output data pointers are **NULL**, the corresponding data is not provided.

Returns:

None.

2.2.1.4 AK8963DataRead

Reads the magnetometer data from the AK8963.

Prototype:

```
uint_fast8_t
AK8963DataRead(tAK8963 *psInst,
               tSensorCallback *pfnCallback,
               void *pvCallbackData)
```

Parameters:

psInst is a pointer to the AK8963 instance data.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a read of the AK8963 data registers. When the read has completed (as indicated by calling the callback function), the new readings can be obtained via:

- [AK8963DataMagnetoGetRaw\(\)](#)
- [AK8963DataMagnetoGetFloat\(\)](#)

Returns:

Returns 1 if the read was successfully started and 0 if it was not.

2.2.1.5 AK8963Init

Initializes the AK8963 driver.

Prototype:

```
uint_fast8_t
AK8963Init(tAK8963 *psInst,
```

```
tI2CInstance *psI2CInst,  
uint_fast8_t ui8I2CAddr,  
tSensorCallback *pfnCallback,  
void *pvCallbackData)
```

Parameters:

psInst is a pointer to the AK8963 instance data.

psI2CInst is a pointer to the I2C master driver instance data.

ui8I2CAddr is the I2C address of the AK8963 device.

pfnCallback is the function to be called when the initialization has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initializes the AK8963 driver, preparing it for operation.

Returns:

Returns 1 if the AK8963 driver was successfully initialized and 0 if it was not.

2.2.1.6 AK8963Read

Reads data from AK8963 registers.

Prototype:

```
uint_fast8_t  
AK8963Read(tAK8963 *psInst,  
           uint_fast8_t ui8Reg,  
           uint8_t *pui8Data,  
           uint_fast16_t ui16Count,  
           tSensorCallback *pfnCallback,  
           void *pvCallbackData)
```

Parameters:

psInst is a pointer to the AK8963 instance data.

ui8Reg is the first register to read.

pui8Data is a pointer to the location to store the data that is read.

ui16Count is the number of data bytes to read.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function reads a sequence of data values from consecutive registers in the AK8963.

Returns:

Returns 1 if the read was successfully started and 0 if it was not.

2.2.1.7 AK8963ReadModifyWrite

Performs a read-modify-write of an AK8963 register.

Prototype:

```
uint_fast8_t
AK8963ReadModifyWrite(tAK8963 *psInst,
                      uint_fast8_t ui8Reg,
                      uint_fast8_t ui8Mask,
                      uint_fast8_t ui8Value,
                      tSensorCallback *pfnCallback,
                      void *pvCallbackData)
```

Parameters:

psInst is a pointer to the AK8963 instance data.

ui8Reg is the register to modify.

ui8Mask is the bit mask that is ANDed with the current register value.

ui8Value is the bit mask that is ORed with the result of the AND operation.

pfnCallback is the function to be called when the data has been changed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function changes the value of a register in the AK8963 via a read-modify-write operation, allowing one of the fields to be changed without disturbing the other fields. The *ui8Reg* register is read, ANDed with *ui8Mask*, ORed with *ui8Value*, and then written back to the AK8963.

Returns:

Returns 1 if the read-modify-write was successfully started and 0 if it was not.

2.2.1.8 AK8963Write

Writes data to AK8963 registers.

Prototype:

```
uint_fast8_t
AK8963Write(tAK8963 *psInst,
            uint_fast8_t ui8Reg,
            const uint8_t *pui8Data,
            uint_fast16_t ui16Count,
            tSensorCallback *pfnCallback,
            void *pvCallbackData)
```

Parameters:

psInst is a pointer to the AK8963 instance data.

ui8Reg is the first register to write.

pui8Data is a pointer to the data to write.

ui16Count is the number of data bytes to write.

pfnCallback is the function to be called when the data has been written (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function writes a sequence of data values to consecutive registers in the AK8963. The first byte of the *pui8Data* buffer contains the value to be written into the *ui8Reg* register, the second value contains the data to be written into the next register, and so on.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

2.3 Programming Example

The following example shows how to initialize the AK8963 and read magnetic field data from it.

```
//
// A boolean that is set when a AK8963 command has completed.
//
volatile bool g_bAK8963Done;

//
// The function that is provided by this example as a callback when AK8963
// transactions have completed.
//
void
AK8963Callback(void *pvCallbackData, uint_fast8_t ui8Status)
{
    //
    // See if an error occurred.
    //
    if(ui8Status != I2CM_STATUS_SUCCESS)
    {
        //
        // An error occurred, so handle it here if required.
        //
    }

    //
    // Indicate that the AK8963 transaction has completed.
    //
    g_bAK8963Done = true;
}

//
// The AK8963 example.
//
void
AK8963Example(void)
{
    float fAccel[3], fGyro[3], fMagneto[3];
    tI2CMInstance sI2CInst;
    tAK8963 sAK8963;

    //
    // Initialize the AK8963. This code assumes that the I2C master instance
    // has already been initialized.
    //
    g_bAK8963Done = false;
    AK8963Init(&sAK8963, &sI2CInst, 0x0c, AK8963Callback, 0);
    while(!g_bAK8963Done)
    {
```

```
}

//
// Loop forever reading data from the AK8963. Typically, this process
// would be done in the background, but for the purposes of this example,
// it is shown in an infinite loop.
//
while(1)
{
    //
    // Tell the AK8963 to capture another sample.
    //
    g_bAK8963Done = false;
    AK8963ReadModifyWrite(&sAK8963, AK8963_O_CNTL, 0,
                          AK8963_CNTL_MODE_SINGLE, AK8963Callback, 0);
    while(!g_bAK8963Done)
    {
    }

    //
    // Wait while the sample is being acquired.
    //

    //
    // Read the data from the AK8963.
    //
    g_bAK8963Done = false;
    AK8963DataRead(&sAK8963, AK8963Callback, 0);
    while(!g_bAK8963Done)
    {
    }

    //
    // Get the new magnetometer reading.
    //
    AK8963DataMagnetometerGetFloat(&sAK8963, &fMagnetometer[0], &fMagnetometer[1],
                                    &fMagnetometer[2]);

    //
    // Do something with the new magnetometer reading.
    //
}
}
```


3 AK8975 Magnetometer Driver

Introduction	17
API Functions	17
Programming Example	22

3.1 Introduction

The AK8975 is a three-axis magnetometer produced by Asahi Kasei Microdevices Corporation. This driver allows the AK8975 to be accessed via the I2C bus.

This driver is contained in `sensorlib/ak8975.c`, with `sensorlib/ak8975.h` containing the API declarations for use by applications.

3.2 API Functions

Functions

- void [AK8975DataGetStatus](#) (tAK8975 *psInst, uint_fast8_t *pui8Status1, uint_fast8_t *pui8Status2)
- void [AK8975DataMagnetoeGetFloat](#) (tAK8975 *psInst, float *pfMagnetoeX, float *pfMagnetoeY, float *pfMagnetoeZ)
- void [AK8975DataMagnetoeGetRaw](#) (tAK8975 *psInst, uint_fast16_t *pui16MagnetoeX, uint_fast16_t *pui16MagnetoeY, uint_fast16_t *pui16MagnetoeZ)
- uint_fast8_t [AK8975DataRead](#) (tAK8975 *psInst, tSensorCallback *pfCallback, void *pvCallbackData)
- uint_fast8_t [AK8975Init](#) (tAK8975 *psInst, tI2CInstance *psI2CInst, uint_fast8_t ui8I2CAddr, tSensorCallback *pfCallback, void *pvCallbackData)
- uint_fast8_t [AK8975Read](#) (tAK8975 *psInst, uint_fast8_t ui8Reg, uint8_t *pui8Data, uint_fast16_t ui16Count, tSensorCallback *pfCallback, void *pvCallbackData)
- uint_fast8_t [AK8975ReadModifyWrite](#) (tAK8975 *psInst, uint_fast8_t ui8Reg, uint_fast8_t ui8Mask, uint_fast8_t ui8Value, tSensorCallback *pfCallback, void *pvCallbackData)
- uint_fast8_t [AK8975Write](#) (tAK8975 *psInst, uint_fast8_t ui8Reg, uint8_t *pui8Data, uint_fast16_t ui16Count, tSensorCallback *pfCallback, void *pvCallbackData)

3.2.1 Function Documentation

3.2.1.1 AK8975DataGetStatus

Gets the status registers from the most recent data read.

Prototype:

```
void
AK8975DataGetStatus (tAK8975 *psInst,
```

```
uint_fast8_t *pui8Status1,  
uint_fast8_t *pui8Status2)
```

Parameters:

psInst is a pointer to the AK8975 instance data.

pui8Status1 is a pointer to the value into which the ST1 data is stored.

pui8Status2 is a pointer to the value into which the ST2 data is stored.

Description:

This function returns the magnetometer status registers from the most recent data read. If any of the output data pointers are **NULL**, the corresponding data is not provided.

Note that the AKM comp routines require ST1 and ST2, so we read them for that reason.

Returns:

None.

3.2.1.2 AK8975DataMagnetGetFloat

Gets the magnetometer data from the most recent data read.

Prototype:

```
void  
AK8975DataMagnetGetFloat (tAK8975 *psInst,  
                           float *pfMagnetX,  
                           float *pfMagnetY,  
                           float *pfMagnetZ)
```

Parameters:

psInst is a pointer to the AK8975 instance data.

pfMagnetX is a pointer to the value into which the X-axis magnetometer data is stored.

pfMagnetY is a pointer to the value into which the Y-axis magnetometer data is stored.

pfMagnetZ is a pointer to the value into which the Z-axis magnetometer data is stored.

Description:

This function returns the magnetometer data from the most recent data read, converted into tesla. If any of the output data pointers are **NULL**, the corresponding data is not provided.

Returns:

None.

3.2.1.3 AK8975DataMagnetGetRaw

Gets the raw magnetometer data from the most recent data read.

Prototype:

```
void  
AK8975DataMagnetGetRaw (tAK8975 *psInst,  
                        uint_fast16_t *pui16MagnetX,  
                        uint_fast16_t *pui16MagnetY,  
                        uint_fast16_t *pui16MagnetZ)
```

Parameters:

psInst is a pointer to the AK8975 instance data.

pui16MagnetoX is a pointer to the value into which the raw X-axis magnetometer data is stored.

pui16MagnetoY is a pointer to the value into which the raw Y-axis magnetometer data is stored.

pui16MagnetoZ is a pointer to the value into which the raw Z-axis magnetometer data is stored.

Description:

This function returns the raw magnetometer data from the most recent data read. The data is not manipulated in any way by the driver. If any of the output data pointers are **NULL**, the corresponding data is not provided.

Returns:

None.

3.2.1.4 AK8975DataRead

Reads the magnetometer data from the AK8975.

Prototype:

```
uint_fast8_t
AK8975DataRead(tAK8975 *psInst,
               tSensorCallback *pfnCallback,
               void *pvCallbackData)
```

Parameters:

psInst is a pointer to the AK8975 instance data.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a read of the AK8975 data registers. When the read has completed (as indicated by calling the callback function), the new readings can be obtained via:

- [AK8975DataMagnetoGetRaw\(\)](#)
- [AK8975DataMagnetoGetFloat\(\)](#)

Returns:

Returns 1 if the read was successfully started and 0 if it was not.

3.2.1.5 AK8975Init

Initializes the AK8975 driver.

Prototype:

```
uint_fast8_t
AK8975Init(tAK8975 *psInst,
```

```
tI2CInstance *psI2CInst,  
uint_fast8_t ui8I2CAddr,  
tSensorCallback *pfnCallback,  
void *pvCallbackData)
```

Parameters:

psInst is a pointer to the AK8975 instance data.

psI2CInst is a pointer to the I2C master driver instance data.

ui8I2CAddr is the I2C address of the AK8975 device.

pfnCallback is the function to be called when the initialization has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initializes the AK8975 driver, preparing it for operation.

Returns:

Returns 1 if the AK8975 driver was successfully initialized and 0 if it was not.

3.2.1.6 AK8975Read

Reads data from AK8975 registers.

Prototype:

```
uint_fast8_t  
AK8975Read(tAK8975 *psInst,  
           uint_fast8_t ui8Reg,  
           uint8_t *pui8Data,  
           uint_fast16_t ui16Count,  
           tSensorCallback *pfnCallback,  
           void *pvCallbackData)
```

Parameters:

psInst is a pointer to the AK8975 instance data.

ui8Reg is the first register to read.

pui8Data is a pointer to the location to store the data that is read.

ui16Count is the number of data bytes to read.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function reads a sequence of data values from consecutive registers in the AK8975.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

3.2.1.7 AK8975ReadModifyWrite

Performs a read-modify-write of an AK8975 register.

Prototype:

```
uint_fast8_t
AK8975ReadModifyWrite(tAK8975 *psInst,
                      uint_fast8_t ui8Reg,
                      uint_fast8_t ui8Mask,
                      uint_fast8_t ui8Value,
                      tSensorCallback *pfnCallback,
                      void *pvCallbackData)
```

Parameters:

psInst is a pointer to the AK8975 instance data.

ui8Reg is the register to modify.

ui8Mask is the bit mask that is ANDed with the current register value.

ui8Value is the bit mask that is ORed with the result of the AND operation.

pfnCallback is the function to be called when the data has been changed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function changes the value of a register in the AK8975 via a read-modify-write operation, allowing one of the fields to be changed without disturbing the other fields. The *ui8Reg* register is read, ANDed with *ui8Mask*, ORed with *ui8Value*, and then written back to the AK8975.

Returns:

Returns 1 if the read-modify-write was successfully started and 0 if it was not.

3.2.1.8 AK8975Write

Writes data to AK8975 registers.

Prototype:

```
uint_fast8_t
AK8975Write(tAK8975 *psInst,
            uint_fast8_t ui8Reg,
            uint8_t *pui8Data,
            uint_fast16_t ui16Count,
            tSensorCallback *pfnCallback,
            void *pvCallbackData)
```

Parameters:

psInst is a pointer to the AK8975 instance data.

ui8Reg is the first register to write.

pui8Data is a pointer to the data to write.

ui16Count is the number of data bytes to write.

pfnCallback is the function to be called when the data has been written (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function writes a sequence of data values to consecutive registers in the AK8975. The first byte of the *pui8Data* buffer contains the value to be written into the *ui8Reg* register, the second value contains the data to be written into the next register, and so on.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

3.3 Programming Example

The following example shows how to initialize the AK8975 and read magnetic field data from it.

```
//  
// A boolean that is set when a AK8975 command has completed.  
//  
volatile bool g_bAK8975Done;  
  
//  
// The function that is provided by this example as a callback when AK8975  
// transactions have completed.  
//  
void  
AK8975Callback(void *pvCallbackData, uint_fast8_t ui8Status)  
{  
    //  
    // See if an error occurred.  
    //  
    if(ui8Status != I2CM_STATUS_SUCCESS)  
    {  
        //  
        // An error occurred, so handle it here if required.  
        //  
    }  
  
    //  
    // Indicate that the AK8975 transaction has completed.  
    //  
    g_bAK8975Done = true;  
}  
  
//  
// The AK8975 example.  
//  
void  
AK8975Example(void)  
{  
    float fAccel[3], fGyro[3], fMagneto[3];  
    tI2CInstance sI2CInst;  
    tAK8975 sAK8975;  
  
    //  
    // Initialize the AK8975. This code assumes that the I2C master instance  
    // has already been initialized.  
    //  
    g_bAK8975Done = false;  
    AK8975Init(&sAK8975, &sI2CInst, 0x0c, AK8975Callback, 0);  
    while(!g_bAK8975Done)  
    {
```

```
    }

    //
    // Loop forever reading data from the AK8975. Typically, this process
    // would be done in the background, but for the purposes of this example,
    // it is shown in an infinite loop.
    //
    while(1)
    {
        //
        // Tell the AK8975 to capture another sample.
        //
        g_bAK8975Done = false;
        AK8975ReadModifyWrite(&sAK8975, AK8975_O_CNTL, 0,
                               AK8975_CNTL_MODE_SINGLE, AK8975Callback, 0);
        while(!g_bAK8975Done)
        {
        }

        //
        // Wait while the sample is being acquired.
        //

        //
        // Read the data from the AK8975.
        //
        g_bAK8975Done = false;
        AK8975DataRead(&sAK8975, AK8975Callback, 0);
        while(!g_bAK8975Done)
        {
        }

        //
        // Get the new magnetometer reading.
        //
        AK8975DataMagnetometerGetFloat(&sAK8975, &fMagnetometer[0], &fMagnetometer[1],
                                         &fMagnetometer[2]);

        //
        // Do something with the new magnetometer reading.
        //
    }
}
```


4 BMP180 Barometer Driver

Introduction	25
API Functions	25
Programming Example	30

4.1 Introduction

The BMP180 is a barometric pressure sensor produced by Bosch Sensortec GmbH. It measures both barometric pressure and temperature, and is capable of providing a temperature-compensated barometric pressure reading (with the compensation occurring on the host processor). This driver allows the BMP180 to be accessed via the I2C bus.

When initialized, a soft reset of the BMP180 is performed, putting it into its default state. The default oversampling rate of 1x is therefore selected.

This driver is contained in `sensorlib/bmp180.c`, with `sensorlib/bmp180.h` containing the API declarations for use by applications.

4.2 API Functions

Functions

- void [BMP180DataPressureGetFloat](#) (tBMP180 *psInst, float *pfPressure)
- void [BMP180DataPressureGetRaw](#) (tBMP180 *psInst, uint_fast32_t *pui32Pressure)
- uint_fast8_t [BMP180DataRead](#) (tBMP180 *psInst, tSensorCallback *pfnCallback, void *pvCallbackData)
- void [BMP180DataTemperatureGetFloat](#) (tBMP180 *psInst, float *pfTemperature)
- void [BMP180DataTemperatureGetRaw](#) (tBMP180 *psInst, uint_fast16_t *pui16Temperature)
- uint_fast8_t [BMP180Init](#) (tBMP180 *psInst, tI2CInstance *psI2CInst, uint_fast8_t ui8I2CAddr, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [BMP180Read](#) (tBMP180 *psInst, uint_fast8_t ui8Reg, uint8_t *pui8Data, uint_fast16_t ui16Count, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [BMP180ReadModifyWrite](#) (tBMP180 *psInst, uint_fast8_t ui8Reg, uint_fast8_t ui8Mask, uint_fast8_t ui8Value, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [BMP180Write](#) (tBMP180 *psInst, uint_fast8_t ui8Reg, uint8_t *pui8Data, uint_fast16_t ui16Count, tSensorCallback *pfnCallback, void *pvCallbackData)

4.2.1 Function Documentation

4.2.1.1 BMP180DataPressureGetFloat

Gets the pressure data from the most recent data read.

Prototype:

```
void  
BMP180DataPressureGetFloat (tBMP180 *psInst,  
                             float *pfPressure)
```

Parameters:

psInst is a pointer to the BMP180 instance data.

pfPressure is a pointer to the value into which the pressure data is stored.

Description:

This function returns the pressure data from the most recent data read, converted into pascals.

Returns:

None.

4.2.1.2 BMP180DataPressureGetRaw

Gets the raw pressure data from the most recent data read.

Prototype:

```
void  
BMP180DataPressureGetRaw (tBMP180 *psInst,  
                           uint_fast32_t *pui32Pressure)
```

Parameters:

psInst is a pointer to the BMP180 instance data.

pui32Pressure is a pointer to the value into which the raw pressure data is stored.

Description:

This function returns the raw pressure data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

4.2.1.3 BMP180DataRead

Reads the pressure data from the BMP180.

Prototype:

```
uint_fast8_t  
BMP180DataRead (tBMP180 *psInst,  
                 tSensorCallback *pfnCallback,  
                 void *pvCallbackData)
```

Parameters:

psInst is a pointer to the BMP180 instance data.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a read of the BMP180 data registers. When the read has completed (as indicated by calling the callback function), the new temperature and pressure readings can be obtained via:

- [BMP180DataPressureGetRaw\(\)](#)
- [BMP180DataPressureGetFloat\(\)](#)
- [BMP180DataTemperatureGetRaw\(\)](#)
- [BMP180DataTemperatureGetFloat\(\)](#)

Returns:

Returns 1 if the read was successfully started and 0 if it was not.

4.2.1.4 BMP180DataTemperatureGetFloat

Gets the temperature data from the most recent data read.

Prototype:

```
void  
BMP180DataTemperatureGetFloat (tBMP180 *psInst,  
                                float *pfTemperature)
```

Parameters:

psInst is a pointer to the BMP180 instance data.

pfTemperature is a pointer to the value into which the temperature data is stored.

Description:

This function returns the temperature data from the most recent data read, converted into Celsius.

Returns:

None.

4.2.1.5 BMP180DataTemperatureGetRaw

Gets the raw temperature data from the most recent data read.

Prototype:

```
void  
BMP180DataTemperatureGetRaw (tBMP180 *psInst,  
                              uint_fast16_t *pui16Temperature)
```

Parameters:

psInst is a pointer to the BMP180 instance data.

pui16Temperature is a pointer to the value into which the raw temperature data is stored.

Description:

This function returns the raw temperature data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

4.2.1.6 BMP180Init

Initializes the BMP180 driver.

Prototype:

```
uint_fast8_t
BMP180Init (tBMP180 *psInst,
            tI2CInstance *psI2CInst,
            uint_fast8_t ui8I2CAddr,
            tSensorCallback *pfnCallback,
            void *pvCallbackData)
```

Parameters:

psInst is a pointer to the BMP180 instance data.

psI2CInst is a pointer to the I2C master driver instance data.

ui8I2CAddr is the I2C address of the BMP180 device.

pfnCallback is the function to be called when the initialization has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initializes the BMP180 driver, preparing it for operation.

Returns:

Returns 1 if the BMP180 driver was successfully initialized and 0 if it was not.

4.2.1.7 BMP180Read

Reads data from BMP180 registers.

Prototype:

```
uint_fast8_t
BMP180Read (tBMP180 *psInst,
            uint_fast8_t ui8Reg,
            uint8_t *pui8Data,
            uint_fast16_t ui16Count,
            tSensorCallback *pfnCallback,
            void *pvCallbackData)
```

Parameters:

psInst is a pointer to the BMP180 instance data.

ui8Reg is the first register to read.

pui8Data is a pointer to the location to store the data that is read.

ui16Count is the number of data bytes to read.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function reads a sequence of data values from consecutive registers in the BMP180.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

4.2.1.8 BMP180ReadModifyWrite

Performs a read-modify-write of a BMP180 register.

Prototype:

```
uint_fast8_t
BMP180ReadModifyWrite(tBMP180 *psInst,
                      uint_fast8_t ui8Reg,
                      uint_fast8_t ui8Mask,
                      uint_fast8_t ui8Value,
                      tSensorCallback *pfnCallback,
                      void *pvCallbackData)
```

Parameters:

psInst is a pointer to the BMP180 instance data.

ui8Reg is the register to modify.

ui8Mask is the bit mask that is ANDed with the current register value.

ui8Value is the bit mask that is ORed with the result of the AND operation.

pfnCallback is the function to be called when the data has been changed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function changes the value of a register in the BMP180 via a read-modify-write operation, allowing one of the fields to be changed without disturbing the other fields. The *ui8Reg* register is read, ANDed with *ui8Mask*, ORed with *ui8Value*, and then written back to the BMP180.

Returns:

Returns 1 if the read-modify-write was successfully started and 0 if it was not.

4.2.1.9 BMP180Write

Writes data to BMP180 registers.

Prototype:

```
uint_fast8_t
BMP180Write(tBMP180 *psInst,
            uint_fast8_t ui8Reg,
            uint8_t *pui8Data,
            uint_fast16_t ui16Count,
            tSensorCallback *pfnCallback,
            void *pvCallbackData)
```

Parameters:

psInst is a pointer to the BMP180 instance data.

ui8Reg is the first register to write.

pui8Data is a pointer to the data to write.

ui16Count is the number of data bytes to write.

pfnCallback is the function to be called when the data has been written (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function writes a sequence of data values to consecutive registers in the BMP180. The first byte of the *pui8Data* buffer contains the value to be written into the *ui8Reg* register, the second value contains the data to be written into the next register, and so on.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

4.3 Programming Example

The following example shows how to initialize the BMP180, select 2x oversampling, and read pressure and temperature data from it.

```
//
// A boolean that is set when a BMP180 command has completed.
//
volatile bool g_bBMP180Done;

//
// The function that is provided by this example as a callback when BMP180
// transactions have completed.
//
void
BMP180Callback(void *pvCallbackData, uint_fast8_t ui8Status)
{
    //
    // See if an error occurred.
    //
    if(ui8Status != I2CM_STATUS_SUCCESS)
    {
        //
        // An error occurred, so handle it here if required.
        //
    }

    //
    // Indicate that the BMP180 transaction has completed.
    //
    g_bBMP180Done = true;
}

//
// The BMP180 example.
//
void
BMP180Example(void)
{
    float fTemperature, fPressure;
    tI2CMInstance sI2CInst;
    tBMP180 sBMP180;

    //
    // Initialize the BMP180. This code assumes that the I2C master instance
```

```
// has already been initialized.
//
g_bBMP180Done = false;
BMP180Init(&sBMP180, &sI2CInst, 0x77, BMP180Callback, 0);
while(!g_bBMP180Done)
{
}

//
// Configure the BMP180 for 2x oversampling.
//
g_bBMP180Done = false;
BMP180ReadModifyWrite(&sBMP180, BMP180_O_CTRL_MEAS,
                      ~BMP180_CTRL_MEAS_OSS_M, BMP180_CTRL_MEAS_OSS_2,
                      BMP180Callback, 0);
while(!g_bBMP180Done)
{
}

//
// Loop forever reading data from the BMP180. Typically, this process
// would be done in the background, but for the purposes of this example,
// it is shown in an infinite loop.
//
while(1)
{
    //
    // Request another reading from the BMP180.
    //
    g_bBMP180Done = false;
    BMP180DataRead(&sBMP180, BMP180Callback, 0);
    while(!g_bBMP180Done)
    {
    }

    //
    // Get the new pressure and temperature reading.
    //
    BMP180DataPressureGetFloat(&sBMP180, &fPressure);
    BMP180DataTemperatureGetFloat(&sBMP180, &fTemperature);

    //
    // Do something with the new pressure and temperature readings.
    //
}
}
```


5 BQ27510 Fuel Gauge Driver

Introduction	33
API Functions	33
Programming Example	50

5.1 Introduction

The BQ27510G3 is a system side impedance-track fuel gauge with direct battery connection produced by Texas Instruments. It monitors and measures battery state of charge, health, voltage, current and many other parameters. This driver allows the BQ27510G3 to be accessed via the I2C bus.

When initialized the device is assumed to be in its default state and has had the data flash previously programmed with parameters specific to the battery attached. Data Flash programming of the BQ27510G3 is outside the scope of this driver. A tool such as TI's bqEVSU can be used for data flash programming and factory programming of the device. The bqEVSU for this device can be found at <http://www.ti.com/lit/zip/sluc367>.

This driver is contained in `sensorlib/bq27510g3.c`, with `sensorlib/bq27510g3.h` containing the API declarations for use by applications.

5.2 API Functions

Functions

- void [BQ27510G3DataAtRateTimeToEmptyGetFloat](#) (tBQ27510G3 *psInst, float *pfData)
- void [BQ27510G3DataAtRateTimeToEmptyGetRaw](#) (tBQ27510G3 *psInst, int16_t *pi16Data)
- void [BQ27510G3DataCapacityFullAvailableGetFloat](#) (tBQ27510G3 *psInst, float *pfData)
- void [BQ27510G3DataCapacityFullAvailableGetRaw](#) (tBQ27510G3 *psInst, int16_t *pi16Data)
- void [BQ27510G3DataCapacityFullChargeGetFloat](#) (tBQ27510G3 *psInst, float *pfData)
- void [BQ27510G3DataCapacityFullChargeGetRaw](#) (tBQ27510G3 *psInst, int16_t *pi16Data)
- void [BQ27510G3DataCapacityNominalAvailableGetFloat](#) (tBQ27510G3 *psInst, float *pfData)
- void [BQ27510G3DataCapacityNominalAvailableGetRaw](#) (tBQ27510G3 *psInst, int16_t *pi16Data)
- void [BQ27510G3DataCapacityRemainingGetFloat](#) (tBQ27510G3 *psInst, float *pfData)
- void [BQ27510G3DataCapacityRemainingGetRaw](#) (tBQ27510G3 *psInst, int16_t *pi16Data)
- void [BQ27510G3DataChargeStateGetFloat](#) (tBQ27510G3 *psInst, float *pfData)
- void [BQ27510G3DataChargeStateGetRaw](#) (tBQ27510G3 *psInst, int16_t *pi16Data)
- void [BQ27510G3DataCurrentAverageGetFloat](#) (tBQ27510G3 *psInst, float *pfData)
- void [BQ27510G3DataCurrentAverageGetRaw](#) (tBQ27510G3 *psInst, int16_t *pi16Data)
- void [BQ27510G3DataCurrentInstantaneousGetFloat](#) (tBQ27510G3 *psInst, float *pfData)
- void [BQ27510G3DataCurrentInstantaneousGetRaw](#) (tBQ27510G3 *psInst, int16_t *pi16Data)

- void [BQ27510G3DataCurrentStandbyGetFloat](#) (tBQ27510G3 *psInst, float *pfData)
- void [BQ27510G3DataCurrentStandbyGetRaw](#) (tBQ27510G3 *psInst, int16_t *pi16Data)
- void [BQ27510G3DataCycleCountGetFloat](#) (tBQ27510G3 *psInst, float *pfData)
- void [BQ27510G3DataCycleCountGetRaw](#) (tBQ27510G3 *psInst, int16_t *pi16Data)
- void [BQ27510G3DataHealthGetFloat](#) (tBQ27510G3 *psInst, float *pfHealth)
- void [BQ27510G3DataHealthGetRaw](#) (tBQ27510G3 *psInst, int16_t *pi16Data)
- uint_fast8_t [BQ27510G3DataRead](#) (tBQ27510G3 *psInst, tSensorCallback *pfnCallback, void *pvCallbackData)
- void [BQ27510G3DataTemperatureBatteryGetFloat](#) (tBQ27510G3 *psInst, float *pfData)
- void [BQ27510G3DataTemperatureBatteryGetRaw](#) (tBQ27510G3 *psInst, int16_t *pi16Data)
- void [BQ27510G3DataTemperatureInternalGetFloat](#) (tBQ27510G3 *psInst, float *pfData)
- void [BQ27510G3DataTemperatureInternalGetRaw](#) (tBQ27510G3 *psInst, int16_t *pi16Data)
- void [BQ27510G3DataTimeToEmptyGetFloat](#) (tBQ27510G3 *psInst, float *pfData)
- void [BQ27510G3DataTimeToEmptyGetRaw](#) (tBQ27510G3 *psInst, int16_t *pi16Data)
- void [BQ27510G3DataTimeToEmptyStandbyGetFloat](#) (tBQ27510G3 *psInst, float *pfData)
- void [BQ27510G3DataTimeToEmptyStandbyGetRaw](#) (tBQ27510G3 *psInst, int16_t *pi16Data)
- void [BQ27510G3DataVoltageBatteryGetFloat](#) (tBQ27510G3 *psInst, float *pfData)
- void [BQ27510G3DataVoltageBatteryGetRaw](#) (tBQ27510G3 *psInst, int16_t *pi16Data)
- uint_fast8_t [BQ27510G3Init](#) (tBQ27510G3 *psInst, tI2CInstance *psi2CInst, uint_fast8_t ui8I2CAddr, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [BQ27510G3Read](#) (tBQ27510G3 *psInst, uint_fast8_t ui8Reg, uint16_t *pui16Data, uint_fast16_t ui16Count, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [BQ27510G3ReadModifyWrite](#) (tBQ27510G3 *psInst, uint_fast8_t ui8Reg, uint_fast16_t ui16Mask, uint_fast16_t ui16Value, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [BQ27510G3Write](#) (tBQ27510G3 *psInst, uint_fast8_t ui8Reg, const uint16_t *pui16Data, uint_fast16_t ui16Count, tSensorCallback *pfnCallback, void *pvCallbackData)

5.2.1 Function Documentation

5.2.1.1 BQ27510G3DataAtRateTimeToEmptyGetFloat

Gets the "at rate time to empty" data as a floating point value.

Prototype:

```
void  
BQ27510G3DataAtRateTimeToEmptyGetFloat (tBQ27510G3 *psInst,  
                                          float *pfData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pfData is a pointer to the value into which the data is stored as floating point.

Description:

This function returns the data from the most recent data read, converted into float value. Units are minutes.

Returns:

None.

5.2.1.2 BQ27510G3DataAtRateTimeToEmptyGetRaw

Gets the raw "at rate time to empty" data.

Prototype:

```
void  
BQ27510G3DataAtRateTimeToEmptyGetRaw (tBQ27510G3 *psInst,  
                                         int16_t *pi16Data)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pi16Data is a pointer to the value into which the raw data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

5.2.1.3 BQ27510G3DataCapacityFullAvailableGetFloat

Gets the measurement data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataCapacityFullAvailableGetFloat (tBQ27510G3 *psInst,  
                                              float *pfData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pfData is a pointer to the value into which the data is stored as floating point.

Description:

This function returns the data from the most recent data read, converted into float value. Units are amp-hours (Ah).

Returns:

None.

5.2.1.4 BQ27510G3DataCapacityFullAvailableGetRaw

Gets the raw available capacity of a new battery from the most recent data read.

Prototype:

```
void  
BQ27510G3DataCapacityFullAvailableGetRaw (tBQ27510G3 *psInst,  
                                             int16_t *pi16Data)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pi16Data is a pointer to the value into which the raw data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

5.2.1.5 BQ27510G3DataCapacityFullChargeGetFloat

Gets the measurement data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataCapacityFullChargeGetFloat (tBQ27510G3 *psInst,  
                                           float *pfData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pfData is a pointer to the value into which the data is stored as floating point.

Description:

This function returns the data from the most recent data read, converted into float value. Units are amp-hours (Ah).

Returns:

None.

5.2.1.6 BQ27510G3DataCapacityFullChargeGetRaw

Gets the raw full charge capacity from the most recent data read.

Prototype:

```
void  
BQ27510G3DataCapacityFullChargeGetRaw (tBQ27510G3 *psInst,  
                                         int16_t *pi16Data)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pi16Data is a pointer to the value into which the raw data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

5.2.1.7 BQ27510G3DataCapacityNominalAvailableGetFloat

Gets the measurement data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataCapacityNominalAvailableGetFloat (tBQ27510G3 *psInst,  
                                                float *pfData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pfData is a pointer to the value into which the data is stored as floating point.

Description:

This function returns the data from the most recent data read, converted into float value. Units are amp-hours (Ah).

Returns:

None.

5.2.1.8 BQ27510G3DataCapacityNominalAvailableGetRaw

Gets the raw nominal available capacity measurement from the most recent data read.

Prototype:

```
void  
BQ27510G3DataCapacityNominalAvailableGetRaw (tBQ27510G3 *psInst,  
                                              int16_t *pi16Data)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pi16Data is a pointer to the value into which the raw data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

5.2.1.9 BQ27510G3DataCapacityRemainingGetFloat

Gets the measurement data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataCapacityRemainingGetFloat (tBQ27510G3 *psInst,  
                                         float *pfData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pfData is a pointer to the value into which the data is stored as floating point.

Description:

This function returns the data from the most recent data read, converted into float value. Units are amp-hours (Ah).

Returns:

None.

5.2.1.10 BQ27510G3DataCapacityRemainingGetRaw

Gets the raw remaining capacity of measurement from the most recent data read.

Prototype:

```
void  
BQ27510G3DataCapacityRemainingGetRaw (tBQ27510G3 *psInst,  
                                       int16_t *pi16Data)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pi16Data is a pointer to the value into which the raw data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

5.2.1.11 BQ27510G3DataChargeStateGetFloat

Gets the charge state from the most recent data read.

Prototype:

```
void  
BQ27510G3DataChargeStateGetFloat (tBQ27510G3 *psInst,  
                                   float *pfData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pfData is a pointer to the value into which the data is stored as floating point.

Description:

This function returns the charge state from the most recent data read, converted into percent charged.

Returns:

None.

5.2.1.12 BQ27510G3DataChargeStateGetRaw

Gets the raw charge state data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataChargeStateGetRaw (tBQ27510G3 *psInst,  
                                int16_t *pi16Data)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pi16Data is a pointer to the value into which the raw data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

5.2.1.13 BQ27510G3DataCurrentAverageGetFloat

Gets the measurement data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataCurrentAverageGetFloat (tBQ27510G3 *psInst,  
                                       float *pfData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pfData is a pointer to the value into which the data is stored as floating point.

Description:

This function returns the data from the most recent data read, converted into float value. Units are amps.

Returns:

None.

5.2.1.14 BQ27510G3DataCurrentAverageGetRaw

Gets the raw average current measurement from the most recent data read.

Prototype:

```
void  
BQ27510G3DataCurrentAverageGetRaw (tBQ27510G3 *psInst,  
                                    int16_t *pi16Data)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pi16Data is a pointer to the value into which the raw data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

5.2.1.15 BQ27510G3DataCurrentInstantaneousGetFloat

Gets the instantaneous current data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataCurrentInstantaneousGetFloat (tBQ27510G3 *psInst,  
                                             float *pfData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pfData is a pointer to the value into which the data is stored as floating point.

Description:

This function returns the current measurement from the most recent data read, converted into floating point amps.

Returns:

None.

5.2.1.16 BQ27510G3DataCurrentInstantaneousGetRaw

Gets the instantaneous current data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataCurrentInstantaneousGetRaw (tBQ27510G3 *psInst,  
                                           int16_t *pi16Data)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pi16Data is a pointer to the value into which the raw data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

5.2.1.17 BQ27510G3DataCurrentStandbyGetFloat

Gets the measurement data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataCurrentStandbyGetFloat (tBQ27510G3 *psInst,  
                                       float *pfData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pfData is a pointer to the value into which the data is stored as floating point.

Description:

This function returns the data from the most recent data read, converted into float value. Units are amps.

Returns:

None.

5.2.1.18 BQ27510G3DataCurrentStandbyGetRaw

Gets the raw standby current from the most recent data read.

Prototype:

```
void  
BQ27510G3DataCurrentStandbyGetRaw (tBQ27510G3 *psInst,  
                                    int16_t *pi16Data)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pi16Data is a pointer to the value into which the raw data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

5.2.1.19 BQ27510G3DataCycleCountGetFloat

Gets the measurement data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataCycleCountGetFloat (tBQ27510G3 *psInst,  
                                   float *pfData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pfData is a pointer to the value into which the data is stored as floating point.

Description:

This function returns the data from the most recent data read, converted into float value. This data does not have units.

Returns:

None.

5.2.1.20 BQ27510G3DataCycleCountGetRaw

Gets the raw cycle count data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataCycleCountGetRaw(tBQ27510G3 *psInst,  
                               int16_t *pi16Data)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pi16Data is a pointer to the value into which the raw data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

5.2.1.21 BQ27510G3DataHealthGetFloat

Gets the health data from the most recent health data read.

Prototype:

```
void  
BQ27510G3DataHealthGetFloat(tBQ27510G3 *psInst,  
                             float *pfHealth)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pfHealth is a pointer to the value into which the battery health data is stored as floating point ratio of current/design capacity.

Description:

This function returns the health data from the most recent data read, converted into percent health. The health status bits are dropped. These can be obtained with BQ27510G3DataHealthGetRaw function.

Returns:

None.

5.2.1.22 BQ27510G3DataHealthGetRaw

Gets the raw health data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataHealthGetRaw(tBQ27510G3 *psInst,  
                           int16_t *pi16Data)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pi16Data is a pointer to the value into which the raw data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

5.2.1.23 BQ27510G3DataRead

Performs a read of a BQ27510G3 data register.

Prototype:

```
uint_fast8_t  
BQ27510G3DataRead(tBQ27510G3 *psInst,  
                  tSensorCallback *pfncallback,  
                  void *pvCallbackData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pfncallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a read of the BQ27510G3 data registers. When the read has completed (as indicated by calling the callback function), the new readings can be obtained via functions like:

- BQ27510G3DataTCurrentInstantaneousGetRaw()
- BQ27510G3DataTCurrentInstantaneousGetFloat()

Returns:

Returns 1 if the read was successfully started and 0 if it was not.

5.2.1.24 BQ27510G3DataTemperatureBatteryGetFloat

Gets the battery temperature measurement data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataTemperatureBatteryGetFloat (tBQ27510G3 *psInst,  
                                           float *pfData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pfData is a pointer to the value into which the data is stored as floating point.

Description:

This function returns the data from the most recent data read, converted into float value. Units are degrees Celsius.

Returns:

None.

5.2.1.25 BQ27510G3DataTemperatureBatteryGetRaw

Gets the raw battery temperature from the most recent data read.

Prototype:

```
void  
BQ27510G3DataTemperatureBatteryGetRaw (tBQ27510G3 *psInst,  
                                         int16_t *pi16Data)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pi16Data is a pointer to the value into which the raw data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

5.2.1.26 BQ27510G3DataTemperatureInternalGetFloat

Gets the internal temperature data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataTemperatureInternalGetFloat (tBQ27510G3 *psInst,  
                                           float *pfData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pfData is a pointer to the value into which the data is stored as floating point.

Description:

This function returns the internal temperature from the most recent data read.

Returns:

None.

5.2.1.27 BQ27510G3DataTemperatureInternalGetRaw

Gets the raw internal temperature data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataTemperatureInternalGetRaw (tBQ27510G3 *psInst,  
                                         int16_t *pi16Data)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pi16Data is a pointer to the value into which the raw data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

5.2.1.28 BQ27510G3DataTimeToEmptyGetFloat

Gets the measurement data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataTimeToEmptyGetFloat (tBQ27510G3 *psInst,  
                                   float *pfData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pfData is a pointer to the value into which the data is stored as floating point.

Description:

This function returns the data from the most recent data read, converted into float value. Units are minutes. Value of 65, 535 indicates battery is not being discharged.

Returns:

None.

5.2.1.29 BQ27510G3DataTimeToEmptyGetRaw

Gets the raw time to empty estimate from the most recent data read.

Prototype:

```
void  
BQ27510G3DataTimeToEmptyGetRaw (tBQ27510G3 *psInst,  
                                int16_t *pi16Data)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pi16Data is a pointer to the value into which the raw data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

5.2.1.30 BQ27510G3DataTimeToEmptyStandbyGetFloat

Gets the measurement data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataTimeToEmptyStandbyGetFloat (tBQ27510G3 *psInst,  
                                           float *pfData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pfData is a pointer to the value into which the data is stored as floating point.

Description:

This function returns the data from the most recent data read, converted into float value. Units are minutes.

Returns:

None.

5.2.1.31 BQ27510G3DataTimeToEmptyStandbyGetRaw

Gets the raw standby time to empty data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataTimeToEmptyStandbyGetRaw (tBQ27510G3 *psInst,  
                                         int16_t *pi16Data)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

pi16Data is a pointer to the value into which the raw data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:
None.

5.2.1.32 BQ27510G3DataVoltageBatteryGetFloat

Gets the battery voltage measurement from the most recent data read.

Prototype:

```
void  
BQ27510G3DataVoltageBatteryGetFloat (tBQ27510G3 *psInst,  
                                       float *pfData)
```

Parameters:
psInst is a pointer to the BQ27510G3 instance data.
pfData is a pointer to the value into which the data is stored as floating point.

Description:
This function returns the data from the most recent data read, converted into float value. Units are volts.

Returns:
None.

5.2.1.33 BQ27510G3DataVoltageBatteryGetRaw

Gets the raw battery voltage measurement data from the most recent data read.

Prototype:

```
void  
BQ27510G3DataVoltageBatteryGetRaw (tBQ27510G3 *psInst,  
                                    int16_t *pi16Data)
```

Parameters:
psInst is a pointer to the BQ27510G3 instance data.
pi16Data is a pointer to the value into which the raw data is stored.

Description:
This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:
None.

5.2.1.34 BQ27510G3Init

Initializes the BQ27510G3 driver.

Prototype:

```
uint_fast8_t
BQ27510G3Init (tBQ27510G3 *psInst,
               tI2CInstance *psI2CInst,
               uint_fast8_t ui8I2CAddr,
               tSensorCallback *pfnCallback,
               void *pvCallbackData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

psI2CInst is a pointer to the I2C driver instance data.

ui8I2CAddr is the I2C address of the BQ27510G3 device.

pfnCallback is the function to be called when the initialization has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initializes the BQ27510G3 driver, preparing it for operation.

Returns:

Returns 1 if the BQ27510G3 driver was successfully initialized and 0 if it was not.

5.2.1.35 BQ27510G3Read

Reads data from BQ27510G3 registers.

Prototype:

```
uint_fast8_t
BQ27510G3Read (tBQ27510G3 *psInst,
               uint_fast8_t ui8Reg,
               uint16_t *pui16Data,
               uint_fast16_t ui16Count,
               tSensorCallback *pfnCallback,
               void *pvCallbackData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

ui8Reg is the first register to read.

pui16Data is a pointer to the location to store the data that is read.

ui16Count the number of register values to read.

pfnCallback is the function to be called when data read is complete (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function reads a sequence of data values from consecutive registers in the BQ27510G3.

Note:

The BQ27510G3 does not auto-increment the register pointer, so reads of more than one value returns garbage for the subsequent values.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

5.2.1.36 BQ27510G3ReadModifyWrite

Performs a read-modify-write of a BQ27510G3 register.

Prototype:

```
uint_fast8_t
BQ27510G3ReadModifyWrite (tBQ27510G3 *psInst,
                          uint_fast8_t ui8Reg,
                          uint_fast16_t ui16Mask,
                          uint_fast16_t ui16Value,
                          tSensorCallback *pfncallback,
                          void *pvCallbackData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

ui8Reg is the register offset to read modify and write

ui16Mask is the bit mask that is ANDed with the current register value.

ui16Value is the bit mask that is ORed with the result of the AND operation.

pfncallback is the function to be called when the data has been changed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function changes the value of a register in the BQ27510G3 via a read-modify-write operation, allowing one of the fields to be changed without disturbing the other fields. The *ui8Reg* register is read, ANDed with *ui16Mask*, ORed with *ui16Value*, and then written back to the BQ27510G3.

Returns:

Returns 1 if the read-modify-write was successfully started and 0 if it was not.

5.2.1.37 BQ27510G3Write

Writes data to BQ27510G3 registers.

Prototype:

```
uint_fast8_t
BQ27510G3Write (tBQ27510G3 *psInst,
                uint_fast8_t ui8Reg,
                const uint16_t *puil6Data,
                uint_fast16_t ui16Count,
                tSensorCallback *pfncallback,
                void *pvCallbackData)
```

Parameters:

psInst is a pointer to the BQ27510G3 instance data.

ui8Reg is the first register to write.

pui16Data is a pointer to the 16-bit register data to write.

ui16Count is the number of 16-bit registers to write.

pfnCallback is the function to be called when the data has been written (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function writes a sequence of data values to consecutive registers in the BQ27510G3. The first value in the *pui16Data* buffer contains the data to be written into the *ui8Reg* register, the second value contains the data to be written into the next register, and so on.

Note:

The BQ27510G3 does not auto-increment the register pointer, so writes of more than one register are rejected by the BQ27510G3.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

5.3 Programming Example

The following example shows how to initialize the bq27510g3,

```
//
// A boolean that is set when a BQ27510g3 command has completed.
//
volatile bool g_bBQ27510G3Done;

//
// The function that is provided by this example as a callback when BQ27510G3
// transactions have completed.
//
void
BQ27510G3Callback(void *pvCallbackData, uint_fast8_t ui8Status)
{
    //
    // See if an error occurred.
    //
    if(ui8Status != I2CM_STATUS_SUCCESS)
    {
        //
        // An error occurred, so handle it here if required.
        //
    }

    //
    // Indicate that the BQ27510G3 transaction has completed.
    //
    g_bBQ27510G3Done = true;
}

//
// The BQ27510G3 example.
//
void
BQ27510G3Example(void)
{
    float fVoltage, fCurrent;
```

```
tI2CInstance sI2CInst;
tBQ27510G3 sBQ27510G3;

//
// Initialize the BQ27510G3 driver. This code assumes that the I2C master
// instance has already been initialized.
//
g_bBQ27510G3Done = false;
BQ27510G3Init(&sBQ27510G3, &sI2CInst, 0x55, BQ27510G3Callback, 0);
while(!g_bBQ27510G3Done)
{
}

//
// Loop forever reading data from the BQ27510G3. Typically, this process
// would be done in the background, but for the purposes of this example,
// it is shown in an infinite loop.
//
while(1)
{
    //
    // Get the raw data from the sensor over the I2C bus.
    //
    BQ27510G3DataRead(&sBQ27510G3, BQ27510G3Callback, &sBQ27510G3);

    //
    // Wait for callback to indicate request is complete.
    //
    while(!g_bBQ27510G3Done)
    {
    }

    //
    // Call routine to retrieve data in float format.
    //
    BQ27510G3DataVoltageBatteryGetFloat(&sBQ27510G3, &fVoltage);

    //
    // Call routine to retrieve data in float format.
    //
    BQ27510G3DataCurrentAverageGetFloat(&sBQ27510G3, &fCurrent);

    //
    // Do something with the new voltage and current readings.
    //
}
}
```


6 CM3218 Ambient Light Sensor Driver

Introduction	53
API Functions	53
Programming Example	57

6.1 Introduction

The CM3218 is an ambient light sensor produced by Capella Microsystems, Inc. This driver allows the CM3218 to be accessed via the I2C bus.

This driver is contained in `sensorlib/cm3218.c`, with `sensorlib/cm3218.h` containing the API declarations for use by applications.

6.2 API Functions

Functions

- void [CM3218DataLightVisibleGetFloat](#) (tCM3218 *psInst, float *pfVisibleLight)
- void [CM3218DataLightVisibleGetRaw](#) (tCM3218 *psInst, uint16_t *pui16Visible)
- uint_fast8_t [CM3218DataRead](#) (tCM3218 *psInst, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [CM3218Init](#) (tCM3218 *psInst, tI2CInstance *psI2CInst, uint_fast8_t ui8I2CAddr, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [CM3218InterruptAcknowledge](#) (tCM3218 *psInst, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [CM3218Read](#) (tCM3218 *psInst, uint_fast8_t ui8Reg, uint16_t *pui16Data, uint_fast16_t ui16Count, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [CM3218Write](#) (tCM3218 *psInst, uint_fast8_t ui8Reg, const uint16_t *pui16Data, uint_fast16_t ui16Count, tSensorCallback *pfnCallback, void *pvCallbackData)

6.2.1 Function Documentation

6.2.1.1 CM3218DataLightVisibleGetFloat

Gets the measurement data from the most recent data read.

Prototype:

```
void
CM3218DataLightVisibleGetFloat (tCM3218 *psInst,
                                float *pfVisibleLight)
```

Parameters:

psInst is a pointer to the CM3218 instance data.

pfVisibleLight is a pointer to the value into which the light data is stored as floating point lux.

Description:

This function returns the light data from the most recent data read, converted into lux.

Returns:

None.

6.2.1.2 CM3218DataLightVisibleGetRaw

Gets the raw measurement data from the most recent data read.

Prototype:

```
void  
CM3218DataLightVisibleGetRaw(tCM3218 *psInst,  
                             uint16_t *pui16Visible)
```

Parameters:

psInst is a pointer to the CM3218 instance data.

pui16Visible is a pointer to the value into which the raw visible light data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

6.2.1.3 CM3218DataRead

Reads the light data from the CM3218.

Prototype:

```
uint_fast8_t  
CM3218DataRead(tCM3218 *psInst,  
               tSensorCallback *pfnCallback,  
               void *pvCallbackData)
```

Parameters:

psInst is a pointer to the CM3218 instance data.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a read of the CM3218 data registers. When the read has completed (as indicated by calling the callback function), the new readings can be obtained via:

- [CM3218DataLightVisibleGetRaw\(\)](#)
- [CM3218DataLightVisibleGetFloat\(\)](#)

Returns:

Returns 1 if the read was successfully started and 0 if it was not.

6.2.1.4 CM3218Init

Initializes the CM3218 driver.

Prototype:

```
uint_fast8_t
CM3218Init (tCM3218 *psInst,
            tI2CInstance *psI2CInst,
            uint_fast8_t ui8I2CAddr,
            tSensorCallback *pfnCallback,
            void *pvCallbackData)
```

Parameters:

psInst is a pointer to the CM3218 instance data.

psI2CInst is a pointer to the I2C driver instance data.

ui8I2CAddr is the I2C address of the CM3218 device.

pfnCallback is the function to be called when the initialization has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initializes the CM3218 driver, preparing it for operation.

Returns:

Returns 1 if the CM3218 driver was successfully initialized and 0 if it was not.

6.2.1.5 CM3218InterruptAcknowledge

Acknowledge an interrupt from the CM3218

Prototype:

```
uint_fast8_t
CM3218InterruptAcknowledge (tCM3218 *psInst,
                            tSensorCallback *pfnCallback,
                            void *pvCallbackData)
```

Parameters:

psInst is a pointer to the CM3218 instance data.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

If using the CM3218's threshold and interrupt features, an interrupt must be acknowledged via the "Interrupt Alert Response" slave address. While the device's primary slave address varies between 0x10 and 0x48 for the non-AD and -AD versions respectively, the Interrupt Alert Response is fixed at 0x0C.

Returns:

Returns 1 if the acknowledge was queued successfully, 0 otherwise.

6.2.1.6 CM3218Read

Reads data from CM3218 registers.

Prototype:

```
uint_fast8_t
CM3218Read(tCM3218 *psInst,
           uint_fast8_t ui8Reg,
           uint16_t *pui16Data,
           uint_fast16_t ui16Count,
           tSensorCallback *pfncallback,
           void *pvCallbackData)
```

Parameters:

psInst is a pointer to the CM3218 instance data.

ui8Reg is the first register to read.

pui16Data is a pointer to the location to store the data that is read.

ui16Count the number of register values bytes to read.

pfncallback is the function to be called when data read is complete (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function reads a sequence of data values from consecutive registers in the CM3218.

Note:

The CM3218 does not auto-increment the register pointer, so reads of more than one value returns the same data.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

6.2.1.7 CM3218Write

Writes data to CM3218 registers.

Prototype:

```
uint_fast8_t
CM3218Write(tCM3218 *psInst,
            uint_fast8_t ui8Reg,
            const uint16_t *pui16Data,
            uint_fast16_t ui16Count,
            tSensorCallback *pfncallback,
            void *pvCallbackData)
```

Parameters:

psInst is a pointer to the CM3218 instance data.

ui8Reg is the first register to write.

pui16Data is a pointer to the 16-bit register data to write.

ui16Count is the number of data bytes to write.

pfnCallback is the function to be called when the data has been written (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function writes a sequence of data values to consecutive registers in the CM3218. The first value in the *pui16Data* buffer contains the data to be written into the *ui8Reg* register, the second value contains the data to be written into the next register, and so on.

Note:

The CM3218 does not auto-increment the register pointer, so writes of more than one register are rejected by the CM3218.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

6.3 Programming Example

The following example shows how to initialize the CM3218 and read light data from it.

```
//  
// A boolean that is set when a CM3218 command has completed.  
//  
volatile bool g_bCM3218Done;  
  
//  
// The function that is provided by this example as a callback when CM3218  
// transactions have completed.  
//  
void  
CM3218Callback(void *pvCallbackData, uint_fast8_t ui8Status)  
{  
    //  
    // See if an error occurred.  
    //  
    if(ui8Status != I2CM_STATUS_SUCCESS)  
    {  
        //  
        // An error occurred, so handle it here if required.  
        //  
    }  
  
    //  
    // Indicate that the CM3218 transaction has completed.  
    //  
    g_bCM3218Done = true;  
}  
  
//  
// The CM3218 example.  
//  
void  
CM3218Example(void)  
{  
    tI2CInstance sI2CInst;  
    tCM3218 sCM3218;  
    float fVisible, fIR;
```

```
//
// Initialize the CM3218. This code assumes that the I2C master instance
// has already been initialized.
//
g_bCM3218Done = false;
CM3218Init(&sCM3218, &sI2CInst, 0x0a, CM3218Callback, 0);
while(!g_bCM3218Done)
{
}

//
// Loop forever reading data from the CM3218. Typically, this process
// would be done in the background, but for the purposes of this example,
// it is shown in an infinite loop.
//
while(1)
{
    //
    // Request another reading from the CM3218.
    //
    g_bCM3218Done = false;
    CM3218DataRead(&sCM3218, CM3218Callback, 0);
    while(!g_bCM3218Done)
    {
    }

    //
    // Get the new light reading.
    //
    CM3218DataLightVisibleGetFloat(&sCM3218, &fVisible);

    //
    // Do something with the new light reading.
    //
}
}
```

7 Complementary Filter DCM Module

Introduction	59
API Functions	59
Programming Example	64

7.1 Introduction

The complementary filter DCM (Direction Cosine Matrix) module provides an algorithm for fusing accelerometer, gyroscope, and magnetometer readings into an attitude estimation for the sensor platform (body) relative to the world. The DCM is a matrix that contains the cosine of each body axis relative to each world axis, as follows:

$$\begin{bmatrix} \cos(xx) & \cos(xy) & \cos(xz) \\ \cos(yx) & \cos(yy) & \cos(yz) \\ \cos(zx) & \cos(zy) & \cos(zz) \end{bmatrix}$$

The algorithm takes the weighted contribution of the accelerometer, gyroscope, and magnetometer to produce an updated attitude estimation. This approach is a complementary filter algorithm because it combines multiple readings of the same signal (that being the attitude of the sensor platform) using weighting factors that sum to one.

The sensors must be sampled at regular intervals, and those samples provided to the complementary filter DCM algorithm. It is important that the samples are taken at a fixed, regular interval in order for the algorithm to provide accurate results.

After each update, the value of the DCM is recomputed. Whenever required by the application, the attitude can be extracted from the DCM in either Euler angle or quaternion format. The Euler angles are used to convert vectors in the world coordinate system into the body coordinate system by first applying the roll, then the pitch, then the yaw. Alternatively, the Euler angles can be used to convert vectors in the body coordinate system into the world coordinate system by first applying the negative yaw, then the negative pitch, then the negative roll.

This module is contained in `sensorlib/comp_dcm.c`, with `sensorlib/comp_dcm.h` containing the API declarations for use by applications.

7.2 API Functions

Functions

- void [CompDCMAccelUpdate](#) (tCompDCM *psDCM, float fAccelX, float fAccelY, float fAccelZ)
- void [CompDCMComputeEulers](#) (tCompDCM *psDCM, float *pfRoll, float *pfPitch, float *pfYaw)
- void [CompDCMComputeQuaternion](#) (tCompDCM *psDCM, float pfQuaternion[4])
- void [CompDCMGyroUpdate](#) (tCompDCM *psDCM, float fGyroX, float fGyroY, float fGyroZ)
- void [CompDCMInit](#) (tCompDCM *psDCM, float fDeltaT, float fScaleA, float fScaleG, float fScaleM)

- void [CompDCMMagnetoUpdate](#) (tCompDCM *psDCM, float fMagnetoX, float fMagnetoY, float fMagnetoZ)
- void [CompDCMMatrixGet](#) (tCompDCM *psDCM, float ppfDCM[3][3])
- void [CompDCMStart](#) (tCompDCM *psDCM)
- void [CompDCMUpdate](#) (tCompDCM *psDCM)

7.2.1 Function Documentation

7.2.1.1 CompDCMAccelUpdate

Updates the accelerometer reading used by the complementary filter DCM algorithm.

Prototype:

```
void  
CompDCMAccelUpdate (tCompDCM *psDCM,  
                    float fAccelX,  
                    float fAccelY,  
                    float fAccelZ)
```

Parameters:

psDCM is a pointer to the DCM state structure.
fAccelX is the accelerometer reading in the X body axis.
fAccelY is the accelerometer reading in the Y body axis.
fAccelZ is the accelerometer reading in the Z body axis.

Description:

This function updates the accelerometer reading used by the complementary filter DCM algorithm. The accelerometer readings provided to this function are used by subsequent calls to [CompDCMStart\(\)](#) and [CompDCMUpdate\(\)](#) to compute the attitude estimate.

Returns:

None.

7.2.1.2 CompDCMComputeEulers

Computes the Euler angles from the DCM attitude estimation matrix.

Prototype:

```
void  
CompDCMComputeEulers (tCompDCM *psDCM,  
                     float *pfRoll,  
                     float *pfPitch,  
                     float *pfYaw)
```

Parameters:

psDCM is a pointer to the DCM state structure.
pfRoll is a pointer to the value into which the roll is stored.
pfPitch is a pointer to the value into which the pitch is stored.
pfYaw is a pointer to the value into which the yaw is stored.

Description:

This function computes the Euler angles that are represented by the DCM attitude estimation matrix. If any of the Euler angles is not required, the corresponding parameter can be **NULL**.

Returns:

None.

7.2.1.3 CompDCMComputeQuaternion

Computes the quaternion from the DCM attitude estimation matrix.

Prototype:

```
void  
CompDCMComputeQuaternion(tCompDCM *psDCM,  
                          float pfQuaternion[4])
```

Parameters:

psDCM is a pointer to the DCM state structure.

pfQuaternion is an array into which the quaternion is stored.

Description:

This function computes the quaternion that is represented by the DCM attitude estimation matrix.

Returns:

None.

7.2.1.4 CompDCMGyroUpdate

Updates the gyroscope reading used by the complementary filter DCM algorithm.

Prototype:

```
void  
CompDCMGyroUpdate(tCompDCM *psDCM,  
                  float fGyroX,  
                  float fGyroY,  
                  float fGyroZ)
```

Parameters:

psDCM is a pointer to the DCM state structure.

fGyroX is the gyroscope reading in the X body axis.

fGyroY is the gyroscope reading in the Y body axis.

fGyroZ is the gyroscope reading in the Z body axis.

Description:

This function updates the gyroscope reading used by the complementary filter DCM algorithm. The gyroscope readings provided to this function are used by subsequent calls to [CompDCMUpdate\(\)](#) to compute the attitude estimate.

Returns:

None.

7.2.1.5 CompDCMInit

Initializes the complementary filter DCM attitude estimation state.

Prototype:

```
void  
CompDCMInit (tCompDCM *psDCM,  
             float fDeltaT,  
             float fScaleA,  
             float fScaleG,  
             float fScaleM)
```

Parameters:

psDCM is a pointer to the DCM state structure.

fDeltaT is the amount of time between DCM updates, in seconds.

fScaleA is the weight of the accelerometer reading in determining the updated attitude estimation.

fScaleG is the weight of the gyroscope reading in determining the updated attitude estimation.

fScaleM is the weight of the magnetometer reading in determining the updated attitude estimation.

Description:

This function initializes the complementary filter DCM attitude estimation state, and must be called prior to performing any attitude estimation.

New readings must be supplied to the complementary filter DCM attitude estimation algorithm at the rate specified by the *fDeltaT* parameter. Failure to provide new readings at this rate results in inaccuracies in the attitude estimation.

The *fScaleA*, *fScaleG*, and *fScaleM* weights must sum to one.

Returns:

None.

7.2.1.6 CompDCMMagnetoUpdate

Updates the magnetometer reading used by the complementary filter DCM algorithm.

Prototype:

```
void  
CompDCMMagnetoUpdate (tCompDCM *psDCM,  
                     float fMagnetoX,  
                     float fMagnetoY,  
                     float fMagnetoZ)
```

Parameters:

psDCM is a pointer to the DCM state structure.

fMagnetoX is the magnetometer reading in the X body axis.

fMagnetoY is the magnetometer reading in the Y body axis.

fMagnetoZ is the magnetometer reading in the Z body axis.

Description:

This function updates the magnetometer reading used by the complementary filter DCM algorithm. The magnetometer readings provided to this function are used by subsequent calls to [CompDCMStart\(\)](#) and [CompDCMUpdate\(\)](#) to compute the attitude estimate.

Returns:

None.

7.2.1.7 CompDCMMatrixGet

Returns the current DCM attitude estimation matrix.

Prototype:

```
void  
CompDCMMatrixGet (tCompDCM *psDCM,  
                  float ppfDCM[3][3])
```

Parameters:

psDCM is a pointer to the DCM state structure.

ppfDCM is a pointer to the array into which to store the DCM matrix values.

Description:

This function returns the current value of the DCM matrix.

Returns:

None.

7.2.1.8 CompDCMStart

Starts the complementary filter DCM attitude estimation from an initial sensor reading.

Prototype:

```
void  
CompDCMStart (tCompDCM *psDCM)
```

Parameters:

psDCM is a pointer to the DCM state structure.

Description:

This function computes the initial complementary filter DCM attitude estimation state based on the initial accelerometer and magnetometer reading. While not necessary for the attitude estimation to converge, using an initial state based on sensor readings results in quicker convergence.

Returns:

None.

7.2.1.9 CompDCMUpdate

Updates the complementary filter DCM attitude estimation based on an updated set of sensor readings.

Prototype:

```
void  
CompDCMUpdate(tCompDCM *psDCM)
```

Parameters:

psDCM is a pointer to the DCM state structure.

Description:

This function updates the complementary filter DCM attitude estimation state based on the current sensor readings. This function must be called at the rate specified to [CompDCMInit\(\)](#), with new readings supplied at an appropriate rate (for example, magnetometers typically sample at a much slower rate than accelerometers and gyroscopes).

Returns:

None.

7.3 Programming Example

The following example shows a simple method for feeding sensor readings into the complementary filter DCM algorithm.

```
void  
CompDCMExample(void)  
{  
    float fAccelX, fAccelY, fAccelZ;  
    float fGyroX, fGyroY, fGyroZ;  
    float fMagnetoX, fMagnetoY, fMagnetoZ;  
    float fRoll, fPitch, fYaw;  
    tCompDCM sDCM;  
  
    //  
    // Initialize the complementary filter DCM algorithm based on a 10ms update  
    // rate with a scaling of 2% accelerometer, 96% gyro, and 2% magnetometer.  
    //  
    CompDCMInit(&sDCM, 0.01, 0.02, 0.96, 0.02);  
  
    //  
    // Read the initial accelerometer and magnetometer values.  
    //  
  
    //  
    // Start the complementary filter DCM algorithm with the initial sensor  
    // readings.  
    //  
    CompDCMAccelUpdate(&sDCM, fAccelX, fAccelY, fAccelZ);  
    CompDCMMagnetoUpdate(&sDCM, fMagnetoX, fMagnetoY, fMagnetoZ);  
    CompDCMStart(&sDCM);  
  
    //  
    // Loop collecting sensor readings. Typically, this process would be  
    // in the background, but for the purposes of this example, it is shown in  
    // an infinite loop.
```



```
//
while(1)
{
    //
    // Read the updated accelerometer, gyro, and magnetometer values.
    //

    //
    // Update the complementary filter DCM algorithm.
    //
    CompDCMAccelUpdate(&sDCM, fAccelX, fAccelY, fAccelZ);
    CompDCMGyroUpdate(&sDCM, fGyroX, fGyroY, fGyroZ);
    CompDCMMagnetoUpdate(&sDCM, fMagnetoX, fMagnetoY, fMagnetoZ);
    CompDCMUpdate(&sDCM);

    //
    // Extract the Euler angles that correspond to the updated DCM state.
    //
    CompDCMComputeEulers(&sDCM, &fRoll, &fPitch, &fYaw);
}
}
```


8 I2C Master Driver

Introduction	67
API Functions	68
Programming Example	79

8.1 Introduction

The I2C master driver is an interrupt-driven state machine that controls transfers across the I2C bus to an external I2C device. There is a queue of I2C requests that are processed in the order they are inserted, allowing several outstanding requests to be handled back-to-back. This process can be used to send several I2C transactions to a single I2C device, send a single I2C transaction (one per entry in the queue) to several I2C devices, or a combination of both.

The state of the I2C master driver is stored in a state structure that must be passed to every API. This protocol allows multiple instances of the I2C master driver to be used with the multiple I2C modules present on most devices. The application must provide the I2C interrupt handler that is called when the I2C interrupt occurs, and it must simply call the `I2CMIntHandler()` API in order to handle the interrupt (using the state structure that is passed to that API).

The application can supply a callback function with each I2C request, which is then called at the conclusion of the request to inform the application that the transfer has completed. The callback function is called in the context of the I2C interrupt handler, so the actions performed in the callback function must be aware of this context. The just-completed request has already been removed from the request queue when the callback is executed, so there is guaranteed to be at least one space available in the queue for use by the callback function (for example, allowing it to use the result of a read to determine what to do next, and then issue another I2C request in response).

Prior to initializing the I2C master driver, it is the application's responsibility to perform the following actions:

1. Configure the GPIO pins used for the I2C SCL and SDA pins
2. Enable the I2C module
3. Install an interrupt handler for the I2C interrupt that calls the `I2CMIntHandler()` API (it is recommended to do this at compile time by placing the interrupt handler into the vector table in flash)

I2C requests can be performed in batched and non-batched mode. Non-batched mode uses a data buffer in memory to perform the entire transfer prior to calling the application-supplied callback function. This mode of operation is typical for I2C requests. In batched mode, a much larger transfer can be performed as a sequence of smaller pieces, or batches. On the I2C bus, the transfer is still composed of a start condition, a sequence of byte transfers, and then a stop condition. From an application perspective, the callback function is called multiple times during the transfer, allowing the application to use a much smaller buffer but having to process the data one batch at a time (as opposed to all at once). Batch mode would typically be used for cases where a large transfer needs to be performed but there is not enough memory available to store the entire transfer.

This driver is contained in `sensorlib/i2cm_drv.c`, with `sensorlib/i2cm_drv.h` containing the API declarations for use by applications.

8.2 API Functions

Functions

- `uint_fast8_t I2CMCommand` (`tl2CMInstance *psInst`, `uint_fast8_t ui8Addr`, `const uint8_t *pui8WriteData`, `uint_fast16_t ui16WriteCount`, `uint_fast16_t ui16WriteBatchSize`, `uint8_t *pui8ReadData`, `uint_fast16_t ui16ReadCount`, `uint_fast16_t ui16ReadBatchSize`, `tSensorCallback *pfnCallback`, `void *pvCallbackData`)
- `void I2CMInit` (`tl2CMInstance *psInst`, `uint32_t ui32Base`, `uint_fast8_t ui8Int`, `uint_fast8_t ui8TxDMA`, `uint_fast8_t ui8RxDMA`, `uint32_t ui32Clock`)
- `void I2CMIntHandler` (`tl2CMInstance *psInst`)
- `uint_fast8_t I2CMRead` (`tl2CMInstance *psInst`, `uint_fast8_t ui8Addr`, `const uint8_t *pui8WriteData`, `uint_fast16_t ui16WriteCount`, `uint8_t *pui8ReadData`, `uint_fast16_t ui16ReadCount`, `tSensorCallback pfnCallback`, `void *pvCallbackData`)
- `uint_fast8_t I2CMRead16BE` (`tl2CMRead16BE *psInst`, `tl2CMInstance *psl2CInst`, `uint_fast8_t ui8Addr`, `uint_fast8_t ui8Reg`, `uint16_t *pui16Data`, `uint_fast16_t ui16Count`, `tSensorCallback *pfnCallback`, `void *pvCallbackData`)
- `uint_fast8_t I2CMReadBatched` (`tl2CMInstance *psInst`, `uint_fast8_t ui8Addr`, `const uint8_t *pui8WriteData`, `uint_fast16_t ui16WriteCount`, `uint_fast16_t ui16WriteBatchSize`, `uint8_t *pui8ReadData`, `uint_fast16_t ui16ReadCount`, `uint_fast16_t ui16ReadBatchSize`, `tSensorCallback pfnCallback`, `void *pvCallbackData`)
- `uint_fast8_t I2CMReadModifyWrite16BE` (`tl2CMReadModifyWrite16 *psInst`, `tl2CMInstance *psl2CInst`, `uint_fast8_t ui8Addr`, `uint_fast8_t ui8Reg`, `uint_fast16_t ui16Mask`, `uint_fast16_t ui16Value`, `tSensorCallback *pfnCallback`, `void *pvCallbackData`)
- `uint_fast8_t I2CMReadModifyWrite16LE` (`tl2CMReadModifyWrite16 *psInst`, `tl2CMInstance *psl2CInst`, `uint_fast8_t ui8Addr`, `uint_fast8_t ui8Reg`, `uint_fast16_t ui16Mask`, `uint_fast16_t ui16Value`, `tSensorCallback *pfnCallback`, `void *pvCallbackData`)
- `uint_fast8_t I2CMReadModifyWrite8` (`tl2CMReadModifyWrite8 *psInst`, `tl2CMInstance *psl2CInst`, `uint_fast8_t ui8Addr`, `uint_fast8_t ui8Reg`, `uint_fast8_t ui8Mask`, `uint_fast8_t ui8Value`, `tSensorCallback *pfnCallback`, `void *pvCallbackData`)
- `uint_fast8_t I2CMTransferResume` (`tl2CMInstance *psInst`, `uint8_t *pui8Data`)
- `uint_fast8_t I2CMWrite` (`tl2CMInstance *psInst`, `uint_fast8_t ui8Addr`, `const uint8_t *pui8Data`, `uint_fast16_t ui16Count`, `tSensorCallback pfnCallback`, `void *pvCallbackData`)
- `uint_fast8_t I2CMWrite16BE` (`tl2CMWrite16BE *psInst`, `tl2CMInstance *psl2CInst`, `uint_fast8_t ui8Addr`, `uint_fast8_t ui8Reg`, `const uint16_t *pui16Data`, `uint_fast16_t ui16Count`, `tSensorCallback *pfnCallback`, `void *pvCallbackData`)
- `uint_fast8_t I2CMWrite8` (`tl2CMWrite8 *psInst`, `tl2CMInstance *psl2CInst`, `uint_fast8_t ui8Addr`, `uint_fast8_t ui8Reg`, `const uint8_t *pui8Data`, `uint_fast16_t ui16Count`, `tSensorCallback *pfnCallback`, `void *pvCallbackData`)
- `uint_fast8_t I2CMWriteBatched` (`tl2CMInstance *psInst`, `uint_fast8_t ui8Addr`, `const uint8_t *pui8Data`, `uint_fast16_t ui16Count`, `uint_fast16_t ui16BatchSize`, `tSensorCallback pfnCallback`, `void *pvCallbackData`)

8.2.1 Function Documentation

8.2.1.1 I2CMCommand

Sends a command to an I2C device.

Prototype:

```
uint_fast8_t
I2CMCommand(tI2CMInstance *psInst,
            uint_fast8_t ui8Addr,
            const uint8_t *pui8WriteData,
            uint_fast16_t ui16WriteCount,
            uint_fast16_t ui16WriteBatchSize,
            uint8_t *pui8ReadData,
            uint_fast16_t ui16ReadCount,
            uint_fast16_t ui16ReadBatchSize,
            tSensorCallback *pfncallback,
            void *pvCallbackData)
```

Parameters:

psInst is a pointer to the I2C master instance data.

ui8Addr is the address of the I2C device to access.

pui8WriteData is a pointer to the data buffer to be written.

ui16WriteCount is the number of bytes to be written.

ui16WriteBatchSize is the number of bytes in each write batch.

pui8ReadData is a pointer to the buffer to be filled with the read data.

ui16ReadCount is the number of bytes to be read.

ui16ReadBatchSize is the number of bytes to be read in each batch.

pfncallback is the function to be called when the transfer has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function adds an I2C command to the queue of commands to be sent. If successful, the I2C command is then transferred in the background using the interrupt handler. When the transfer is complete, the callback function, if provided, is called in the context of the I2C master interrupt handler.

The first byte of *pui8WriteData* contains the I2C address of the device to access, the next *ui16WriteCount* bytes contains the data to be written to the device. The data read from the device is written into the first *ui16ReadCount* bytes of *pui8ReadData*. The *ui16WriteCount* or *ui16ReadCount* parameters can be zero if there are no bytes to be read or written. The write bytes are sent to the device first, and then the read bytes are read from the device afterward.

If *ui16WriteBatchSize* is less than *ui16WriteCount*, the write portion of the transfer is broken up into as many *ui16WriteBatchSize* batches as required to write *ui16WriteCount* bytes. After each batch, the callback function is called with an **I2CM_STATUS_BATCH_DONE** status, and the transfer is paused (with the I2C bus held). The transfer is resumed when [I2CMTransferResume\(\)](#) is called. This procedure can be used to perform very large writes without requiring all the data be available at once, at the expense of tying up the I2C bus for the extended duration of the transfer.

If *ui16ReadBatchSize* is less than *ui16ReadCount*, the read portion of the transfer is broken up into as many *ui16ReadBatchSize* batches as required to read *ui16ReadCount* bytes. After each batch, the callback function is called with an **I2CM_STATUS_BATCH_READY** status, and the transfer is paused (with the I2C bus held). The transfer is resumed when [I2CMTransferResume\(\)](#) is called. This procedure can be used to perform very large reads without requiring a large SRAM buffer, at the expense of tying up the I2C bus for the extended duration of the transfer.

Returns:

Returns 1 if the command was successfully added to the queue and 0 if it was not.

8.2.1.2 I2CMIInit

Initializes the I2C master driver.

Prototype:

```
void
I2CMIInit (tI2CMIInstance *psInst,
           uint32_t ui32Base,
           uint_fast8_t ui8Int,
           uint_fast8_t ui8TxDMA,
           uint_fast8_t ui8RxDMA,
           uint32_t ui32Clock)
```

Parameters:

psInst is a pointer to the I2C master instance data.

ui32Base is the base address of the I2C module.

ui8Int is the interrupt number for the I2C module.

ui8TxDMA is the uDMA channel number used for transmitting data to the I2C module.

ui8RxDMA is the uDMA channel number used for receiving data from the I2C module.

ui32Clock is the clock frequency of the input clock to the I2C module.

Description:

This function prepares both the I2C master module and driver for operation, and must be the first I2C master driver function called for each I2C master instance. It is assumed that the application has enabled the I2C module, configured the I2C pins, and provided an I2C interrupt handler that calls [I2CMIIntHandler\(\)](#).

The uDMA module cannot be used at present to transmit/receive data, so the *ui8TxDMA* and *ui8RxDMA* parameters are unused. They are reserved for future use and should be set to 0xff in order to ensure future compatibility.

Returns:

None.

8.2.1.3 I2CMIIntHandler

Handles I2C master interrupts.

Prototype:

```
void
I2CMIIntHandler (tI2CMIInstance *psInst)
```

Parameters:

psInst is a pointer to the I2C master instance data.

Description:

This function performs the processing required in response to an I2C interrupt. The application-supplied interrupt handler should call this function with the correct instance data in response to the I2C interrupt.

Returns:

None.

8.2.1.4 I2CMRead

Reads data from an I2C device.

Prototype:

```
uint_fast8_t  
I2CMRead(tI2CInstance *psInst,  
         uint_fast8_t ui8Addr,  
         const uint8_t *pui8WriteData,  
         uint_fast16_t ui16WriteCount,  
         uint8_t *pui8ReadData,  
         uint_fast16_t ui16ReadCount,  
         tSensorCallback pfnCallback,  
         void *pvCallbackData)
```

Parameters:

psInst is a pointer to the I2C master instance data.

ui8Addr is the address of the I2C device to access.

pui8WriteData is a pointer to the data buffer to be written.

ui16WriteCount is the number of bytes to be written.

pui8ReadData is a pointer to the buffer to be filled with the read data.

ui16ReadCount is the number of bytes to be read.

pfnCallback is the function to be called when the transfer has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function adds an I2C read to the queue of commands to be sent. If successful, the I2C read is then performed in the background using the interrupt handler. When the read is complete, the callback function, if provided, is called in the context of the I2C master interrupt handler.

The first byte of *pui8WriteData* contains the I2C address of the device to access, the next *ui16WriteCount* bytes contains the data to be written to the device. The data read from the device is written into the first *ui16ReadCount* bytes of *pui8ReadData*. The *ui16WriteCount* or *ui16ReadCount* parameters can be zero if there are no bytes to be read or written. The write bytes are sent to the device first, and then the read bytes are read from the device afterward.

Returns:

Returns 1 if the command was successfully added to the queue and 0 if it was not.

8.2.1.5 I2CMRead16BE

Performs a read of 16-bit big-endian data from an I2C device.

Prototype:

```
uint_fast8_t
I2CMRead16BE(tI2CMRead16BE *psInst,
             tI2CMInstance *psI2CInst,
             uint_fast8_t ui8Addr,
             uint_fast8_t ui8Reg,
             uint16_t *pui16Data,
             uint_fast16_t ui16Count,
             tSensorCallback *pfnCallback,
             void *pvCallbackData)
```

Parameters:

psInst is a pointer to the 16-bit big-endian read instance data.

psI2CInst is a pointer to the I2C master instance data.

ui8Addr is the address of the I2C device to access.

ui8Reg is the register in the I2C device to access.

pui16Data is a pointer to the buffer to be filled with the register data.

ui16Count is the number of 16-bit register values to be read.

pfnCallback is the function to be called when the read has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a read transaction of 16-bit big-endian data from an I2C device. The data is provided by the device in big-endian format and is byte-swapped as it is read from the I2C device, returning the data in little-endian format.

Returns:

Returns 1 if the command was successfully added to the queue and 0 if it was not.

8.2.1.6 I2CMReadBatched

Reads data in batches from an I2C device.

Prototype:

```
uint_fast8_t
I2CMReadBatched(tI2CMInstance *psInst,
                uint_fast8_t ui8Addr,
                const uint8_t *pui8WriteData,
                uint_fast16_t ui16WriteCount,
                uint_fast16_t ui16WriteBatchSize,
                uint8_t *pui8ReadData,
                uint_fast16_t ui16ReadCount,
                uint_fast16_t ui16ReadBatchSize,
                tSensorCallback pfnCallback,
                void *pvCallbackData)
```

Parameters:

psInst is a pointer to the I2C master instance data.

ui8Addr is the address of the I2C device to access.

pui8WriteData is a pointer to the data buffer to be written.

ui16WriteCount is the number of bytes to be written.

ui16WriteBatchSize is the number of bytes in each write batch.

pui8ReadData is a pointer to the buffer to be filled with the read data.

ui16ReadCount is the number of bytes to be read.

ui16ReadBatchSize is the number of bytes in each read batch.

pfnCallback is the function to be called when the transfer has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function adds an I2C read to the queue of commands to be sent. If successful, the I2C read is then performed in the background using the interrupt handler. When the read is complete, the callback function, if provided, is called in the context of the I2C master interrupt handler.

The first byte of *pui8WriteData* contains the I2C address of the device to access, the next *ui16WriteCount* bytes contains the data to be written to the device. The data read from the device is written into the first *ui16ReadCount* bytes of *pui8ReadData*. The *ui16WriteCount* or *ui16ReadCount* parameters can be zero if there are no bytes to be read or written. The write bytes are sent to the device first, and then the read bytes are read from the device afterward.

The data is written in batches of *ui16WriteBatchSize*. The callback function is called after each batch is written, and [I2CMTransferResume\(\)](#) must be called when the next batch should be written.

The data is read in batches of *ui16ReadBatchSize*. The callback function is called after each batch is read, and [I2CMTransferResume\(\)](#) must be called when the next batch should be read.

Returns:

Returns 1 if the command was successfully added to the queue and 0 if it was not.

8.2.1.7 I2CMReadModifyWrite16BE

Performs a read-modify-write of 16 bits of big-endian data in an I2C device.

Prototype:

```
uint_fast8_t
I2CMReadModifyWrite16BE(tI2CMReadModifyWrite16 *psInst,
                        tI2CInstance *psI2CInst,
                        uint_fast8_t ui8Addr,
                        uint_fast8_t ui8Reg,
                        uint_fast16_t ui16Mask,
                        uint_fast16_t ui16Value,
                        tSensorCallback *pfnCallback,
                        void *pvCallbackData) [inline]
```

Parameters:

psInst is a pointer to the read-modify-write instance data.

psI2CInst is a pointer to the I2C master instance data.

ui8Addr is the address of the I2C device to access.

ui8Reg is the register in the I2C device to access.

ui16Mask is the mask indicating the register bits that should be maintained.

ui16Value is the value indicating the new value for the register bits that are not maintained.

pfnCallback is the function to be called when the write has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a read-modify-write transaction of 16 bits of big-endian data in an I2C device. The modify portion of the operation is performed by AND-ing the register value with *ui16Mask* and then OR-ing the result with *ui16Value*. When the read-modify-write is complete, the callback function, if provided, is called in the context of the I2C master interrupt handler.

If the mask (in *ui16Mask*) is zero, then none of the bits in the current register value are maintained. In this case, the read portion of the read-modify-write is bypassed, and the new register value (in *ui16Value*) is directly written to the I2C device.

Returns:

Returns 1 if the command was successfully added to the queue and 0 if it was not.

8.2.1.8 I2CMReadModifyWrite16LE

Performs a read-modify-write of 16 bits of little-endian data in an I2C device.

Prototype:

```
uint_fast8_t
I2CMReadModifyWrite16LE(tI2CMReadModifyWrite16 *psInst,
                        tI2CInstance *psI2CInst,
                        uint_fast8_t ui8Addr,
                        uint_fast8_t ui8Reg,
                        uint_fast16_t ui16Mask,
                        uint_fast16_t ui16Value,
                        tSensorCallback *pfnCallback,
                        void *pvCallbackData)
```

Parameters:

psInst is a pointer to the read-modify-write instance data.

psI2CInst is a pointer to the I2C master instance data.

ui8Addr is the address of the I2C device to access.

ui8Reg is the register in the I2C device to access.

ui16Mask is the mask indicating the register bits that should be maintained.

ui16Value is the value indicating the new value for the register bits that are not maintained.

pfnCallback is the function to be called when the write has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a read-modify-write transaction of 16 bits of little-endian data in an I2C device. The modify portion of the operation is performed by AND-ing the register value with *ui16Mask* and then OR-ing the result with *ui16Value*. When the read-modify-write is complete, the callback function, if provided, is called in the context of the I2C master interrupt handler.

If the mask (in *ui16Mask*) is zero, then none of the bits in the current register value are maintained. In this case, the read portion of the read-modify-write is bypassed, and the new register value (in *ui16Value*) is directly written to the I2C device.

Returns:

Returns 1 if the command was successfully added to the queue and 0 if it was not.

8.2.1.9 I2CMReadModifyWrite8

Performs a read-modify-write of 8 bits of data in an I2C device.

Prototype:

```
uint_fast8_t  
I2CMReadModifyWrite8 (tI2CMReadModifyWrite8 *psInst,  
                      tI2CInstance *psI2CInst,  
                      uint_fast8_t ui8Addr,  
                      uint_fast8_t ui8Reg,  
                      uint_fast8_t ui8Mask,  
                      uint_fast8_t ui8Value,  
                      tSensorCallback *pfnCallback,  
                      void *pvCallbackData)
```

Parameters:

psInst is a pointer to the read-modify-write instance data.

psI2CInst is a pointer to the I2C master instance data.

ui8Addr is the address of the I2C device to access.

ui8Reg is the register in the I2C device to access.

ui8Mask is the mask indicating the register bits that should be maintained.

ui8Value is the value indicating the new value for the register bits that are not maintained.

pfnCallback is the function to be called when the write has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a read-modify-write transaction of 8 bits of data in an I2C device. The modify portion of the operation is performed by AND-ing the register value with *ui8Mask* and then OR-ing the result with *ui8Value*. When the read-modify-write is complete, the callback function, if provided, is called in the context of the I2C master interrupt handler.

If the mask (in *ui8Mask*) is zero, then none of the bits in the current register value are maintained. In this case, the read portion of the read-modify-write is bypassed, and the new register value (in *ui8Value*) is directly written to the I2C device.

Returns:

Returns 1 if the command was successfully added to the queue and 0 if it was not.

8.2.1.10 I2CMTransferResume

Resumes an I2C transfer.

Prototype:

```
uint_fast8_t  
I2CMTransferResume (tI2CInstance *psInst,  
                    uint8_t *pui8Data)
```

Parameters:

psInst is a pointer to the I2C master instance data.

pui8Data is a pointer to the buffer to be used for the next batch of data.

Description:

This function resumes an I2C transfer that has been paused via the use of the write or read batch size capability.

Returns:

Returns 1 if the transfer was resumed and 0 if there was not a paused transfer to resume.

8.2.1.11 I2CMWrite

Writes data to an I2C device.

Prototype:

```
uint_fast8_t  
I2CMWrite(tI2CInstance *psInst,  
          uint_fast8_t ui8Addr,  
          const uint8_t *pui8Data,  
          uint_fast16_t ui16Count,  
          tSensorCallback pfnCallback,  
          void *pvCallbackData)
```

Parameters:

psInst is a pointer to the I2C master instance data.

ui8Addr is the address of the I2C device to access.

pui8Data is a pointer to the data buffer to be written.

ui16Count is the number of bytes to be written.

pfnCallback is the function to be called when the write has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function adds an I2C write to the queue of commands to be sent. If successful, the I2C write is then performed in the background using the interrupt handler. When the write is complete, the callback function, if provided, is called in the context of the I2C master interrupt handler.

The first byte of the data buffer contains the I2C address of the device to access, and the remaining *ui16Count* bytes contain the data to be written to the device. The *ui16Count* parameter can be zero if there are no bytes to be written.

Returns:

Returns 1 if the command was successfully added to the queue and 0 if it was not.

8.2.1.12 I2CMWrite16BE

Performs a write of 16-bit big-endian data to an I2C device.

Prototype:

```
uint_fast8_t
I2CMWrite16BE(tI2CMWrite16BE *psInst,
               tI2CInstance *psI2CInst,
               uint_fast8_t ui8Addr,
               uint_fast8_t ui8Reg,
               const uint16_t *pui16Data,
               uint_fast16_t ui16Count,
               tSensorCallback *pfnCallback,
               void *pvCallbackData)
```

Parameters:

psInst is a pointer to the 16-bit big-endian write instance data.

psI2CInst is a pointer to the I2C master instance data.

ui8Addr is the address of the I2C device to access.

ui8Reg is the register in the I2C device to access.

pui16Data is a pointer to the register data to be written.

ui16Count is the number of 16-bit register values to be written.

pfnCallback is the function to be called when the write has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a write transaction of 16-bit big-endian data to an I2C device. The data in the buffer is provided in little-endian format and is byte-swapped as it is being written to the I2C device.

Returns:

Returns 1 if the command was successfully added to the queue and 0 if it was not.

8.2.1.13 I2CMWrite8

Performs a write of 8-bit data to an I2C device.

Prototype:

```
uint_fast8_t
I2CMWrite8(tI2CMWrite8 *psInst,
            tI2CInstance *psI2CInst,
            uint_fast8_t ui8Addr,
            uint_fast8_t ui8Reg,
            const uint8_t *pui8Data,
            uint_fast16_t ui16Count,
            tSensorCallback *pfnCallback,
            void *pvCallbackData)
```

Parameters:

psInst is a pointer to the 8-bit write instance data.

psI2CInst is a pointer to the I2C master instance data.

ui8Addr is the address of the I2C device to access.

ui8Reg is the register in the I2C device to access.

pui8Data is a pointer to the register data to be written.

ui16Count is the number of register values to be written.

pfnCallback is the function to be called when the write has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a write transaction of 8-bit data to an I2C device.

Returns:

Returns 1 if the command was successfully added to the queue and 0 if it was not.

8.2.1.14 I2CMWriteBatched

Writes data in batches to an I2C device.

Prototype:

```
uint_fast8_t
I2CMWriteBatched(tI2CInstance *psInst,
                 uint_fast8_t ui8Addr,
                 const uint8_t *pui8Data,
                 uint_fast16_t ui16Count,
                 uint_fast16_t ui16BatchSize,
                 tSensorCallback pfnCallback,
                 void *pvCallbackData)
```

Parameters:

psInst is a pointer to the I2C master instance data.

ui8Addr is the address of the I2C device to access.

pui8Data is a pointer to the data buffer to be written.

ui16Count is the number of bytes to be written.

ui16BatchSize is the number of bytes in each write batch.

pfnCallback is the function to be called when the transfer has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function adds an I2C write to the queue of commands to be sent. If successful, the I2C write is then performed in the background using the interrupt handler. When the write is complete, the callback function, if provided, is called in the context of the I2C master interrupt handler.

The first byte of the data buffer contains the I2C address of the device to access, and the remaining *ui16Count* bytes contain the data to be written to the device. The *ui16Count* parameter can be zero if there are no bytes to be written.

The data is written in batches of *ui16WriteBatchSize*. The callback function is called after each batch is written, and [I2CMTransferResume\(\)](#) must be called when the next batch should be written.

Returns:

Returns 1 if the command was successfully added to the queue and 0 if it was not.

8.3 Programming Example

The following example shows how to perform simple I2C reads and writes to I2C devices.

```
//
// The I2C master driver instance data.
//
tI2CMInstance g_sI2CMSimpleInst;

//
// A boolean that is set when an I2C transaction is completed.
//
volatile bool g_bI2CMSimpleDone = true;

//
// The interrupt handler for the I2C module.
//
void
I2CMSimpleIntHandler(void)
{
    //
    // Call the I2C master driver interrupt handler.
    //
    I2CMIntHandler(&g_sI2CMSimpleInst);
}

//
// The function that is provided by this example as a callback when I2C
// transactions have completed.
//
void
I2CMSimpleCallback(void *pvData, uint_fast8_t ui8Status)
{
    //
    // See if an error occurred.
    //
    if(ui8Status != I2CM_STATUS_SUCCESS)
    {
        //
        // An error occurred, so handle it here if required.
        //
    }

    //
    // Indicate that the I2C transaction has completed.
    //
    g_bI2CMSimpleDone = true;
}

//
// The simple I2C master driver example.
//
void
I2CMSimpleExample(void)
{
    uint8_t pui8Data[4];

    //
    // Initialize the I2C master driver. It is assumed that the I2C module has
    // already been enabled and the I2C pins have been configured.
    //
    I2CMInit(&g_sI2CMSimpleInst, I2C0_BASE, INT_I2C0, 0xff, 0xff, 80000000);

    //

```

```
// Write two bytes of data to the I2C device at address 0x22.
//
g_bI2CMSimpleDone = false;
I2CMWrite(&g_sI2CMSimpleInst, 0x22, pui8Data, 2, I2CMSimpleCallback, 0);
while(!g_bI2CMSimpleDone)
{
}

//
// Read four bytes of data from the I2C device at address 0x31.
//
g_bI2CMSimpleDone = false;
I2CMRead(&g_sI2CMSimpleInst, 0x31, pui8Data, 1, pui8Data, 4,
        I2CMSimpleCallback, 0);
while(!g_bI2CMSimpleDone)
{
}
}
```

The following example shows how to perform batched reads and writes of large amounts of data using small buffers.

```
//
// The I2C master instance structure.
//
tI2CMInstance g_sI2CMBatchInst;

//
// The data buffer used for the read and write.
//
uint8_t g_pui8Data[256];

//
// A boolean that is set when an I2C transaction is completed.
//
volatile bool g_bI2CMBatchDone = true;

//
// The interrupt handler for the I2C module.
//
void
I2CMBatchIntHandler(void)
{
    //
    // Call the I2C master driver interrupt handler.
    //
    I2CMIntHandler(&g_sI2CMBatchInst);
}

//
// The function that is provided by this example as a callback when batched I2C
// read transactions have completed.
//
void
I2CMBatchReadCallback(void *pvData, uint_fast8_t ui8Status)
{
    //
    // Do something with the data that has been read into g_pui8Data.
    //

    //
    // See if there is more data to be read.
    //
    if(ui8Status == I2CM_STATUS_BATCH_READY)
    {
    }
}
```



```

        //
        // Resume the batched read.
        //
        I2CMTransferResume(&g_sI2CMBatchInst, g_pui8Data);
    }
    else
    {
        //
        // Indicate that the I2C batched read transaction has completed.
        //
        g_bI2CMBatchDone = true;
    }
}

//
// The function that is provided by this example as a callback when batched I2C
// write transactions have completed.
//
void
I2CMBatchWriteCallback(void *pvData, uint_fast8_t ui8Status)
{
    //
    // See if there is more data to be written.
    //
    if(ui8Status == I2CM_STATUS_BATCH_DONE)
    {
        //
        // Produce new data into g_pui8Data.
        //

        //
        // Resume the batched write.
        //
        I2CMTransferResume(&g_sI2CMBatchInst, g_pui8Data);
    }
    else
    {
        //
        // Indicate that the I2C batched write transaction has completed.
        //
        g_bI2CMBatchDone = true;
    }
}

//
// The batched I2C master driver example.
//
void
I2CMBatchExample(void)
{
    //
    // Initialize the I2C master driver. It is assumed that the I2C module has
    // already been enabled and the I2C pins have been configured.
    //
    I2CMInit(&g_sI2CMBatchInst, I2C0_BASE, INT_I2C0, 0xff, 0xff, 80000000);

    //
    // Write 8192 bytes of data to the I2C device at address 0x22 in 256 byte
    // batches.
    //
    g_bI2CMBatchDone = false;
    I2CMWriteBatched(&g_sI2CMBatchInst, 0x22, g_pui8Data, 8192, 256,
                    I2CMBatchWriteCallback, 0);
    while(!g_bI2CMBatchDone)
    {
    }
}

```

```
//  
// Read 8192 bytes of data from the I2C device at address 0x31 in 256 byte  
// batches.  
//  
g_bI2CMBatchDone = false;  
I2CMReadBatched(&g_sI2CMBatchInst, 0x31, g_pui8Data, 1, 1, g_pui8Data,  
                8192, 256, I2CMBatchReadCallback, 0);  
while(!g_bI2CMBatchDone)  
{  
}
```

9 ISL29023 Ambient Light Sensor Driver

Introduction	83
API Functions	83
Programming Example	88

9.1 Introduction

The ISL29023 is an ambient and infrared light sensor produced by Intersil. This driver allows the ISL29023 to be accessed via the I2C bus.

This driver is contained in `sensorlib/isl29023.c`, with `sensorlib/isl29023.h` containing the API declarations for use by applications.

9.2 API Functions

Functions

- void [ISL29023DataLightIRGetFloat](#) (tISL29023 *psInst, float *pfIR)
- void [ISL29023DataLightIRGetRaw](#) (tISL29023 *psInst, uint16_t *pui16IR)
- void [ISL29023DataLightVisibleGetFloat](#) (tISL29023 *psInst, float *pfVisibleLight)
- void [ISL29023DataLightVisibleGetRaw](#) (tISL29023 *psInst, uint16_t *pui16Visible)
- uint_fast8_t [ISL29023DataRead](#) (tISL29023 *psInst, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [ISL29023Init](#) (tISL29023 *psInst, tI2CInstance *psI2CInst, uint_fast8_t ui8I2CAddr, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [ISL29023Read](#) (tISL29023 *psInst, uint_fast8_t ui8Reg, uint8_t *pui8Data, uint_fast16_t ui16Count, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [ISL29023ReadModifyWrite](#) (tISL29023 *psInst, uint_fast8_t ui8Reg, uint8_t ui8Mask, uint8_t ui8Value, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [ISL29023Write](#) (tISL29023 *psInst, uint_fast8_t ui8Reg, uint8_t *pui8Data, uint_fast16_t ui16Count, tSensorCallback *pfnCallback, void *pvCallbackData)

9.2.1 Function Documentation

9.2.1.1 ISL29023DataLightIRGetFloat

Gets the measurement data from the most recent data read.

Prototype:

```
void
ISL29023DataLightIRGetFloat (tISL29023 *psInst,
                             float *pfIR)
```

Parameters:

psInst is a pointer to the ISL29023 instance data.

pfIR is a pointer to the value into which the IR data is stored as floating point lux.

Description:

This function returns the IR data from the most recent data read, converted into lux.

Returns:

None.

9.2.1.2 ISL29023DataLightIRGetRaw

Gets the raw measurement data from the most recent data read.

Prototype:

```
void
ISL29023DataLightIRGetRaw (tISL29023 *psInst,
                           uint16_t *pui16IR)
```

Parameters:

psInst is a pointer to the ISL29023 instance data.

pui16IR is a pointer to the value into which the raw IR data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

9.2.1.3 ISL29023DataLightVisibleGetFloat

Gets the measurement data from the most recent data read.

Prototype:

```
void
ISL29023DataLightVisibleGetFloat (tISL29023 *psInst,
                                   float *pfVisibleLight)
```

Parameters:

psInst is a pointer to the ISL29023 instance data.

pfVisibleLight is a pointer to the value into which the light data is stored as floating point lux.

Description:

This function returns the light data from the most recent data read, converted into lux.

Returns:

None.

9.2.1.4 ISL29023DataLightVisibleGetRaw

Gets the raw measurement data from the most recent data read.

Prototype:

```
void  
ISL29023DataLightVisibleGetRaw(tISL29023 *psInst,  
                               uint16_t *pui16Visible)
```

Parameters:

psInst is a pointer to the ISL29023 instance data.

pui16Visible is a pointer to the value into which the raw light data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

9.2.1.5 ISL29023DataRead

Reads the light data from the ISL29023.

Prototype:

```
uint_fast8_t  
ISL29023DataRead(tISL29023 *psInst,  
                 tSensorCallback *pfnCallback,  
                 void *pvCallbackData)
```

Parameters:

psInst is a pointer to the ISL29023 instance data.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a read of the ISL29023 data registers. When the read has completed (as indicated by calling the callback function), the new readings can be obtained via:

- [ISL29023DataLightVisibleGetRaw\(\)](#)
- [ISL29023DataLightVisibleGetFloat\(\)](#)
- [ISL29023DataLightIRGetRaw\(\)](#)
- [ISL29023DataLightIRGetFloat\(\)](#)

Returns:

Returns 1 if the read was successfully started and 0 if it was not.

9.2.1.6 ISL29023Init

Initializes the ISL29023 driver.

Prototype:

```
uint_fast8_t
ISL29023Init(tISL29023 *psInst,
             tI2CInstance *psI2CInst,
             uint_fast8_t ui8I2CAddr,
             tSensorCallback *pfnCallback,
             void *pvCallbackData)
```

Parameters:

psInst is a pointer to the ISL29023 instance data.

psI2CInst is a pointer to the I2C driver instance data.

ui8I2CAddr is the I2C address of the ISL29023 device.

pfnCallback is the function to be called when the initialization has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initializes the ISL29023 driver, preparing it for operation. This function also asserts a reset signal to the ISL29023 to clear any previous configuration data.

Returns:

Returns 1 if the ISL29023 driver was successfully initialized and 0 if it was not.

9.2.1.7 ISL29023Read

Reads data from ISL29023 registers.

Prototype:

```
uint_fast8_t
ISL29023Read(tISL29023 *psInst,
             uint_fast8_t ui8Reg,
             uint8_t *pui8Data,
             uint_fast16_t ui16Count,
             tSensorCallback *pfnCallback,
             void *pvCallbackData)
```

Parameters:

psInst is a pointer to the ISL29023 instance data.

ui8Reg is the first register to read.

pui8Data is a pointer to the location to store the data that is read.

ui16Count is the number of data bytes to read.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function reads a sequence of data values from consecutive registers in the ISL29023.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

9.2.1.8 ISL29023ReadModifyWrite

Performs a read-modify-write of an ISL29023 register.

Prototype:

```
uint_fast8_t
ISL29023ReadModifyWrite(tISL29023 *psInst,
                        uint_fast8_t ui8Reg,
                        uint8_t ui8Mask,
                        uint8_t ui8Value,
                        tSensorCallback *pfnCallback,
                        void *pvCallbackData)
```

Parameters:

psInst is a pointer to the ISL29023 instance data.

ui8Reg is the register to modify.

ui8Mask is the bit mask that is ANDed with the current register value.

ui8Value is the bit mask that is ORed with the result of the AND operation.

pfnCallback is the function to be called when the data has been changed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function changes the value of a register in the ISL29023 via a read-modify-write operation, allowing one of the fields to be changed without disturbing the other fields. The *ui8Reg* register is read, ANDed with *ui8Mask*, ORed with *ui8Value*, and then written back to the ISL29023.

Returns:

Returns 1 if the read-modify-write was successfully started and 0 if it was not.

9.2.1.9 ISL29023Write

Write register data to the ISL29023.

Prototype:

```
uint_fast8_t
ISL29023Write(tISL29023 *psInst,
              uint_fast8_t ui8Reg,
              uint8_t *pui8Data,
              uint_fast16_t ui16Count,
              tSensorCallback *pfnCallback,
              void *pvCallbackData)
```

Parameters:

psInst is a pointer to the ISL29023 instance data.

ui8Reg is the first register to write.

pui8Data is a pointer to the data to write.

ui16Count is the number of data bytes to write.

pfnCallback is the function to be called when the data has been written (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function writes a sequence of data values to consecutive registers in the ISL29023. The first byte of the *pui8Data* buffer contains the value to be written into the *ui8Reg* register, the second value contains the data to be written into the next register, and so on.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

9.3 Programming Example

The following example shows how to initialize the ISL29023 and read light data from it.

```
//
// A boolean that is set when a ISL29023 command has completed.
//
volatile bool g_bISL29023Done;

//
// The function that is provided by this example as a callback when ISL29023
// transactions have completed.
//
void
ISL29023Callback(void *pvCallbackData, uint_fast8_t ui8Status)
{
    //
    // See if an error occurred.
    //
    if(ui8Status != I2CM_STATUS_SUCCESS)
    {
        //
        // An error occurred, so handle it here if required.
        //
    }

    //
    // Indicate that the ISL29023 transaction has completed.
    //
    g_bISL29023Done = true;
}

//
// The ISL29023 example.
//
void
ISL29023Example(void)
{
    tI2CMInstance sI2CInst;
    tISL29023 sISL29023;
    float fVisible, fIR;

    //
    // Initialize the ISL29023. This code assumes that the I2C master instance
    // has already been initialized.
    //
}
```



```
g_bISL29023Done = false;
ISL29023Init(&sISL29023, &sI2CInst, 0x44, ISL29023Callback, 0);
while(!g_bISL29023Done)
{
    //
    // Loop forever reading data from the ISL29023. Typically, this process
    // would be done in the background, but for the purposes of this example,
    // it is shown in an infinite loop.
    //
    while(1)
    {
        //
        // Request another reading from the ISL29023.
        //
        g_bISL29023Done = false;
        ISL29023DataRead(&sISL29023, ISL29023Callback, 0);
        while(!g_bISL29023Done)
        {
            //
            // Get the new light readings.
            //
            ISL29023DataLightVisibleGetFloat(&sISL29023, &fVisible);
            ISL29023DataLightIRGetFloat(&sISL29023, &fIR);

            //
            // Do something with the new light readings.
            //
        }
    }
}
```


10 Magnetometer Module

Introduction	91
API Functions	91
Programming Example	93

10.1 Introduction

The magnetometer module provides a set of magnetometer-independent functions for performing common operations on the data captured by a magnetometer. These functions operate on the data obtained from any magnetometer and are unit-agnostic because they depend only upon the relative magnitude of the readings.

The magnetometer compensation routines provide hard- and soft-iron compensation of the magnetometer reads. Iron in the proximity of the magnetometer causes local disturbances in the earth's magnetic field; these disturbances can be measured with the magnetometer and canceled via the compensation routines ([MagnetCompensateInit\(\)](#) and [MagnetCompensate\(\)](#)).

The magnetometer reading can be combined with tilt information from an accelerometer to produce a tilt-compensated compass. The [MagnetHeadingCompute\(\)](#) function performs this operation; which should be done after hard- and soft-iron compensation for improved accuracy.

This module is contained in `sensorlib/magneto.c`, with `sensorlib/magneto.h` containing the API declarations for use by applications.

10.2 API Functions

Functions

- void [MagnetCompensate](#) (tMagnetCompensation *psInst, float *pfMagnetX, float *pfMagnetY, float *pfMagnetZ)
- void [MagnetCompensateInit](#) (tMagnetCompensation *psInst, float fXOffset, float fYOffset, float fZOffset, float fXYAngle, float fYRatio, float fXZAngle, float fZRatio)
- float [MagnetHeadingCompute](#) (float fMagnetX, float fMagnetY, float fMagnetZ, float fRoll, float fPitch)

10.2.1 Function Documentation

10.2.1.1 MagnetCompensate

Performs hard- and soft-iron compensation on magnetometer readings.

Prototype:

```
void
MagnetCompensate(tMagnetCompensation *psInst,
                 float *pfMagnetX,
```

```
float *pfMagnetoyY,  
float *pfMagnetozZ)
```

Parameters:

psInst is a pointer to the magnetometer compensation state structure.

pfMagnetoxX is a pointer to the magnetometer X-axis reading.

pfMagnetoyY is a pointer to the magnetometer Y-axis reading.

pfMagnetozZ is a pointer to the magnetometer Z-axis reading.

Description:

This function performs hard- and soft-iron compensation on the given magnetometer reading. Hard-iron distortions cause a fixed offset in the reading, regardless of orientation. Hard-iron compensation is performed by negating this fixed offset.

Soft-iron distortion is more complicated, causing an offset that varies as the sensor rotates, which results in the sensor returning an ellipse as it rotates instead of a circle. Performing soft-iron compensation requires rotating the sensor reading such that the major axis of the ellipse is aligned with one of the magnetometer axes, scaling one of the axes, then rotating the scaled sensor reading back. This operation is performed two times; once to scale the Y axis to the same scale as the X axis, and once again to scale the Z axis to the same scale as the X axis.

Hard-iron compensation is performed prior to soft-iron compensation.

Returns:

None.

10.2.1.2 MagnetoCompensateInit

Initializes the magnetometer hard- and soft-iron compensation state.

Prototype:

```
void  
MagnetoCompensateInit (tMagnetocompensation *psInst,  
                        float fXOffset,  
                        float fYOffset,  
                        float fZOffset,  
                        float fXYAngle,  
                        float fYRatio,  
                        float fXZAngle,  
                        float fZRatio)
```

Parameters:

psInst is a pointer to the magnetometer compensation state structure.

fXOffset is the hard-iron compensation for the X axis.

fYOffset is the hard-iron compensation for the Y axis.

fZOffset is the hard-iron compensation for the Z axis.

fXYAngle is the amount to rotate around the Z axis prior to scaling the Y axis reading, in radians.

fYRatio is the amount to scale the Y axis reading.

fXZAngle is the amount to rotate around the Y axis prior to scaling the Z axis reading, in radians.

fZRatio is the amount to scale the Z axis reading.

Description:

This function initializes the magnetometer compensation state structure with the values that are used to perform hard- and soft-iron compensation of magnetometer readings.

Returns:

None.

10.2.1.3 MagnetoHeadingCompute

Computes the compass heading from magnetometer data and roll/pitch.

Prototype:

```
float  
MagnetoHeadingCompute(float fMagnetoX,  
                      float fMagnetoY,  
                      float fMagnetoZ,  
                      float fRoll,  
                      float fPitch)
```

Parameters:

fMagnetoX is the X component of the magnetometer reading.

fMagnetoY is the Y component of the magnetometer reading.

fMagnetoZ is the Z component of the magnetometer reading.

fRoll is the roll angle, in radians.

fPitch is the pitch angle, in radians.

Description:

This function computes the compass heading by performing tilt compensation on the magnetometer reading.

Returns:

Returns the compass heading, in radians.

10.3 Programming Example

The following example shows how to perform hard- and soft-iron compensation on magnetometer readings.

```
void  
MagnetoCompensateExample(void)  
{  
    float fMagnetoX, fMagnetoY, fMagnetoZ;  
    tMagnetoCompensation sMagComp;  
  
    //  
    // Initialize the magnetometer compensation. In this example, measurements  
    // have shown a hard-iron distortion of (0.05, -0.03, 0.025) and a  
    // soft-iron distortion of 0.9 in the Y axis after a 52 degree rotation and  
    // 0.89 in the Z axis after a -33 degree rotation.
```

```
//
MagnetoCompensateInit(&sMagComp, 0.05, -0.03, 0.025, (52.0 * M_PI) / 180.0,
                     0.9, (-33.0 * M_PI) / 180.0, 0.9);

//
// Loop reading magnetometer values. Typically, this process would be done
// in the background, but for the purposes of this example, it is shown in
// an infinite loop.
//
while(1)
{
    //
    // Read the updated magnetometer value.
    //

    //
    // Perform hard- and soft-iron compensation on the magnetometer
    // reading.
    //
    MagnetoCompensate(&sMagComp, &fMagnetox, &fMagnetoy, &fMagnetoz);
}
}
```

The following example shows how to compute the compass heading from magnetometer readings. For the purposes of this example, a fixed 5 degree roll and 7.5 degree pitch is assumed for the sensor platform. Normally an accelerometer or a fusion algorithm would be used to dynamically compute the roll and pitch of the sensor platform.

```
void
MagnetoCompassExample(void)
{
    float fMagnetox, fMagnetoy, fMagnetoz, fHeading;

    //
    // Loop reading magnetometer values. Typically, this process would be done
    // in the background, but for the purposes of this example, it is shown in
    // an infinite loop.
    //
    while(1)
    {
        //
        // Read the updated magnetometer value.
        //

        //
        // Compute the compass heading from the magnetometer reading.
        //
        fHeading = MagnetoHeadingCompute(fMagnetox, fMagnetoy, fMagnetoz,
                                         (5.0 * M_PI) / 180.0,
                                         (7.5 * M_PI) / 180.0);
    }
}
```

11 L3GD20H Gyroscope Driver

Introduction	95
API Functions	95
Programming Example	99

11.1 Introduction

The L3GD20H is a three-axis gyroscope produced by ST Inc. This driver allows the L3GD20H to be accessed via the I2C bus.

When initialized, a soft reset of the L3GD20H is performed, putting it into its default state. The default range of 245 degrees-per-second is selected.

This driver is contained in `sensorlib/l3gd20h.c`, with `sensorlib/l3gd20h.h` containing the API declarations for use by applications.

11.2 API Functions

Functions

- void [L3GD20HDataGyroGetFloat](#) (tL3GD20H *psInst, float *pfGyroX, float *pfGyroY, float *pfGyroZ)
- void [L3GD20HDataGyroGetRaw](#) (tL3GD20H *psInst, uint_fast16_t *pui16GyroX, uint_fast16_t *pui16GyroY, uint_fast16_t *pui16GyroZ)
- uint_fast8_t [L3GD20HDataRead](#) (tL3GD20H *psInst, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [L3GD20HInit](#) (tL3GD20H *psInst, tI2CInstance *psI2CInst, uint_fast8_t uiI2CAddr, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [L3GD20HRead](#) (tL3GD20H *psInst, uint_fast8_t ui8Reg, uint8_t *pui8Data, uint_fast16_t ui16Count, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [L3GD20HReadModifyWrite](#) (tL3GD20H *psInst, uint_fast8_t ui8Reg, uint_fast8_t ui8Mask, uint_fast8_t ui8Value, tSensorCallback *pfnCallback, void *pvCallbackData)
- uint_fast8_t [L3GD20HWrite](#) (tL3GD20H *psInst, uint_fast8_t ui8Reg, const uint8_t *pui8Data, uint_fast16_t ui16Count, tSensorCallback *pfnCallback, void *pvCallbackData)

11.2.1 Function Documentation

11.2.1.1 L3GD20HDataGyroGetFloat

Gets the gyroscope data from the most recent data read.

Prototype:

```
void
L3GD20HDataGyroGetFloat (tL3GD20H *psInst,
```

```
float *pfGyroX,  
float *pfGyroY,  
float *pfGyroZ)
```

Parameters:

psInst is a pointer to the L3GD20H instance data.

pfGyroX is a pointer to the value into which the X-axis gyroscope data is stored.

pfGyroY is a pointer to the value into which the Y-axis gyroscope data is stored.

pfGyroZ is a pointer to the value into which the Z-axis gyroscope data is stored.

Description:

This function returns the gyroscope data from the most recent data read, converted into radians per second. If any of the output data pointers are **NULL**, the corresponding data is not provided.

Returns:

None.

11.2.1.2 L3GD20HDataGyroGetRaw

Gets the raw gyroscope data from the most recent data read.

Prototype:

```
void  
L3GD20HDataGyroGetRaw(tL3GD20H *psInst,  
                      uint_fast16_t *pui16GyroX,  
                      uint_fast16_t *pui16GyroY,  
                      uint_fast16_t *pui16GyroZ)
```

Parameters:

psInst is a pointer to the L3GD20H instance data.

pui16GyroX is a pointer to the value into which the raw X-axis gyroscope data is stored.

pui16GyroY is a pointer to the value into which the raw Y-axis gyroscope data is stored.

pui16GyroZ is a pointer to the value into which the raw Z-axis gyroscope data is stored.

Description:

This function returns the raw gyroscope data from the most recent data read. The data is not manipulated in any way by the driver. If any of the output data pointers are **NULL**, the corresponding data is not provided.

Returns:

None.

11.2.1.3 L3GD20HDataRead

Reads the gyroscope data from the L3GD20H.

Prototype:

```
uint_fast8_t  
L3GD20HDataRead(tL3GD20H *psInst,  
                tSensorCallback *pfCallback,  
                void *pvCallbackData)
```


Parameters:

psInst is a pointer to the L3GD20H instance data.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a read of the L3GD20H data registers. When the read has completed (as indicated by calling the callback function), the new readings can be obtained via:

- [L3GD20HDataGyroGetRaw\(\)](#)
- [L3GD20HDataGyroGetFloat\(\)](#)

Returns:

Returns 1 if the read was successfully started and 0 if it was not.

11.2.1.4 L3GD20HInit

Initializes the L3GD20H driver.

Prototype:

```
uint_fast8_t
L3GD20HInit (tL3GD20H *psInst,
             tI2CInstance *psI2CInst,
             uint_fast8_t ui8I2CAddr,
             tSensorCallback *pfnCallback,
             void *pvCallbackData)
```

Parameters:

psInst is a pointer to the L3GD20H instance data.

psI2CInst is a pointer to the I2C master driver instance data.

ui8I2CAddr is the I2C address of the L3GD20H device.

pfnCallback is the function to be called when the initialization has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initializes the L3GD20H driver, preparing it for operation.

Returns:

Returns 1 if the L3GD20H driver was successfully initialized and 0 if it was not.

11.2.1.5 L3GD20HRead

Reads data from L3GD20H registers.

Prototype:

```
uint_fast8_t
L3GD20HRead (tL3GD20H *psInst,
             uint_fast8_t ui8Reg,
```

```
uint8_t *pui8Data,  
uint_fast16_t ui16Count,  
tSensorCallback *pfncallback,  
void *pvCallbackData)
```

Parameters:

psInst is a pointer to the L3GD20H instance data.

ui8Reg is the first register to read.

pui8Data is a pointer to the location to store the data that is read.

ui16Count is the number of data bytes to read.

pfncallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function reads a sequence of data values from consecutive registers in the L3GD20H.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

11.2.1.6 L3GD20HReadModifyWrite

Performs a read-modify-write of a L3GD20H register.

Prototype:

```
uint_fast8_t  
L3GD20HReadModifyWrite (tL3GD20H *psInst,  
                        uint_fast8_t ui8Reg,  
                        uint_fast8_t ui8Mask,  
                        uint_fast8_t ui8Value,  
                        tSensorCallback *pfncallback,  
                        void *pvCallbackData)
```

Parameters:

psInst is a pointer to the L3GD20H instance data.

ui8Reg is the register to modify.

ui8Mask is the bit mask that is ANDed with the current register value.

ui8Value is the bit mask that is ORed with the result of the AND operation.

pfncallback is the function to be called when the data has been changed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function changes the value of a register in the L3GD20H via a read-modify-write operation, allowing one of the fields to be changed without disturbing the other fields. The **ui8Reg** register is read, ANDed with **ui8Mask**, ORed with **ui8Value**, and then written back to the L3GD20H.

Returns:

Returns 1 if the read-modify-write was successfully started and 0 if it was not.

11.2.1.7 L3GD20HWrite

Writes data to L3GD20H registers.

Prototype:

```
uint_fast8_t
L3GD20HWrite(tL3GD20H *psInst,
             uint_fast8_t ui8Reg,
             const uint8_t *pui8Data,
             uint_fast16_t ui16Count,
             tSensorCallback *pfnCallback,
             void *pvCallbackData)
```

Parameters:

psInst is a pointer to the L3GD20H instance data.

ui8Reg is the first register to write.

pui8Data is a pointer to the data to write.

ui16Count is the number of data bytes to write.

pfnCallback is the function to be called when the data has been written (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function writes a sequence of data values to consecutive registers in the L3GD20H. The first byte of the *pui8Data* buffer contains the value to be written into the *ui8Reg* register, the second value contains the data to be written into the next register, and so on.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

11.3 Programming Example

The following example shows how to initialize the L3GD20H, select 500 deg/sec range for the gyrometer, and read rotation data from it.

```
//
// A boolean that is set when a L3GD20H command has completed.
//
volatile bool g_bl3gd20hDone;

//
// The function that is provided by this example as a callback when L3GD20H
// transactions have completed.
//
void
l3gd20hCallback(void *pvCallbackData, uint_fast8_t ui8Status)
{
    //
    // See if an error occurred.
    //
    if(ui8Status != I2CM_STATUS_SUCCESS)
    {
        //
        // An error occurred, so handle it here if required.
    }
}
```

```
        //
    }

    //
    // Indicate that the L3GD20H transaction has completed.
    //
    g_bl3gd20hDone = true;
}

//
// The L3GD20H example.
//
void
l3gd20hExample(void)
{
    float fGyro[3];
    tI2CInstance sI2CInst;
    tL3GD20H sl3gd20h;

    //
    // Initialize the L3GD20H. This code assumes that the I2C master instance
    // has already been initialized.
    //
    g_bl3gd20hDone = false;
    L3GD20HInit(&sl3gd20h, &sI2CInst, 0x68, l3gd20hCallback, 0);
    while(!g_bl3gd20hDone)
    {
    }

    //
    // Configure the L3GD20H for 500 deg/sec sensitivity
    //
    g_bl3gd20hDone = false;
    L3GD20HReadModifyWrite(&sl3gd20h, L3GD20H_O_CTRL4,
                           ~L3GD20H_CTRL4_FS_M,
                           L3GD20H_CTRL4_FS_500DPS, l3gd20hCallback,
                           0);
    while(!g_bl3gd20hDone)
    {
    }

    //
    // Loop forever reading data from the L3GD20H. Typically, this process
    // would be done in the background, but for the purposes of this example,
    // it is shown in an infinite loop.
    //
    while(1)
    {
        //
        // Request another reading from the L3GD20H.
        //
        g_bl3gd20hDone = false;
        L3GD20HDataRead(&sl3gd20h, l3gd20hCallback, 0);
        while(!g_bl3gd20hDone)
        {
        }

        //
        // Get the new gyroscope readings.
        //
        L3GD20HDataGyroGetFloat(&sl3gd20h, &fGyro[0], &fGyro[1], &fGyro[2]);

        //
        // Do something with the new gyroscope readings.
        //
    }
}
```

}

12 LSM303D Accelerometer and Magnetometer Driver

Introduction	103
API Functions	103
Programming Example	103

12.1 Introduction

The LSM303D is an integrated three-axis accelerometer and magnetometer produced by ST Inc. This driver allows the LSM303D to be accessed via the I2C bus.

When initialized, zeros are written to all device registers, putting it into its default state. The default accelerometer range of +/- 2 g and magnetometer sensitivity of +/- 2 gauss are therefore selected.

This driver is contained in `sensorlib/lsm303d.c`, with `sensorlib/lsm303d.h` containing the API declarations for use by applications.

12.2 API Functions

12.3 Programming Example

The following example shows how to initialize the LSM303D, select the +/- 4 g range for the accelerometer, and read acceleration and magnetic field strength data from it.

```
//
// A boolean that is set when a LSM303D command has completed.
//
volatile bool g_bLSM303DDone;

//
// The function that is provided by this example as a callback when LSM303D
// transactions have completed.
//
void
LSM303DCallback(void *pvCallbackData, uint_fast8_t ui8Status)
{
    //
    // See if an error occurred.
    //
    if(ui8Status != I2CM_STATUS_SUCCESS)
    {
        //
        // An error occurred, so handle it here if required.
        //
    }

    //
    // Indicate that the LSM303D transaction has completed.
    //
    g_bLSM303DDone = true;
}
```

```
}

//
// The LSM303D example.
//
void
LSM303DExample(void)
{
    float fAccel[3], fMag[3];
    tI2CInstance sI2CInst;
    tLSM303D sLSM303D;

    //
    // Initialize the LSM303D. This code assumes that the I2C master instance
    // has already been initialized.
    //
    g_bLSM303DDone = false;
    LSM303DInit(&sLSM303D, &sI2CInst, 0x68, LSM303DCallback, 0);
    while(!g_bLSM303DDone)
    {
    }

    //
    // Configure the LSM303D for +/- 4 g accelerometer range.
    //
    g_bLSM303DDone = false;
    LSM303DReadModifyWrite(&sLSM303D, LSM303D_O_CTRL2,
                           ~LSM303D_CTRL2_AFS_M,
                           LSM303D_CTRL2_AFS_4G, LSM303DCallback,
                           0);
    while(!g_bLSM303DDone)
    {
    }

    //
    // Loop forever reading data from the LSM303D. Typically, this process
    // would be done in the background, but for the purposes of this example,
    // it is shown in an infinite loop.
    //
    while(1)
    {
        //
        // Request another reading from the LSM303D.
        //
        g_bLSM303DDone = false;
        LSM303DDataRead(&sLSM303D, LSM303DCallback, 0);
        while(!g_bLSM303DDone)
        {
        }

        //
        // Get the new accelerometer and magnetometer readings.
        //
        LSM303DDataAccelGetFloat(&sLSM303D, &fAccel[0], &fAccel[1],
                                &fAccel[2]);
        LSM303DDataMagnetoGetFloat(&sLSM303D, &fMag[0], &fMag[1], &fMag[2]);

        //
        // Do something with the new accelerometer and magnetometer readings.
        //
    }
}
```


13 LSM303DLHCAccel Accelerometer Driver

Introduction	105
API Functions	105
Programming Example	105

13.1 Introduction

The LSM303DLHC is an integrated three-axis accelerometer and magnetometer produced by ST Inc. Unlike the LSM303D, the LSM303DLHC uses different I2C slave addresses for the accelerometer and the magnetometer. The LSM303DLHC support is, therefore, broken into two modules. This driver allows the accelerometer portion of the LSM303DLHC to be accessed via the I2C bus.

There is no soft reset for the LSM303DLHC. The device is brought to its default configuration by bursting the POR default values into all RW registers. The default accelerometer range of +/- 2 g is therefore selected.

This driver is contained in `sensorlib/lsm303dlhcaccel.c`, with `sensorlib/lsm303dlhcaccel.h` containing the API declarations for use by applications.

13.2 API Functions

13.3 Programming Example

The following example shows how to initialize the LSM303DLHCAccel, select the +/- 4 g range for the accelerometer, and read acceleration and rotation data from it.

```
//
// A boolean that is set when a LSM303DLHCAccel command has completed.
//
volatile bool g_LSM303DLHCAccelDone;

//
// The function that is provided by this example as a callback when LSM303DLHCAccel
// transactions have completed.
//
void
LSM303DLHCAccelCallback(void *pvCallbackData, uint_fast8_t ui8Status)
{
    //
    // See if an error occurred.
    //
    if(ui8Status != I2CM_STATUS_SUCCESS)
    {
        //
        // An error occurred, so handle it here if required.
        //
    }

    //
}
```

```

        // Indicate that the LSM303DLHCAccel transaction has completed.
        //
        g_bLSM303DLHCAccelDone = true;
    }

    //
    // The LSM303DLHCAccel example.
    //
    void
    LSM303DLHCAccelExample(void)
    {
        float fAccel[3];
        tI2CInstance sI2CInst;
        tLSM303DLHCAccel sLSM303DLHCAccel;

        //
        // Initialize the LSM303DLHCAccel. This code assumes that the I2C master
        // instance has already been initialized.
        //
        g_bLSM303DLHCAccelDone = false;
        LSM303DLHCAccelInit(&sLSM303DLHCAccel, &sI2CInst, 0x68,
                           LSM303DLHCAccelCallback, 0);
        while(!g_bLSM303DLHCAccelDone)
        {
            //
            // Configure the LSM303DLHCAccel for +/- 4 g accelerometer range.
            //
            g_bLSM303DLHCAccelDone = false;
            LSM303DLHCAccelReadModifyWrite(&sLSM303DLHCAccel, LSM303DLHC_O_CTRL4,
                                           ~LSM303DLHC_CTRL4_FS_M,
                                           LSM303DLHC_CTRL4_FS_4G, LSM303DLHCAccelCallback,
                                           0);
            while(!g_bLSM303DLHCAccelDone)
            {
                //
                // Loop forever reading data from the LSM303DLHCAccel. Typically, this
                // process would be done in the background, but for the purposes of this
                // example, it is shown in an infinite loop.
                //
                while(1)
                {
                    //
                    // Request another reading from the LSM303DLHCAccel.
                    //
                    g_bLSM303DLHCAccelDone = false;
                    LSM303DLHCAccelDataRead(&sLSM303DLHCAccel, LSM303DLHCAccelCallback, 0);
                    while(!g_bLSM303DLHCAccelDone)
                    {
                        //
                        // Get the new accelerometer readings.
                        //
                        LSM303DLHCAccelDataAccelGetFloat(&sLSM303DLHCAccel, &fAccel[0],
                                                         &fAccel[1], &fAccel[2]);

                        //
                        // Do something with the new accelerometer readings.
                        //
                    }
                }
            }
        }
    }

```

14 LSM303DLHCMag Magnetometer Driver

Introduction	107
API Functions	107
Programming Example	107

14.1 Introduction

The LSM303DLHC is an integrated three-axis accelerometer and magnetometer produced by ST Inc. Unlike the LSM303D, the LSM303DLHC uses different I2C slave addresses for the accelerometer and the magnetometer. The LSM303DLHC support is, therefore, broken into two modules. This driver allows the magnetometer portion of the LSM303DLHC to be accessed via the I2C bus.

There is no soft reset for the LSM303DLHC. The device is brought to its default configuration by bursting the POR default values into all RW registers. The default magnetometer sensitivity of +/- 1.3 gauss is therefore selected.

This driver is contained in `sensorlib/lsm303dlhcmag.c`, with `sensorlib/lsm303dlhcmag.h` containing the API declarations for use by applications.

14.2 API Functions

14.3 Programming Example

The following example shows how to initialize the LSM303DLHCMag, selecting +/- 2.5 gauss range for the magnetometer and reading magnetic field data from it.

```
//
// A boolean that is set when a LSM303DLHCMag command has completed.
//
volatile bool g_bLSM303DLHCMagDone;

//
// The function that is provided by this example as a callback when LSM303DLHCMag
// transactions have completed.
//
void
LSM303DLHCMagCallback(void *pvCallbackData, uint_fast8_t ui8Status)
{
    //
    // See if an error occurred.
    //
    if(ui8Status != I2CM_STATUS_SUCCESS)
    {
        //
        // An error occurred, so handle it here if required.
        //
    }

    //
}
```

```
// Indicate that the LSM303DLHCMag transaction has completed.
//
g_bLSM303DLHCMagDone = true;
}

//
// The LSM303DLHCMag example.
//
void
LSM303DLHCMagExample(void)
{
    float fMag[3];
    tI2CInstance sI2CInst;
    tLSM303DLHCMag sLSM303DLHCMag;

    //
    // Initialize the LSM303DLHCMag. This code assumes that the I2C master instance
    // has already been initialized.
    //
    g_bLSM303DLHCMagDone = false;
    LSM303DLHCMagInit(&sLSM303DLHCMag, &sI2CInst, 0x68, LSM303DLHCMagCallback, 0);
    while(!g_bLSM303DLHCMagDone)
    {
        //
        // Configure the LSM303DLHCMag for +/- 2.5 gauss sensitivity
        //
        g_bLSM303DLHCMagDone = false;
        LSM303DLHCMagReadModifyWrite(&sLSM303DLHCMag, LSM303DLHC_O_MAG_CRB,
                                     ~LSM303DLHC_MAG_CRB_GAIN_M,
                                     LSM303DLHC_MAG_CRB_GAIN_2_5GAUSS, LSM303DLHCMagCallback,
                                     0);
        while(!g_bLSM303DLHCMagDone)
        {
            //
            // Loop forever reading data from the LSM303DLHCMag. Typically, this process
            // would be done in the background, but for the purposes of this example,
            // it is shown in an infinite loop.
            //
            while(1)
            {
                //
                // Request another reading from the LSM303DLHCMag.
                //
                g_bLSM303DLHCMagDone = false;
                LSM303DLHCMagDataRead(&sLSM303DLHCMag, LSM303DLHCMagCallback, 0);
                while(!g_bLSM303DLHCMagDone)
                {
                    //
                    // Get the new magnetometer readings.
                    //
                    LSM303DLHCMagDataGetFloat(&sLSM303DLHCMag, &fMag[0], &fMag[1], &fMag[2]);

                    //
                    // Do something with the new magnetometer readings.
                    //
                }
            }
        }
    }
}
```

15 MPU6050 Accelerometer and Gyroscope Driver

Introduction	109
API Functions	109
Programming Example	114

15.1 Introduction

The MPU6050 is an integrated three-axis accelerometer and gyroscope produced by Invensense Inc. In addition to an internal accelerometer and gyroscope, this device has an auxiliary I2C bus that can be used to automatically sample external sensors. This driver allows the MPU6050 to be accessed via the I2C bus.

When initialized, a soft reset of the MPU6050 is performed, putting it into its default state. The default accelerometer range of +/- 2 g and gyroscope range of 250 degrees/second are therefore selected.

This driver is contained in `sensorlib/mpu6050.c`, with `sensorlib/mpu6050.h` containing the API declarations for use by applications.

15.2 API Functions

Functions

- void [MPU6050DataAccelGetFloat](#) (tMPU6050 *psInst, float *pfAccelX, float *pfAccelY, float *pfAccelZ)
- void [MPU6050DataAccelGetRaw](#) (tMPU6050 *psInst, uint_fast16_t *pui16AccelX, uint_fast16_t *pui16AccelY, uint_fast16_t *pui16AccelZ)
- void [MPU6050DataGyroGetFloat](#) (tMPU6050 *psInst, float *pfGyroX, float *pfGyroY, float *pfGyroZ)
- void [MPU6050DataGyroGetRaw](#) (tMPU6050 *psInst, uint_fast16_t *pui16GyroX, uint_fast16_t *pui16GyroY, uint_fast16_t *pui16GyroZ)
- uint_fast8_t [MPU6050DataRead](#) (tMPU6050 *psInst, tSensorCallback *pfCallback, void *pvCallbackData)
- uint_fast8_t [MPU6050Init](#) (tMPU6050 *psInst, tI2CInstance *psI2CInst, uint_fast8_t ui8I2CAddr, tSensorCallback *pfCallback, void *pvCallbackData)
- uint_fast8_t [MPU6050Read](#) (tMPU6050 *psInst, uint_fast8_t ui8Reg, uint8_t *pui8Data, uint_fast16_t ui16Count, tSensorCallback *pfCallback, void *pvCallbackData)
- uint_fast8_t [MPU6050ReadModifyWrite](#) (tMPU6050 *psInst, uint_fast8_t ui8Reg, uint_fast8_t ui8Mask, uint_fast8_t ui8Value, tSensorCallback *pfCallback, void *pvCallbackData)
- uint_fast8_t [MPU6050Write](#) (tMPU6050 *psInst, uint_fast8_t ui8Reg, const uint8_t *pui8Data, uint_fast16_t ui16Count, tSensorCallback *pfCallback, void *pvCallbackData)

15.2.1 Function Documentation

15.2.1.1 MPU6050DataAccelGetFloat

Gets the accelerometer data from the most recent data read.

Prototype:

```
void
MPU6050DataAccelGetFloat (tMPU6050 *psInst,
                          float *pfAccelX,
                          float *pfAccelY,
                          float *pfAccelZ)
```

Parameters:

psInst is a pointer to the MPU6050 instance data.

pfAccelX is a pointer to the value into which the X-axis accelerometer data is stored.

pfAccelY is a pointer to the value into which the Y-axis accelerometer data is stored.

pfAccelZ is a pointer to the value into which the Z-axis accelerometer data is stored.

Description:

This function returns the accelerometer data from the most recent data read, converted into meters per second squared (m/s^2). If any of the output data pointers are **NULL**, the corresponding data is not provided.

Returns:

None.

15.2.1.2 MPU6050DataAccelGetRaw

Gets the raw accelerometer data from the most recent data read.

Prototype:

```
void
MPU6050DataAccelGetRaw (tMPU6050 *psInst,
                        uint_fast16_t *pui16AccelX,
                        uint_fast16_t *pui16AccelY,
                        uint_fast16_t *pui16AccelZ)
```

Parameters:

psInst is a pointer to the MPU6050 instance data.

pui16AccelX is a pointer to the value into which the raw X-axis accelerometer data is stored.

pui16AccelY is a pointer to the value into which the raw Y-axis accelerometer data is stored.

pui16AccelZ is a pointer to the value into which the raw Z-axis accelerometer data is stored.

Description:

This function returns the raw accelerometer data from the most recent data read. The data is not manipulated in any way by the driver. If any of the output data pointers are **NULL**, the corresponding data is not provided.

Returns:

None.

15.2.1.3 MPU6050DataGyroGetFloat

Gets the gyroscope data from the most recent data read.

Prototype:

```
void
MPU6050DataGyroGetFloat (tMPU6050 *psInst,
                        float *pfGyroX,
                        float *pfGyroY,
                        float *pfGyroZ)
```

Parameters:

psInst is a pointer to the MPU6050 instance data.

pfGyroX is a pointer to the value into which the X-axis gyroscope data is stored.

pfGyroY is a pointer to the value into which the Y-axis gyroscope data is stored.

pfGyroZ is a pointer to the value into which the Z-axis gyroscope data is stored.

Description:

This function returns the gyroscope data from the most recent data read, converted into radians per second. If any of the output data pointers are **NULL**, the corresponding data is not provided.

Returns:

None.

15.2.1.4 MPU6050DataGyroGetRaw

Gets the raw gyroscope data from the most recent data read.

Prototype:

```
void
MPU6050DataGyroGetRaw (tMPU6050 *psInst,
                      uint_fast16_t *pui16GyroX,
                      uint_fast16_t *pui16GyroY,
                      uint_fast16_t *pui16GyroZ)
```

Parameters:

psInst is a pointer to the MPU6050 instance data.

pui16GyroX is a pointer to the value into which the raw X-axis gyroscope data is stored.

pui16GyroY is a pointer to the value into which the raw Y-axis gyroscope data is stored.

pui16GyroZ is a pointer to the value into which the raw Z-axis gyroscope data is stored.

Description:

This function returns the raw gyroscope data from the most recent data read. The data is not manipulated in any way by the driver. If any of the output data pointers are **NULL**, the corresponding data is not provided.

Returns:

None.

15.2.1.5 MPU6050DataRead

Reads the accelerometer and gyroscope data from the MPU6050.

Prototype:

```
uint_fast8_t
MPU6050DataRead(tMPU6050 *psInst,
                tSensorCallback *pfnCallback,
                void *pvCallbackData)
```

Parameters:

psInst is a pointer to the MPU6050 instance data.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a read of the MPU6050 data registers. When the read has completed (as indicated by calling the callback function), the new readings can be obtained via:

- [MPU6050DataAccelGetRaw\(\)](#)
- [MPU6050DataAccelGetFloat\(\)](#)
- [MPU6050DataGyroGetRaw\(\)](#)
- [MPU6050DataGyroGetFloat\(\)](#)

Returns:

Returns 1 if the read was successfully started and 0 if it was not.

15.2.1.6 MPU6050Init

Initializes the MPU6050 driver.

Prototype:

```
uint_fast8_t
MPU6050Init(tMPU6050 *psInst,
            tI2CInstance *psI2CInst,
            uint_fast8_t ui8I2CAddr,
            tSensorCallback *pfnCallback,
            void *pvCallbackData)
```

Parameters:

psInst is a pointer to the MPU6050 instance data.

psI2CInst is a pointer to the I2C master driver instance data.

ui8I2CAddr is the I2C address of the MPU6050 device.

pfnCallback is the function to be called when the initialization has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initializes the MPU6050 driver, preparing it for operation.

Returns:

Returns 1 if the MPU6050 driver was successfully initialized and 0 if it was not.

15.2.1.7 MPU6050Read

Reads data from MPU6050 registers.

Prototype:

```
uint_fast8_t
MPU6050Read(tMPU6050 *psInst,
            uint_fast8_t ui8Reg,
            uint8_t *pui8Data,
            uint_fast16_t ui16Count,
            tSensorCallback *pfnCallback,
            void *pvCallbackData)
```

Parameters:

psInst is a pointer to the MPU6050 instance data.

ui8Reg is the first register to read.

pui8Data is a pointer to the location to store the data that is read.

ui16Count is the number of data bytes to read.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function reads a sequence of data values from consecutive registers in the MPU6050.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

15.2.1.8 MPU6050ReadModifyWrite

Performs a read-modify-write of a MPU6050 register.

Prototype:

```
uint_fast8_t
MPU6050ReadModifyWrite(tMPU6050 *psInst,
                       uint_fast8_t ui8Reg,
                       uint_fast8_t ui8Mask,
                       uint_fast8_t ui8Value,
                       tSensorCallback *pfnCallback,
                       void *pvCallbackData)
```

Parameters:

psInst is a pointer to the MPU6050 instance data.

ui8Reg is the register to modify.

ui8Mask is the bit mask that is ANDed with the current register value.

ui8Value is the bit mask that is ORed with the result of the AND operation.

pfnCallback is the function to be called when the data has been changed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function changes the value of a register in the MPU6050 via a read-modify-write operation, allowing one of the fields to be changed without disturbing the other fields. The *ui8Reg* register is read, ANDed with *ui8Mask*, ORed with *ui8Value*, and then written back to the MPU6050.

Returns:

Returns 1 if the read-modify-write was successfully started and 0 if it was not.

15.2.1.9 MPU6050Write

Writes data to MPU6050 registers.

Prototype:

```
uint_fast8_t
MPU6050Write(tMPU6050 *psInst,
             uint_fast8_t ui8Reg,
             const uint8_t *pui8Data,
             uint_fast16_t ui16Count,
             tSensorCallback *pfnCallback,
             void *pvCallbackData)
```

Parameters:

psInst is a pointer to the MPU6050 instance data.

ui8Reg is the first register to write.

pui8Data is a pointer to the data to write.

ui16Count is the number of data bytes to write.

pfnCallback is the function to be called when the data has been written (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function writes a sequence of data values to consecutive registers in the MPU6050. The first byte of the *pui8Data* buffer contains the value to be written into the *ui8Reg* register, the second value contains the data to be written into the next register, and so on.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

15.3 Programming Example

The following example shows how to initialize the MPU6050, select the +/- 4 g range for the accelerometer, and read acceleration and rotation data from it.

```
//
// A boolean that is set when a MPU6050 command has completed.
//
volatile bool g_bMPU6050Done;

//
// The function that is provided by this example as a callback when MPU6050
```

```

// transactions have completed.
//
void
MPU6050Callback(void *pvCallbackData, uint_fast8_t ui8Status)
{
    //
    // See if an error occurred.
    //
    if(ui8Status != I2CM_STATUS_SUCCESS)
    {
        //
        // An error occurred, so handle it here if required.
        //
    }

    //
    // Indicate that the MPU6050 transaction has completed.
    //
    g_bMPU6050Done = true;
}

//
// The MPU6050 example.
//
void
MPU6050Example(void)
{
    float fAccel[3], fGyro[3];
    tI2CInstance sI2CInst;
    tMPU6050 sMPU6050;

    //
    // Initialize the MPU6050. This code assumes that the I2C master instance
    // has already been initialized.
    //
    g_bMPU6050Done = false;
    MPU6050Init(&sMPU6050, &sI2CInst, 0x68, MPU6050Callback, 0);
    while(!g_bMPU6050Done)
    {
    }

    //
    // Configure the MPU6050 for +/- 4 g accelerometer range.
    //
    g_bMPU6050Done = false;
    MPU6050ReadModifyWrite(&sMPU6050, MPU6050_O_ACCEL_CONFIG,
                           ~MPU6050_ACCEL_CONFIG_AFS_SEL_M,
                           MPU6050_ACCEL_CONFIG_AFS_SEL_4G, MPU6050Callback,
                           0);
    while(!g_bMPU6050Done)
    {
    }

    //
    // Loop forever reading data from the MPU6050. Typically, this process
    // would be done in the background, but for the purposes of this example,
    // it is shown in an infinite loop.
    //
    while(1)
    {
        //
        // Request another reading from the MPU6050.
        //
        g_bMPU6050Done = false;
        MPU6050DataRead(&sMPU6050, MPU6050Callback, 0);
        while(!g_bMPU6050Done)

```

```
    {  
    }  
  
    //  
    // Get the new accelerometer and gyroscope readings.  
    //  
    MPU6050DataAccelGetFloat(&sMPU6050, &fAccel[0], &fAccel[1],  
                             &fAccel[2]);  
    MPU6050DataGyroGetFloat(&sMPU6050, &fGyro[0], &fGyro[1], &fGyro[2]);  
  
    //  
    // Do something with the new accelerometer and gyroscope readings.  
    //  
    }  
}
```

16 MPU9150 Accelerometer, Gyroscope, and Magnetometer Driver

Introduction	117
API Functions	117
Programming Example	124

16.1 Introduction

The MPU9150 is an integrated three-axis accelerometer, gyroscope, and magnetometer produced by InvenSense Inc. In addition to an internal accelerometer, gyroscope, and magnetometer, this device has an auxiliary I2C bus that can be used to automatically sample external sensors. This driver allows the MPU9150 to be accessed via the I2C bus.

When initialized, a soft reset of the MPU9150 is performed, putting it into its default state. The default accelerometer range of +/- 2 g and gyroscope range of 250 degrees/second are therefore selected (the magnetometer does not have a configurable measurement range).

This driver is contained in `sensorlib/mpu9150.c`, with `sensorlib/mpu9150.h` containing the API declarations for use by applications.

16.2 API Functions

Functions

- void [MPU9150DataAccelGetFloat](#) (tMPU9150 *psInst, float *pfAccelX, float *pfAccelY, float *pfAccelZ)
- void [MPU9150DataAccelGetRaw](#) (tMPU9150 *psInst, uint_fast16_t *pui16AccelX, uint_fast16_t *pui16AccelY, uint_fast16_t *pui16AccelZ)
- void [MPU9150DataGyroGetFloat](#) (tMPU9150 *psInst, float *pfGyroX, float *pfGyroY, float *pfGyroZ)
- void [MPU9150DataGyroGetRaw](#) (tMPU9150 *psInst, uint_fast16_t *pui16GyroX, uint_fast16_t *pui16GyroY, uint_fast16_t *pui16GyroZ)
- void [MPU9150DataMagnetoGetFloat](#) (tMPU9150 *psInst, float *pfMagnetoX, float *pfMagnetoY, float *pfMagnetoZ)
- void [MPU9150DataMagnetoGetRaw](#) (tMPU9150 *psInst, uint_fast16_t *pui16MagnetoX, uint_fast16_t *pui16MagnetoY, uint_fast16_t *pui16MagnetoZ)
- uint_fast8_t [MPU9150DataRead](#) (tMPU9150 *psInst, tSensorCallback *pfCallback, void *pvCallbackData)
- uint_fast8_t [MPU9150Init](#) (tMPU9150 *psInst, tI2CInstance *psI2CInst, uint_fast8_t ui8I2CAddr, tSensorCallback *pfCallback, void *pvCallbackData)
- tAK8975 * [MPU9150MagnetInstGet](#) (tMPU9150 *psInst)
- uint_fast8_t [MPU9150Read](#) (tMPU9150 *psInst, uint_fast8_t ui8Reg, uint8_t *pui8Data, uint_fast16_t ui16Count, tSensorCallback *pfCallback, void *pvCallbackData)
- uint_fast8_t [MPU9150ReadModifyWrite](#) (tMPU9150 *psInst, uint_fast8_t ui8Reg, uint_fast8_t ui8Mask, uint_fast8_t ui8Value, tSensorCallback *pfCallback, void *pvCallbackData)

- `uint_fast8_t MPU9150Write` (`tMPU9150 *psInst`, `uint_fast8_t ui8Reg`, `const uint8_t *pui8Data`, `uint_fast16_t ui16Count`, `tSensorCallback *pfCallback`, `void *pvCallbackData`)

16.2.1 Function Documentation

16.2.1.1 MPU9150DataAccelGetFloat

Gets the accelerometer data from the most recent data read.

Prototype:

```
void
MPU9150DataAccelGetFloat (tMPU9150 *psInst,
                          float *pfAccelX,
                          float *pfAccelY,
                          float *pfAccelZ)
```

Parameters:

psInst is a pointer to the MPU9150 instance data.
pfAccelX is a pointer to the value into which the X-axis accelerometer data is stored.
pfAccelY is a pointer to the value into which the Y-axis accelerometer data is stored.
pfAccelZ is a pointer to the value into which the Z-axis accelerometer data is stored.

Description:

This function returns the accelerometer data from the most recent data read, converted into meters per second squared (m/s^2). If any of the output data pointers are **NULL**, the corresponding data is not provided.

Returns:

None.

16.2.1.2 MPU9150DataAccelGetRaw

Gets the raw accelerometer data from the most recent data read.

Prototype:

```
void
MPU9150DataAccelGetRaw (tMPU9150 *psInst,
                        uint_fast16_t *pui16AccelX,
                        uint_fast16_t *pui16AccelY,
                        uint_fast16_t *pui16AccelZ)
```

Parameters:

psInst is a pointer to the MPU9150 instance data.
pui16AccelX is a pointer to the value into which the raw X-axis accelerometer data is stored.
pui16AccelY is a pointer to the value into which the raw Y-axis accelerometer data is stored.
pui16AccelZ is a pointer to the value into which the raw Z-axis accelerometer data is stored.

Description:

This function returns the raw accelerometer data from the most recent data read. The data is not manipulated in any way by the driver. If any of the output data pointers are **NULL**, the corresponding data is not provided.

Returns:

None.

16.2.1.3 MPU9150DataGyroGetFloat

Gets the gyroscope data from the most recent data read.

Prototype:

```
void
MPU9150DataGyroGetFloat (tMPU9150 *psInst,
                        float *pfGyroX,
                        float *pfGyroY,
                        float *pfGyroZ)
```

Parameters:

psInst is a pointer to the MPU9150 instance data.

pfGyroX is a pointer to the value into which the X-axis gyroscope data is stored.

pfGyroY is a pointer to the value into which the Y-axis gyroscope data is stored.

pfGyroZ is a pointer to the value into which the Z-axis gyroscope data is stored.

Description:

This function returns the gyroscope data from the most recent data read, converted into radians per second. If any of the output data pointers are **NULL**, the corresponding data is not provided.

Returns:

None.

16.2.1.4 MPU9150DataGyroGetRaw

Gets the raw gyroscope data from the most recent data read.

Prototype:

```
void
MPU9150DataGyroGetRaw (tMPU9150 *psInst,
                      uint_fast16_t *pui16GyroX,
                      uint_fast16_t *pui16GyroY,
                      uint_fast16_t *pui16GyroZ)
```

Parameters:

psInst is a pointer to the MPU9150 instance data.

pui16GyroX is a pointer to the value into which the raw X-axis gyroscope data is stored.

pui16GyroY is a pointer to the value into which the raw Y-axis gyroscope data is stored.

pui16GyroZ is a pointer to the value into which the raw Z-axis gyroscope data is stored.

Description:

This function returns the raw gyroscope data from the most recent data read. The data is not manipulated in any way by the driver. If any of the output data pointers are **NULL**, the corresponding data is not provided.

Returns:

None.

16.2.1.5 MPU9150DataMagnetGetFloat

Gets the magnetometer data from the most recent data read.

Prototype:

```
void  
MPU9150DataMagnetGetFloat (tMPU9150 *psInst,  
                           float *pfMagnetX,  
                           float *pfMagnetY,  
                           float *pfMagnetZ)
```

Parameters:

psInst is a pointer to the MPU9150 instance data.

pfMagnetX is a pointer to the value into which the X-axis magnetometer data is stored.

pfMagnetY is a pointer to the value into which the Y-axis magnetometer data is stored.

pfMagnetZ is a pointer to the value into which the Z-axis magnetometer data is stored.

Description:

This function returns the magnetometer data from the most recent data read, converted into tesla. If any of the output data pointers are **NULL**, the corresponding data is not provided.

Returns:

None.

16.2.1.6 MPU9150DataMagnetGetRaw

Gets the raw magnetometer data from the most recent data read.

Prototype:

```
void  
MPU9150DataMagnetGetRaw (tMPU9150 *psInst,  
                         uint_fast16_t *pui16MagnetX,  
                         uint_fast16_t *pui16MagnetY,  
                         uint_fast16_t *pui16MagnetZ)
```

Parameters:

psInst is a pointer to the MPU9150 instance data.

pui16MagnetX is a pointer to the value into which the raw X-axis magnetometer data is stored.

pui16MagnetY is a pointer to the value into which the raw Y-axis magnetometer data is stored.

pui16MagnetZ is a pointer to the value into which the raw Z-axis magnetometer data is stored.

Description:

This function returns the raw magnetometer data from the most recent data read. The data is not manipulated in any way by the driver. If any of the output data pointers are **NULL**, the corresponding data is not provided.

Returns:

None.

16.2.1.7 MPU9150DataRead

Reads the accelerometer and gyroscope data from the MPU9150 and the magnetometer data from the on-chip aK8975.

Prototype:

```
uint_fast8_t
MPU9150DataRead(tMPU9150 *psInst,
                tSensorCallback *pfnCallback,
                void *pvCallbackData)
```

Parameters:

psInst is a pointer to the MPU9150 instance data.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a read of the MPU9150 data registers. When the read has completed (as indicated by calling the callback function), the new readings can be obtained via:

- [MPU9150DataAccelGetRaw\(\)](#)
- [MPU9150DataAccelGetFloat\(\)](#)
- [MPU9150DataGyroGetRaw\(\)](#)
- [MPU9150DataGyroGetFloat\(\)](#)
- [MPU9150DataMagnetoGetRaw\(\)](#)
- [MPU9150DataMagnetoGetFloat\(\)](#)

Returns:

Returns 1 if the read was successfully started and 0 if it was not.

16.2.1.8 MPU9150Init

Initializes the MPU9150 driver.

Prototype:

```
uint_fast8_t
MPU9150Init(tMPU9150 *psInst,
            tI2CInstance *psI2CInst,
            uint_fast8_t ui8I2CAddr,
            tSensorCallback *pfnCallback,
            void *pvCallbackData)
```

Parameters:

psInst is a pointer to the MPU9150 instance data.

psI2CInst is a pointer to the I2C master driver instance data.

ui8I2CAddr is the I2C address of the MPU9150 device.

pfnCallback is the function to be called when the initialization has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initializes the MPU9150 driver, preparing it for operation.

Returns:

Returns 1 if the MPU9150 driver was successfully initialized and 0 if it was not.

16.2.1.9 MPU9150MagnetInstGet

Returns the pointer to the tAK8975 object

Prototype:

```
tAK8975 *  
MPU9150MagnetInstGet (tMPU9150 *psInst)
```

Parameters:

psInst is a pointer to the MPU9150 instance data.

Description:

The MPU9150 contains an internal AK8975 magnetometer. To access data from that sensor, application should use this function to get a pointer to the tAK8975 object, and then use the AK8975 APIs.

Returns:

Returns the pointer to the tAK8975 object

16.2.1.10 MPU9150Read

Reads data from MPU9150 registers.

Prototype:

```
uint_fast8_t  
MPU9150Read(tMPU9150 *psInst,  
            uint_fast8_t ui8Reg,  
            uint8_t *pui8Data,  
            uint_fast16_t ui16Count,  
            tSensorCallback *pfnCallback,  
            void *pvCallbackData)
```

Parameters:

psInst is a pointer to the MPU9150 instance data.

ui8Reg is the first register to read.

pui8Data is a pointer to the location to store the data that is read.

ui16Count is the number of data bytes to read.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function reads a sequence of data values from consecutive registers in the MPU9150.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

16.2.1.11 MPU9150ReadModifyWrite

Performs a read-modify-write of a MPU9150 register.

Prototype:

```
uint_fast8_t
MPU9150ReadModifyWrite (tMPU9150 *psInst,
                        uint_fast8_t ui8Reg,
                        uint_fast8_t ui8Mask,
                        uint_fast8_t ui8Value,
                        tSensorCallback *pfnCallback,
                        void *pvCallbackData)
```

Parameters:

psInst is a pointer to the MPU9150 instance data.

ui8Reg is the register to modify.

ui8Mask is the bit mask that is ANDed with the current register value.

ui8Value is the bit mask that is ORed with the result of the AND operation.

pfnCallback is the function to be called when the data has been changed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function changes the value of a register in the MPU9150 via a read-modify-write operation, allowing one of the fields to be changed without disturbing the other fields. The *ui8Reg* register is read, ANDed with *ui8Mask*, ORed with *ui8Value*, and then written back to the MPU9150.

Returns:

Returns 1 if the read-modify-write was successfully started and 0 if it was not.

16.2.1.12 MPU9150Write

Writes data to MPU9150 registers.

Prototype:

```
uint_fast8_t
MPU9150Write (tMPU9150 *psInst,
              uint_fast8_t ui8Reg,
              const uint8_t *pui8Data,
              uint_fast16_t ui16Count,
              tSensorCallback *pfnCallback,
              void *pvCallbackData)
```

Parameters:

psInst is a pointer to the MPU9150 instance data.

ui8Reg is the first register to write.

pui8Data is a pointer to the data to write.

ui16Count is the number of data bytes to write.

pfnCallback is the function to be called when the data has been written (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function writes a sequence of data values to consecutive registers in the MPU9150. The first byte of the *pui8Data* buffer contains the value to be written into the *ui8Reg* register, the second value contains the data to be written into the next register, and so on.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

16.3 Programming Example

The following example shows how to initialize the MPU9150, select the +/- 4 g range for the accelerometer, and read acceleration, rotation, and magnetic field data from it.

```
//
// A boolean that is set when a MPU9150 command has completed.
//
volatile bool g_bMPU9150Done;

//
// The function that is provided by this example as a callback when MPU9150
// transactions have completed.
//
void
MPU9150Callback(void *pvCallbackData, uint_fast8_t ui8Status)
{
    //
    // See if an error occurred.
    //
    if(ui8Status != I2CM_STATUS_SUCCESS)
    {
        //
        // An error occurred, so handle it here if required.
        //
    }

    //
    // Indicate that the MPU9150 transaction has completed.
    //
    g_bMPU9150Done = true;
}

//
// The MPU9150 example.
//
void
MPU9150Example(void)
{
    float fAccel[3], fGyro[3], fMagneto[3];
    tI2CInstance sI2CInst;
    tMPU9150 sMPU9150;

    //
    // Initialize the MPU9150. This code assumes that the I2C master instance
    // has already been initialized.
    //
    g_bMPU9150Done = false;
    MPU9150Init(&sMPU9150, &sI2CInst, 0x68, MPU9150Callback, 0);
    while(!g_bMPU9150Done)
```

```
{
}

//
// Configure the MPU9150 for +/- 4 g accelerometer range.
//
g_bMPU9150Done = false;
MPU9150ReadModifyWrite(&sMPU9150, MPU9150_O_ACCEL_CONFIG,
                      ~MPU9150_ACCEL_CONFIG_AFS_SEL_M,
                      MPU9150_ACCEL_CONFIG_AFS_SEL_4G, MPU9150Callback,
                      0);
while(!g_bMPU9150Done)
{
}

//
// Loop forever reading data from the MPU9150. Typically, this process
// would be done in the background, but for the purposes of this example,
// it is shown in an infinite loop.
//
while(1)
{
    //
    // Request another reading from the MPU9150.
    //
    g_bMPU9150Done = false;
    MPU9150DataRead(&sMPU9150, MPU9150Callback, 0);
    while(!g_bMPU9150Done)
    {
    }

    //
    // Get the new accelerometer, gyroscope, and magnetometer readings.
    //
    MPU9150DataAccelGetFloat(&sMPU9150, &fAccel[0], &fAccel[1],
                           &fAccel[2]);
    MPU9150DataGyroGetFloat(&sMPU9150, &fGyro[0], &fGyro[1], &fGyro[2]);
    MPU9150DataMagnetoGetFloat(&sMPU9150, &fMagneto[0], &fMagneto[1],
                              &fMagneto[2]);

    //
    // Do something with the new accelerometer, gyroscope, and magnetometer
    // readings.
    //
}
}
```


17 Quaternion Math Module

Introduction	127
API Functions	127
Programming Example	129

17.1 Introduction

The quaternion math module provides a set of functions for performing common math operations on quaternions. Quaternion multiplication, inversion, calculating the magnitude of a quaternion, finding the angles between two quaternions, and generating a quaternion from Euler angles are supported.

For functions that produce new quaternions, the first argument is the output quaternion and the remaining arguments are the inputs. This protocol allows the code to be written similar to how it would be written mathematically. For example:

$$C = A * B$$

Where A, B, and C are quaternions, would be written:

```
QuaternionMult(C, A, B);
```

This module is contained in `sensorlib/quaternion.c`, with `sensorlib/quaternion.h` containing the API declarations for use by applications.

17.2 API Functions

Functions

- float [QuaternionAngle](#) (float pfQIn1[4], float pfQIn2[4])
- void [QuaternionFromEuler](#) (float pfQOut[4], float fRollDeg, float fPitchDeg, float fYawDeg)
- void [QuaternionInverse](#) (float pfQOut[4], float pfQIn[4])
- float [QuaternionMagnitude](#) (float pfQIn[4])
- void [QuaternionMult](#) (float pfQOut[4], float pfQIn1[4], float pfQIn2[4])

17.2.1 Function Documentation

17.2.1.1 QuaternionAngle

Computes the angle between two quaternions

Prototype:

```
float
QuaternionAngle(float pfQIn1[4],
                float pfQIn2[4])
```

Parameters:

pfQIn1 is a source quaternion in W, X, Y, Z form

pfQIn2 is a source quaternion in W, X, Y, Z form

Description:

This function computes the angle between two quaternions.

Returns:

Returns the angle, in radians, between the two quaternions.

17.2.1.2 QuaternionFromEuler

Computes a quaternion from a set of euler angles specified in degrees

Prototype:

```
void
QuaternionFromEuler(float pfQOut[4],
                    float fRollDeg,
                    float fPitchDeg,
                    float fYawDeg)
```

Parameters:

pfQOut is the inverted quaternion in W, X, Y, Z form

fRollDeg is roll in degrees

fPitchDeg is pitch in degrees

fYawDeg is yaw in degrees

Description:

This function computes a quaternion from a set of euler angles specified in degrees

Returns:

Returns a quaternion representing the provided eulers

17.2.1.3 QuaternionInverse

Computes the inverse of a quaternion.

Prototype:

```
void
QuaternionInverse(float pfQOut[4],
                  float pfQIn[4])
```

Parameters:

pfQOut is the inverted quaternion in W, X, Y, Z form

pfQIn is the source quaternion in W, X, Y, Z form

Description:

This function computes the inverse of a quaternion. The inverse of a quaternion produces a rotation opposite to the source quaternion. This can be achieved by simply changing the signs of the imaginary components of a quaternion when the quaternion is a unit quaternion.

Returns:

Returns the inverse of a quaternion.

17.2.1.4 QuaternionMagnitude

Computes the magnitude of a quaternion.

Prototype:

```
float  
QuaternionMagnitude(float pfQIn[4])
```

Parameters:

pfQIn is the source quaternion in W, X, Y, Z form

Description:

This function computes the magnitude of a quaternion by summing the square of each of the quaternion components.

Returns:

Returns the scalar magnitude of the quaternion

17.2.1.5 QuaternionMult

Computes the product of two quaternions.

Prototype:

```
void  
QuaternionMult(float pfQOut[4],  
               float pfQIn1[4],  
               float pfQIn2[4])
```

Parameters:

pfQOut is the product of In1 X In2

pfQIn1 is the source quaternion in W, X, Y, Z form

pfQIn2 is the source quaternion in W, X, Y, Z form

Description:

This function computes the cross product of two quaternions.

Returns:

Returns the cross product of the two quaternions.

17.3 Programming Example

The following example shows how to calculate the angle between two quaternions.

```
void
QuaternionExample(void)
{
    float pfQa[4], pfQb[4];
    float fAngle, fMag;

    //
    // Generate quaternion A from a set of Euler angles
    //
    QuatnerionFromEuler(pfQa, 10.0f, 20.0f, 30.0f);

    //
    // Generate quaternion B from another set of Euler angles
    //
    QuaternionFromEuler(pfQb, 10.0f, 20.0f, 42.0f);

    //
    // QuaternionFromEuler() should return unit quaternions. See if
    // the magnitude is approximately 1.0
    //
    fMag = QuaternionMagnitude(pfQa);

    //
    // Calculate the angle between A and B
    //
    fAngle = QuaternionAngle(pfQa, pfQb);
}
```

18 SHT21 Humidity and Temperature Sensor Driver

Introduction	131
API Functions	131
Programming Example	136

18.1 Introduction

The SHT21 is a humidity and temperature sensor produced by Sensirion. The sensor measures the relative humidity over liquid water. This driver allows the SHT21 to be accessed via the I2C bus.

When initialized, a soft reset of the SHT21 is performed, putting it into its default state. The default humidity measurement resolution of 12 bits and temperature measurement resolution of 14 bits are therefore selected.

This driver is contained in `sensorlib/sht21.c`, with `sensorlib/sht21.h` containing the API declarations for use by applications.

18.2 API Functions

Functions

- void [SHT21DataHumidityGetFloat](#) (tSHT21 *psInst, float *pfHumidity)
- void [SHT21DataHumidityGetRaw](#) (tSHT21 *psInst, uint16_t *pui16Humidity)
- uint_fast8_t [SHT21DataRead](#) (tSHT21 *psInst, tSensorCallback *pfCallback, void *pvCallbackData)
- void [SHT21DataTemperatureGetFloat](#) (tSHT21 *psInst, float *pfTemperature)
- void [SHT21DataTemperatureGetRaw](#) (tSHT21 *psInst, uint16_t *pui16Temperature)
- uint_fast8_t [SHT21Init](#) (tSHT21 *psInst, tI2CInstance *psI2CInst, uint_fast8_t uiI2CAddr, tSensorCallback *pfCallback, void *pvCallbackData)
- uint_fast8_t [SHT21Read](#) (tSHT21 *psInst, uint_fast8_t ui8Reg, uint8_t *pui8Data, uint_fast16_t ui16Count, tSensorCallback *pfCallback, void *pvCallbackData)
- uint_fast8_t [SHT21ReadModifyWrite](#) (tSHT21 *psInst, uint_fast8_t ui8Reg, uint_fast8_t ui8Mask, uint_fast8_t ui8Value, tSensorCallback *pfCallback, void *pvCallbackData)
- uint_fast8_t [SHT21Write](#) (tSHT21 *psInst, uint_fast8_t ui8Reg, const uint8_t *pui8Data, uint_fast16_t ui16Count, tSensorCallback *pfCallback, void *pvCallbackData)

18.2.1 Function Documentation

18.2.1.1 SHT21DataHumidityGetFloat

Returns the relative humidity measurement as a floating point percentage.

Prototype:

```
void  
SHT21DataHumidityGetFloat(tSHT21 *psInst,  
                           float *pfHumidity)
```

Parameters:

psInst pointer to the SHT21 instance data.

pfHumidity is a pointer to the value into which the humidity data is stored.

Description:

This function converts the raw humidity measurement to floating-point-percentage relative humidity over water. For more information on the conversion algorithm see the SHT21 datasheet section 6.1.

Returns:

None.

18.2.1.2 SHT21DataHumidityGetRaw

Returns the raw humidity measurement from the SHT21.

Prototype:

```
void  
SHT21DataHumidityGetRaw(tSHT21 *psInst,  
                        uint16_t *pui16Humidity)
```

Parameters:

psInst is a pointer to the SHT21 instance data.

pui16Humidity is a pointer to the value into which the raw humidity data is stored.

Description:

This function returns the raw humidity data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

18.2.1.3 SHT21DataRead

Reads the temperature and humidity data from the SHT21.

Prototype:

```
uint_fast8_t  
SHT21DataRead(tSHT21 *psInst,  
              tSensorCallback *pfCallback,  
              void *pvCallbackData)
```

Parameters:

psInst is a pointer to the SHT21 instance data

pfCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a read of the SHT21 data registers. The user must first initiate a measurement by using the [SHT21Write\(\)](#) function configured to write the command for a humidity or temperature measurement. In the case of a measurement with I2C bus hold, this function is not needed. When the read has completed (as indicated by callback function), the new readings can be obtained via:

- [SHT21DataTemperatureGetRaw\(\)](#)
- [SHT21DataTemperatureGetFloat\(\)](#)
- [SHT21DataHumidityGetRaw\(\)](#)
- [SHT21DataHumidityGetFloat\(\)](#)

Returns:

Returns 1 if the read was successfully started and 0 if it was not.

18.2.1.4 SHT21DataTemperatureGetFloat

Returns the most recent temperature measurement in floating point degrees Celsius.

Prototype:

```
void  
SHT21DataTemperatureGetFloat (tSHT21 *psInst,  
                             float *pfTemperature)
```

Parameters:

psInst is a pointer to the SHT21 instance data.

pfTemperature is a pointer to the value into which the temperature data is stored.

Description:

This function converts the raw temperature measurement data into floating point degrees Celsius and returns the result. See the SHT21 datasheet section 6.2 for more information about the conversion formula used.

Returns:

None.

18.2.1.5 SHT21DataTemperatureGetRaw

Returns the raw temperature measurement as received from the SHT21.

Prototype:

```
void  
SHT21DataTemperatureGetRaw (tSHT21 *psInst,  
                           uint16_t *pui16Temperature)
```

Parameters:

psInst is a pointer to the SHT21 instance data.

pui16Temperature is a pointer to the value into which the raw temperature data is stored.

Description:

This function returns the raw temperature data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

18.2.1.6 SHT21Init

Initializes the SHT21 driver.

Prototype:

```
uint_fast8_t
SHT21Init(tSHT21 *psInst,
          tI2CInstance *psI2CInst,
          uint_fast8_t ui8I2CAddr,
          tSensorCallback *pfnCallback,
          void *pvCallbackData)
```

Parameters:

psInst is a pointer to the SHT21 instance data.

psI2CInst is a pointer to the I2C driver instance data.

ui8I2CAddr is the I2C address of the SHT21 device.

pfnCallback is the function to be called when the initialization has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initializes the SHT21 driver, preparing it for operation, and initiates a reset of the SHT21 device, clearing any previous configuration data.

Returns:

Returns 1 if the SHT21 driver was successfully initialized and 0 if it was not.

18.2.1.7 SHT21Read

Reads data from SHT21 registers.

Prototype:

```
uint_fast8_t
SHT21Read(tSHT21 *psInst,
          uint_fast8_t ui8Reg,
          uint8_t *pui8Data,
          uint_fast16_t ui16Count,
          tSensorCallback *pfnCallback,
          void *pvCallbackData)
```

Parameters:

psInst is a pointer to the SHT21 instance data.

ui8Reg is the first register to read.

pui8Data is a pointer to the location to store the data that is read.

ui16Count the number of data bytes to read.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData pointer that is passed to the callback function.

Description:

This function reads a sequence of data values from consecutive registers in the SHT21.

Returns:

Returns 1 if the read was successfully started and 0 if it was not.

18.2.1.8 SHT21ReadModifyWrite

Performs a read-modify-write of a SHT21 register.

Prototype:

```
uint_fast8_t
SHT21ReadModifyWrite(tSHT21 *psInst,
                     uint_fast8_t ui8Reg,
                     uint_fast8_t ui8Mask,
                     uint_fast8_t ui8Value,
                     tSensorCallback *pfnCallback,
                     void *pvCallbackData)
```

Parameters:

psInst is a pointer to the SHT21 instance data.

ui8Reg is the register to modify.

ui8Mask is the bit mask that is ANDed with the current register value.

ui8Value is the bit mask that is ORed with the result of the AND operation.

pfnCallback is the function to be called when the data has been changed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function changes the value of a register in the SHT21 via a read-modify-write operation, allowing one of the fields to be changed without disturbing the other fields. The *ui8Reg* register is read, ANDed with *ui8Mask*, ORed with *ui8Value*, and then written back to the SHT21.

Returns:

Returns 1 if the read-modify-write was successfully started and 0 if it was not.

18.2.1.9 SHT21Write

Writes data to SHT21 registers.

Prototype:

```
uint_fast8_t
SHT21Write(tSHT21 *psInst,
```

```
uint_fast8_t ui8Reg,  
const uint8_t *pui8Data,  
uint_fast16_t ui16Count,  
tSensorCallback *pfnCallback,  
void *pvCallbackData)
```

Parameters:

psInst is a pointer to the SHT21 instance data.

ui8Reg is the register offset to be written.

pui8Data is the data buffer bytes to write.

ui16Count is the number of bytes to write.

pfnCallback is the function to be called when the data has been written (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function writes a sequence of data values to consecutive registers in the SHT21. The first byte of the *pui8Data* buffer contains the value to be written into the *ui8Reg* register, the second value contains the data to be written into the next register, and so on.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

18.3 Programming Example

The following example shows how to initialize the SHT21, configure the measurement resolution to 11 bits for both relative humidity and temperature, and read relative humidity and temperature data from it.

```
//  
// A boolean that is set when a SHT21 command has completed.  
//  
volatile bool g_bSHT21Done;  
  
//  
// The function that is provided by this example as a callback when SHT21  
// transactions have completed.  
//  
void  
SHT21Callback(void *pvCallbackData, uint_fast8_t ui8Status)  
{  
    //  
    // See if an error occurred.  
    //  
    if(ui8Status != I2CM_STATUS_SUCCESS)  
    {  
        //  
        // An error occurred, so handle it here if required.  
        //  
    }  
  
    //  
    // Indicate that the SHT21 transaction has completed.  
    //  
    g_bSHT21Done = true;
```



```
}

//
// The SHT21 example.
//
void
SHT21Example(void)
{
    float fHumidity, fTemperature;
    tI2CInstance sI2CInst;
    tSHT21 sSHT21;

    //
    // Initialize the SHT21. This code assumes that the I2C master instance
    // has already been initialized.
    //
    g_bSHT21Done = false;
    SHT21Init(&sSHT21, &sI2CInst, 0x40, SHT21Callback, 0);
    while(!g_bSHT21Done)
    {
    }

    //
    // Configure the SHT21 for 11 bits sampling size for relative humidity and
    // temperature.
    //
    g_bSHT21Done = false;
    SHT21ReadModifyWrite(&sSHT21, SHT21_CMD_WRITE_CONFIG, 0,
        (SHT21_CONFIG_RES_11 |
         SHT21_CONFIG_OTP_RELOAD_DISABLE), SHT21Callback, 0);
    while(!g_bSHT21Done)
    {
    }

    //
    // Loop forever reading data from the SHT21. Typically, this process would
    // be done in the background, but for the purposes of this example, it is
    // shown in an infinite loop.
    //
    while(1)
    {
        //
        // Request another reading from the SHT21.
        //
        g_bSHT21Done = false;
        SHT21DataRead(&sSHT21, SHT21Callback, 0);
        while(!g_bSHT21Done)
        {
        }

        //
        // Get the new relative humidity and temperature reading.
        //
        SHT21DataHumidityGetFloat(&sSHT21, &fHumidity);
        SHT21DataTemperatureGetFloat(&sSHT21, &fTemperature);

        //
        // Do something with the new relative humidity and temperature reading.
        //
    }
}
```


19 TMP006 Temperature Sensor Driver

Introduction	139
API Functions	139
Programming Example	143

19.1 Introduction

The TMP006 is an infrared thermopile temperature sensor produced by Texas Instruments Incorporated. This driver allows the TMP006 to be accessed via the I2C bus.

When initialized, a soft reset of the TMP006 is performed, putting it into its default state. The default conversion rate of one sample per second is therefore selected.

This driver is contained in `sensorlib/tmp006.c`, with `sensorlib/tmp006.h` containing the API declarations for use by applications.

19.2 API Functions

Functions

- `uint_fast8_t TMP006DataRead` (`tTMP006 *psInst`, `tSensorCallback *pfnCallback`, `void *pvCallbackData`)
- `void TMP006DataTemperatureGetFloat` (`tTMP006 *psInst`, `float *pfAmbient`, `float *pfObject`)
- `void TMP006DataTemperatureGetRaw` (`tTMP006 *psInst`, `int16_t *pi16Ambient`, `int16_t *pi16Object`)
- `uint_fast8_t TMP006Init` (`tTMP006 *psInst`, `ti2CMIInstance *psl2CInst`, `uint_fast8_t ui8I2CAddr`, `tSensorCallback *pfnCallback`, `void *pvCallbackData`)
- `uint_fast8_t TMP006Read` (`tTMP006 *psInst`, `uint_fast8_t ui8Reg`, `uint16_t *pui16Data`, `uint_fast16_t ui16Count`, `tSensorCallback *pfnCallback`, `void *pvCallbackData`)
- `uint_fast8_t TMP006ReadModifyWrite` (`tTMP006 *psInst`, `uint_fast8_t ui8Reg`, `uint_fast16_t ui16Mask`, `uint_fast16_t ui16Value`, `tSensorCallback *pfnCallback`, `void *pvCallbackData`)
- `uint_fast8_t TMP006Write` (`tTMP006 *psInst`, `uint_fast8_t ui8Reg`, `const uint16_t *pui16Data`, `uint_fast16_t ui16Count`, `tSensorCallback *pfnCallback`, `void *pvCallbackData`)

19.2.1 Function Documentation

19.2.1.1 TMP006DataRead

Reads the temperature data from the TMP006.

Prototype:

```
uint_fast8_t
TMP006DataRead(tTMP006 *psInst,
               tSensorCallback *pfnCallback,
               void *pvCallbackData)
```

Parameters:

psInst is a pointer to the TMP006 instance data.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a read of the TMP006 data registers. When the read has completed (as indicated by calling the callback function), the new readings can be obtained via:

- [TMP006DataTemperatureGetRaw\(\)](#)
- [TMP006DataTemperatureGetFloat\(\)](#)

Returns:

Returns 1 if the read was successfully started and 0 if it was not.

19.2.1.2 TMP006DataTemperatureGetFloat

Gets the measurement data from the most recent data read.

Prototype:

```
void  
TMP006DataTemperatureGetFloat (tTMP006 *psInst,  
                                float *pfAmbient,  
                                float *pfObject)
```

Parameters:

psInst is a pointer to the TMP006 instance data.

pfAmbient is a pointer to the value into which the ambient temperature data is stored as floating point degrees Celsius.

pfObject is a pointer to the value into which the object temperature data is stored as floating point degrees Celsius.

Description:

This function returns the temperature data from the most recent data read, converted into Celsius.

Returns:

None.

19.2.1.3 TMP006DataTemperatureGetRaw

Gets the raw measurement data from the most recent data read.

Prototype:

```
void  
TMP006DataTemperatureGetRaw (tTMP006 *psInst,  
                              int16_t *pi16Ambient,  
                              int16_t *pi16Object)
```

Parameters:

psInst is a pointer to the TMP006 instance data.

pi16Ambient is a pointer to the value into which the raw ambient temperature data is stored.

pi16Object is a pointer to the value into which the raw object temperature data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

19.2.1.4 TMP006Init

Initializes the TMP006 driver.

Prototype:

```
uint_fast8_t
TMP006Init(tTMP006 *psInst,
           tI2CInstance *psI2CInst,
           uint_fast8_t ui8I2CAddr,
           tSensorCallback *pfnCallback,
           void *pvCallbackData)
```

Parameters:

psInst is a pointer to the TMP006 instance data.

psI2CInst is a pointer to the I2C driver instance data.

ui8I2CAddr is the I2C address of the TMP006 device.

pfnCallback is the function to be called when the initialization has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initializes the TMP006 driver, preparing it for operation, and initiates a reset of the TMP006 device, clearing any previous configuration data.

Returns:

Returns 1 if the TMP006 driver was successfully initialized and 0 if it was not.

19.2.1.5 TMP006Read

Reads data from TMP006 registers.

Prototype:

```
uint_fast8_t
TMP006Read(tTMP006 *psInst,
           uint_fast8_t ui8Reg,
           uint16_t *pui16Data,
           uint_fast16_t ui16Count,
           tSensorCallback *pfnCallback,
           void *pvCallbackData)
```

Parameters:

psInst is a pointer to the TMP006 instance data.

ui8Reg is the first register to read.

pui16Data is a pointer to the location to store the data that is read.

ui16Count the number of register values to read.

pfnCallback is the function to be called when data read is complete (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function reads a sequence of data values from consecutive registers in the TMP006.

Note:

The TMP006 does not auto-increment the register pointer, so reads of more than one value returns garbage for the subsequent values.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

19.2.1.6 TMP006ReadModifyWrite

Performs a read-modify-write of a TMP006 register.

Prototype:

```
uint_fast8_t
TMP006ReadModifyWrite(tTMP006 *psInst,
                      uint_fast8_t ui8Reg,
                      uint_fast16_t ui16Mask,
                      uint_fast16_t ui16Value,
                      tSensorCallback *pfnCallback,
                      void *pvCallbackData)
```

Parameters:

psInst is a pointer to the TMP006 instance data.

ui8Reg is the register offset to read modify and write

ui16Mask is the bit mask that is ANDed with the current register value.

ui16Value is the bit mask that is ORed with the result of the AND operation.

pfnCallback is the function to be called when the data has been changed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function changes the value of a register in the TMP006 via a read-modify-write operation, allowing one of the fields to be changed without disturbing the other fields. The **ui8Reg** register is read, ANDed with **ui16Mask**, ORed with **ui16Value**, and then written back to the TMP006.

Returns:

Returns 1 if the read-modify-write was successfully started and 0 if it was not.

19.2.1.7 TMP006Write

Writes data to TMP006 registers.

Prototype:

```
uint_fast8_t
TMP006Write(tTMP006 *psInst,
            uint_fast8_t ui8Reg,
            const uint16_t *pui16Data,
            uint_fast16_t ui16Count,
            tSensorCallback *pfnCallback,
            void *pvCallbackData)
```

Parameters:

psInst is a pointer to the TMP006 instance data.

ui8Reg is the first register to write.

pui16Data is a pointer to the 16-bit register data to write.

ui16Count is the number of 16-bit registers to write.

pfnCallback is the function to be called when the data has been written (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function writes a sequence of data values to consecutive registers in the TMP006. The first value in the *pui16Data* buffer contains the data to be written into the *ui8Reg* register, the second value contains the data to be written into the next register, and so on.

Note:

The TMP006 does not auto-increment the register pointer, so writes of more than one register are rejected by the TMP006.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

19.3 Programming Example

The following example shows how to initialize the TMP006, select two samples per second conversion rate, and read temperature data from it.

```
//
// A boolean that is set when a TMP006 command has completed.
//
volatile bool g_bTMP006Done;

//
// The function that is provided by this example as a callback when TMP006
// transactions have completed.
//
void
TMP006Callback(void *pvCallbackData, uint_fast8_t ui8Status)
{
    //
    // See if an error occurred.
```

```
//
if(ui8Status != I2CM_STATUS_SUCCESS)
{
    //
    // An error occurred, so handle it here if required.
    //
}

//
// Indicate that the TMP006 transaction has completed.
//
g_bTMP006Done = true;
}

//
// The TMP006 example.
//
void
TMP006Example(void)
{
    float fAmbient, fObject;
    tI2CMInstance sI2CInst;
    tTMP006 sTMP006;

    //
    // Initialize the TMP006. This code assumes that the I2C master instance
    // has already been initialized.
    //
    g_bTMP006Done = false;
    TMP006Init(&sTMP006, &sI2CInst, 0x41, TMP006Callback, 0);
    while(!g_bTMP006Done)
    {
    }

    //
    // Configure the TMP006 for two samples per second conversion rate.
    //
    g_bTMP006Done = false;
    TMP006ReadModifyWrite(&sTMP006, TMP006_O_CONFIG, ~TMP006_CONFIG_CR_M,
                          TMP006_CONFIG_CR_2, TMP006Callback, 0);
    while(!g_bTMP006Done)
    {
    }

    //
    // Loop forever reading data from the TMP006. Typically, this process
    // would be done in the background, but for the purposes of this example it
    // is shown in an infinite loop.
    //
    while(1)
    {
        //
        // Request another reading from the TMP006.
        //
        g_bTMP006Done = false;
        TMP006DataRead(&sTMP006, TMP006Callback, 0);
        while(!g_bTMP006Done)
        {
        }

        //
        // Get the new temperature reading.
        //
        TMP006DataTemperatureGetFloat(&sTMP006, &fAmbient, &fObject);

        //
    }
}
```



```
        // Do something with the new temperature reading.  
        //  
    }  
}
```


20 TMP100 Temperature Sensor Driver

Introduction	147
API Functions	147
Programming Example	151

20.1 Introduction

The TMP100 is a digital temperature sensor produced by Texas Instruments Incorporated. This driver allows the TMP100 to be accessed via the I2C bus.

When initialized, the configuration register of the TMP100 is written to its default value, putting it into its default state.

This driver is contained in `sensorlib/tmp100.c`, with `sensorlib/tmp100.h` containing the API declarations for use by applications.

20.2 API Functions

Functions

- `uint_fast8_t TMP100DataRead` (`tTMP100 *psInst`, `tSensorCallback *pfnCallback`, `void *pvCallbackData`)
- `void TMP100DataTemperatureGetFloat` (`tTMP100 *psInst`, `float *pfTemperature`)
- `void TMP100DataTemperatureGetRaw` (`tTMP100 *psInst`, `int16_t *pi16Temperature`)
- `uint_fast8_t TMP100Init` (`tTMP100 *psInst`, `ti2CMIInstance *psI2CInst`, `uint_fast8_t ui8I2CAddr`, `tSensorCallback *pfnCallback`, `void *pvCallbackData`)
- `uint_fast8_t TMP100Read` (`tTMP100 *psInst`, `uint_fast8_t ui8Reg`, `uint16_t *pui16Data`, `uint_fast16_t ui16Count`, `tSensorCallback *pfnCallback`, `void *pvCallbackData`)
- `uint_fast8_t TMP100ReadModifyWrite` (`tTMP100 *psInst`, `uint_fast8_t ui8Reg`, `uint_fast16_t ui16Mask`, `uint_fast16_t ui16Value`, `tSensorCallback *pfnCallback`, `void *pvCallbackData`)
- `uint_fast8_t TMP100Write` (`tTMP100 *psInst`, `uint_fast8_t ui8Reg`, `const uint16_t *pui16Data`, `uint_fast16_t ui16Count`, `tSensorCallback *pfnCallback`, `void *pvCallbackData`)

20.2.1 Function Documentation

20.2.1.1 TMP100DataRead

Reads the temperature data from the TMP100.

Prototype:

```
uint_fast8_t
TMP100DataRead(tTMP100 *psInst,
               tSensorCallback *pfnCallback,
               void *pvCallbackData)
```

Parameters:

psInst is a pointer to the TMP100 instance data.

pfnCallback is the function to be called when the data has been read (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initiates a read of the TMP100 data registers. When the read has completed (as indicated by calling the callback function), the new readings can be obtained via:

- [TMP100DataTemperatureGetRaw\(\)](#)
- [TMP100DataTemperatureGetFloat\(\)](#)

Returns:

Returns 1 if the read was successfully started and 0 if it was not.

20.2.1.2 TMP100DataTemperatureGetFloat

Gets the measurement data from the most recent data read.

Prototype:

```
void  
TMP100DataTemperatureGetFloat (tTMP100 *psInst,  
                                float *pfTemperature)
```

Parameters:

psInst is a pointer to the TMP100 instance data.

pfTemperature is a pointer to the value into which the temperature data is stored as floating point degrees Celsius.

Description:

This function returns the temperature data from the most recent data read, converted into Celsius.

Returns:

None.

20.2.1.3 TMP100DataTemperatureGetRaw

Gets the raw measurement data from the most recent data read.

Prototype:

```
void  
TMP100DataTemperatureGetRaw (tTMP100 *psInst,  
                              int16_t *pi16Temperature)
```

Parameters:

psInst is a pointer to the TMP100 instance data.

pi16Temperature is a pointer to the value into which the raw temperature data is stored.

Description:

This function returns the raw measurement data from the most recent data read. The data is not manipulated in any way by the driver.

Returns:

None.

20.2.1.4 TMP100Init

Initializes the TMP100 driver.

Prototype:

```
uint_fast8_t
TMP100Init(tTMP100 *psInst,
           tI2CInstance *psI2CInst,
           uint_fast8_t ui8I2CAddr,
           tSensorCallback *pfnCallback,
           void *pvCallbackData)
```

Parameters:

psInst is a pointer to the TMP100 instance data.

psI2CInst is a pointer to the I2C driver instance data.

ui8I2CAddr is the I2C address of the TMP100 device.

pfnCallback is the function to be called when the initialization has completed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function initializes the TMP100 driver, preparing it for operation, and initiates a reset of the TMP100 device, clearing any previous configuration data.

Returns:

Returns 1 if the TMP100 driver was successfully initialized and 0 if it was not.

20.2.1.5 TMP100Read

Reads data from TMP100 registers.

Prototype:

```
uint_fast8_t
TMP100Read(tTMP100 *psInst,
           uint_fast8_t ui8Reg,
           uint16_t *pui16Data,
           uint_fast16_t ui16Count,
           tSensorCallback *pfnCallback,
           void *pvCallbackData)
```

Parameters:

psInst is a pointer to the TMP100 instance data.

ui8Reg is the first register to read.

pui16Data is a pointer to the location to store the data that is read.

ui16Count the number of register values to read.

pfnCallback is the function to be called when data read is complete (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function reads a sequence of data values from consecutive registers in the TMP100.

Note:

The TMP100 does not auto-increment the register pointer, so reads of more than one value returns garbage for the subsequent values.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

20.2.1.6 TMP100ReadModifyWrite

Performs a read-modify-write of a TMP100 register.

Prototype:

```
uint_fast8_t
TMP100ReadModifyWrite(tTMP100 *psInst,
                      uint_fast8_t ui8Reg,
                      uint_fast16_t ui16Mask,
                      uint_fast16_t ui16Value,
                      tSensorCallback *pfnCallback,
                      void *pvCallbackData)
```

Parameters:

psInst is a pointer to the TMP100 instance data.

ui8Reg is the register offset to read modify and write

ui16Mask is the bit mask that is ANDed with the current register value.

ui16Value is the bit mask that is ORed with the result of the AND operation.

pfnCallback is the function to be called when the data has been changed (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function changes the value of a register in the TMP100 via a read-modify-write operation, allowing one of the fields to be changed without disturbing the other fields. The *ui8Reg* register is read, ANDed with *ui16Mask*, ORed with *ui16Value*, and then written back to the TMP100.

Returns:

Returns 1 if the read-modify-write was successfully started and 0 if it was not.

20.2.1.7 TMP100Write

Writes data to TMP100 registers.

Prototype:

```
uint_fast8_t
TMP100Write(tTMP100 *psInst,
            uint_fast8_t ui8Reg,
            const uint16_t *pui16Data,
            uint_fast16_t ui16Count,
            tSensorCallback *pfnCallback,
            void *pvCallbackData)
```

Parameters:

psInst is a pointer to the TMP100 instance data.

ui8Reg is the first register to write.

pui16Data is a pointer to the 16-bit register data to write.

ui16Count is the number of 16-bit registers to write.

pfnCallback is the function to be called when the data has been written (can be **NULL** if a callback is not required).

pvCallbackData is a pointer that is passed to the callback function.

Description:

This function writes a sequence of data values to consecutive registers in the TMP100. The first value in the *pui16Data* buffer contains the data to be written into the *ui8Reg* register, the second value contains the data to be written into the next register, and so on.

Note:

The TMP100 does not auto-increment the register pointer, so writes of more than one register are rejected by the TMP100.

Returns:

Returns 1 if the write was successfully started and 0 if it was not.

20.3 Programming Example

The following example shows how to initialize the TMP100, select 12-bit resolution, and read temperature data from it.

```
//
// A boolean that is set when a TMP100 command has completed.
//
volatile bool g_bTMP100Done;

//
// The function that is provided by this example as a callback when TMP100
// transactions have completed.
//
void
TMP100Callback(void *pvCallbackData, uint_fast8_t ui8Status)
{
    //
    // See if an error occurred.
    //
    if(ui8Status != I2CM_STATUS_SUCCESS)
    {
        //
        // An error occurred, so handle it here if required.
    }
}
```

```

        //
    }

    //
    // Indicate that the TMP100 transaction has completed.
    //
    g_bTMP100Done = true;
}

//
// The TMP100 example.
//
void
TMP100Example(void)
{
    tI2CInstance sI2CInst;
    float fTemperature;
    tTMP100 sTMP100;

    //
    // Initialize the TMP100. This code assumes that the I2C master instance
    // has already been initialized.
    //
    g_bTMP100Done = false;
    TMP100Init(&sTMP100, &sI2CInst, 0x4a, TMP100Callback, 0);
    while(!g_bTMP100Done)
    {
    }

    //
    // Configure the TMP100 for 12-bit conversion resolution.
    //
    g_bTMP100Done = false;
    TMP100ReadModifyWrite(&sTMP100, TMP100_O_CONFIG, ~TMP100_CONFIG_RES_M,
                          TMP100_CONFIG_RES_12BIT, TMP100Callback, 0);
    while(!g_bTMP100Done)
    {
    }

    //
    // Loop forever reading data from the TMP100. Typically, this process
    // would be done in the background, but for the purposes of this example it
    // is shown in an infinite loop.
    //
    while(1)
    {
        //
        // Request another reading from the TMP100.
        //
        g_bTMP100Done = false;
        TMP100DataRead(&sTMP100, TMP100Callback, 0);
        while(!g_bTMP100Done)
        {
        }

        //
        // Get the new temperature reading.
        //
        TMP100DataTemperatureGetFloat(&sTMP100, &fTemperature);

        //
        // Do something with the new temperature reading.
        //
    }
}

```


21 Vector Math Module

Introduction	153
API Functions	153
Programming Example	155

21.1 Introduction

The vector math module provides a set of functions for performing common math operations on three-dimensional vectors. Vector addition, scaling, dot products, and cross products are supported. Vector operations can be combined to perform other useful vector operations; for example, the square root of the dot product of a vector with itself computes the vector magnitude, and scaling a vector by that the inverse of that magnitude converts the vector into a unit vector.

For functions that produce new vectors, the first argument is the output vector and the remaining arguments are the inputs. This protocol allows the code to be written similar to how it would be written mathematically. For example:

$$C = A + B$$

Where A, B, and C are vectors, would be written:

```
VectorAdd(C, A, B);
```

This module is contained in `sensorlib/vector.c`, with `sensorlib/vector.h` containing the API declarations for use by applications.

21.2 API Functions

Functions

- void [VectorAdd](#) (float pfVectorOut[3], float pfVectorIn1[3], float pfVectorIn2[3])
- void [VectorCrossProduct](#) (float pfVectorOut[3], float pfVectorIn1[3], float pfVectorIn2[3])
- float [VectorDotProduct](#) (float pfVectorIn1[3], float pfVectorIn2[3])
- void [VectorScale](#) (float pfVectorOut[3], float pfVectorIn[3], float fScale)

21.2.1 Function Documentation

21.2.1.1 VectorAdd

Adds two vectors.

Prototype:

```
void
VectorAdd(float pfVectorOut[3],
```

```
float pfVectorIn1[3],  
float pfVectorIn2[3])
```

Parameters:

pfVectorOut is the output vector.

pfVectorIn1 is the first vector.

pfVectorIn2 is the second vector.

Description:

This function adds two 3-dimensional vectors.

Returns:

None.

21.2.1.2 VectorCrossProduct

Computes the cross product of two vectors.

Prototype:

```
void  
VectorCrossProduct(float pfVectorOut[3],  
                   float pfVectorIn1[3],  
                   float pfVectorIn2[3])
```

Parameters:

pfVectorOut is the output vector.

pfVectorIn1 is the first vector.

pfVectorIn2 is the second vector.

Description:

This function computes the cross product of two 3-dimensional vectors.

Returns:

None.

21.2.1.3 VectorDotProduct

Computes the dot product of two vectors.

Prototype:

```
float  
VectorDotProduct(float pfVectorIn1[3],  
                 float pfVectorIn2[3])
```

Parameters:

pfVectorIn1 is the first vector.

pfVectorIn2 is the second vector.

Description:

This function computes the dot product of two 3-dimensional vector.

Returns:

Returns the dot product of the two vectors.

21.2.1.4 VectorScale

Scales a vector.

Prototype:

```
void
VectorScale(float pfVectorOut[3],
            float pfVectorIn[3],
            float fScale)
```

Parameters:

pfVectorOut is the output vector.

pfVectorIn is the input vector.

fScale is the scale factor.

Description:

This function scales a 3-dimensional vector by multiplying each of its components by the scale factor.

Returns:

None.

21.3 Programming Example

The following example shows how to manipulate vectors.

```
void
VectorExample(void)
{
    float pfA[3], pfB[3], pfC[3];

    //
    // Add A and B, placing the result into C.
    //
    VectorAdd(pfC, pfA, pfB);

    //
    // Scale C by 0.5.
    //
    VectorScale(pfC, pfC, 0.5);

    //
    // Compute the cross product of A and B, placing the result into C.
    //
    VectorCrossProduct(pfC, pfA, pfB);

    //
    // Use the dot product of C with itself to normalize C.
    //
    VectorScale(pfC, pfC, 1.0 / sqrtf(VectorDotProduct(pfC, pfC)));
}
```

IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to TI's Terms of Sale (www.ti.com/legal/termsofsale.html) or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2020, Texas Instruments Incorporated